330GJ-01

# OVERHAUL

HINT:


COMPONENTS: See page 71–6, 72–9, 72–16

1. PRECAUTION (W/ SIDE AIRBAG) (SEE PAGE 60–1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)
3. REMOVE INSTRUMENT PANEL FINISH PANEL SUB–ASSY LOWER (SEE PAGE 71–9)
4. REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY CENTER (SEE PAGE 71–9)
5. REMOVE FLOOR CARPET COVER CENTER RH (SEE PAGE 71–9)
6. REMOVE FLOOR CARPET COVER CENTER LH (SEE PAGE 71–9)
7. REMOVE FRONT SEAT ASSEMBLY RH (SEE PAGE 72–10, 72–17)
8. REMOVE FRONT SEAT ASSEMBLY LH
9. REMOVE CONSOLE BOX ASSY (SEE PAGE 71–9)

10. **REMOVE PARKING BRAKE CONTROL PEDAL ASSY**


(a) Release the parking brake pedal.

(b) Remove the 2 bolts and nuts, and separate the parking brake cable assy No.1 from the floor.

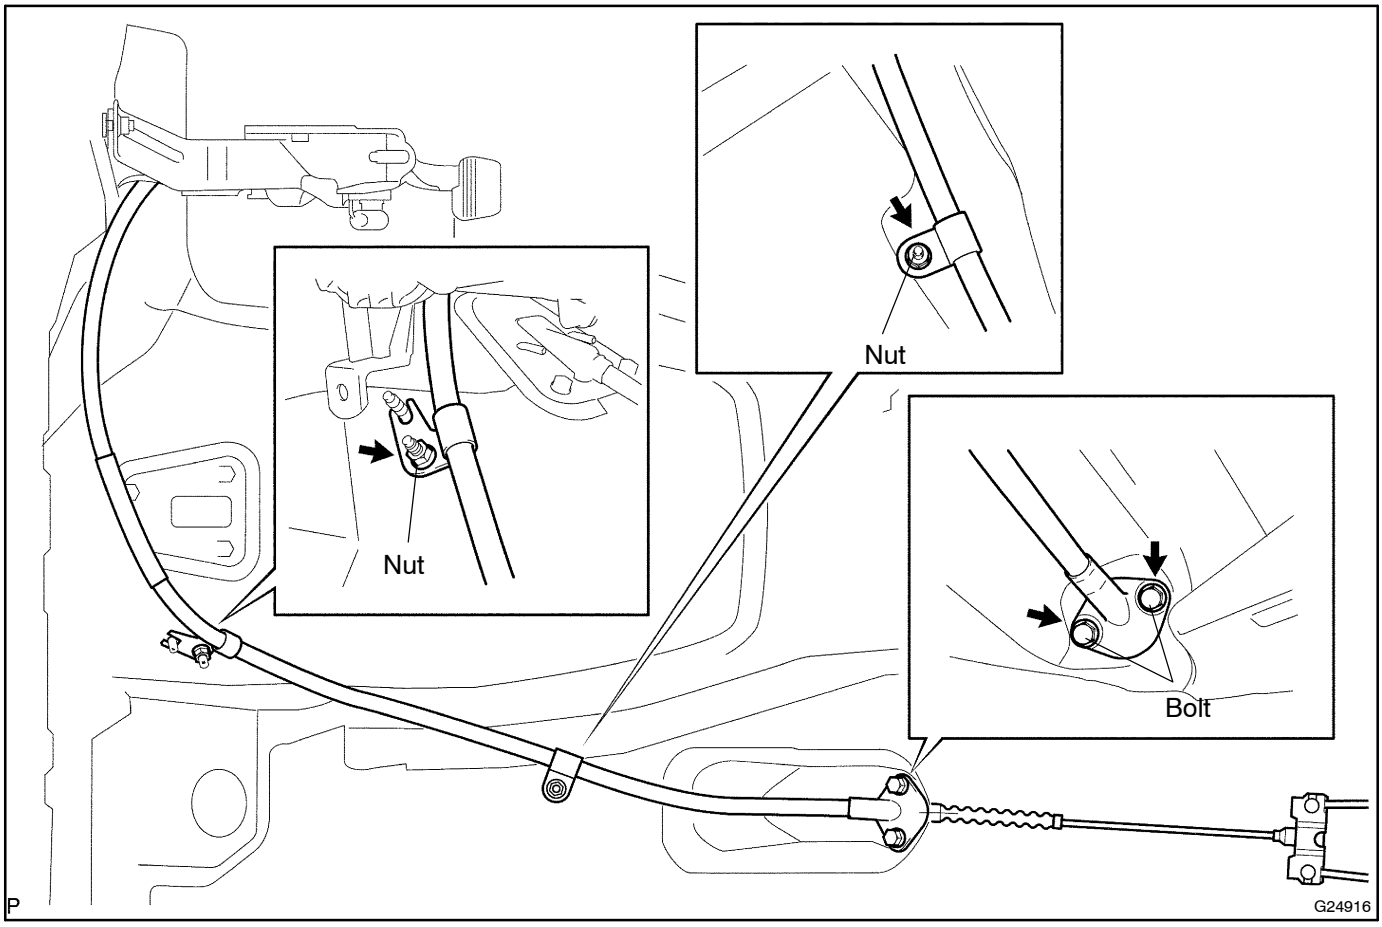


(c) Remove the parking brake cable assy No.1 from the parking brake equalizer.

(d) Disconnect the parking brake switch connector.

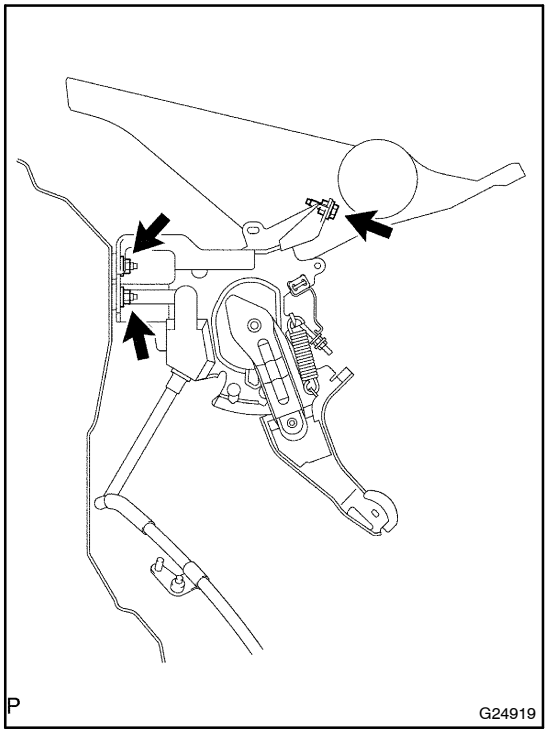


(e) Remove the 2 nuts, bolt and parking brake control pedal assy.

**11. REMOVE PARKING BRAKE CABLE ASSY NO.1 (SEE PAGE 33–10)**

**12. REMOVE PARKING BRAKE SWITCH ASSY**

(a) Remove the screw and parking brake switch assy.

**13. REMOVE PARKING PEDAL PAD**

(a) Remove the parking pedal pad.


**14. INSTALL PARKING PEDAL PAD**

(a) Install the parking pedal pad.

**15. INSTALL PARKING BRAKE SWITCH ASSY**

(a) Install the parking brake switch assy with the screw.

**16. INSTALL PARKING BRAKE CABLE ASSY NO.1 (SEE PAGE 33–10)**

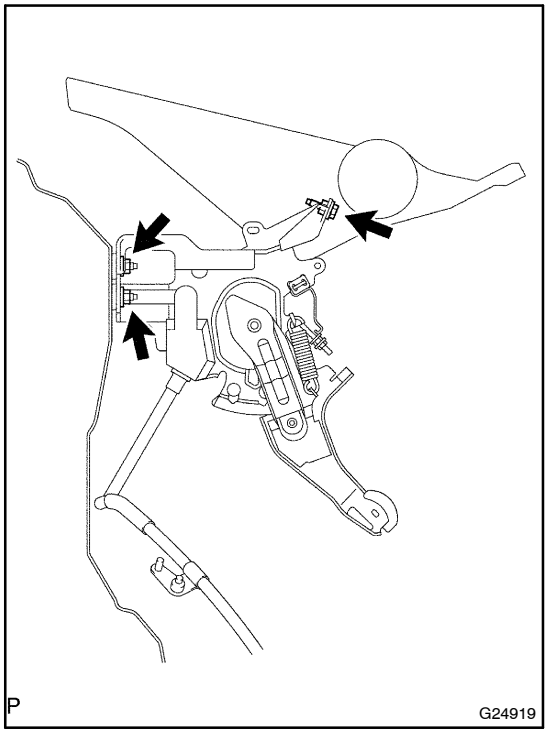


**17. INSTALL PARKING BRAKE CONTROL PEDAL ASSY**

(a) Install the parking brake control pedal assy with the 2 nuts and bolt.


**Torque:**
**Bolt: 24 N·m (245 kgf·cm, 18 ft·lbf)**
**Nut: 21 N·m (214 kgf·cm, 15 ft·lbf)**

(b) Connect the parking brake switch connector.

(c) Attach the parking brake cable assy No.1 to the parking brake equalizer and slide the boot stopper of cable assy No.1. The boot stopper should be inserted into the groove of the T–Metal fitting.

(d) Install the parking brake cable assy No.1 with the 2 bolts and 2 nuts.

**Torque:**
**Bolt: 8.5 N·m (87 kgf·cm, 75 in.·lbf)**
**Nut: 6.0 N·m (61 kgf·cm, 53 in.·lbf)**

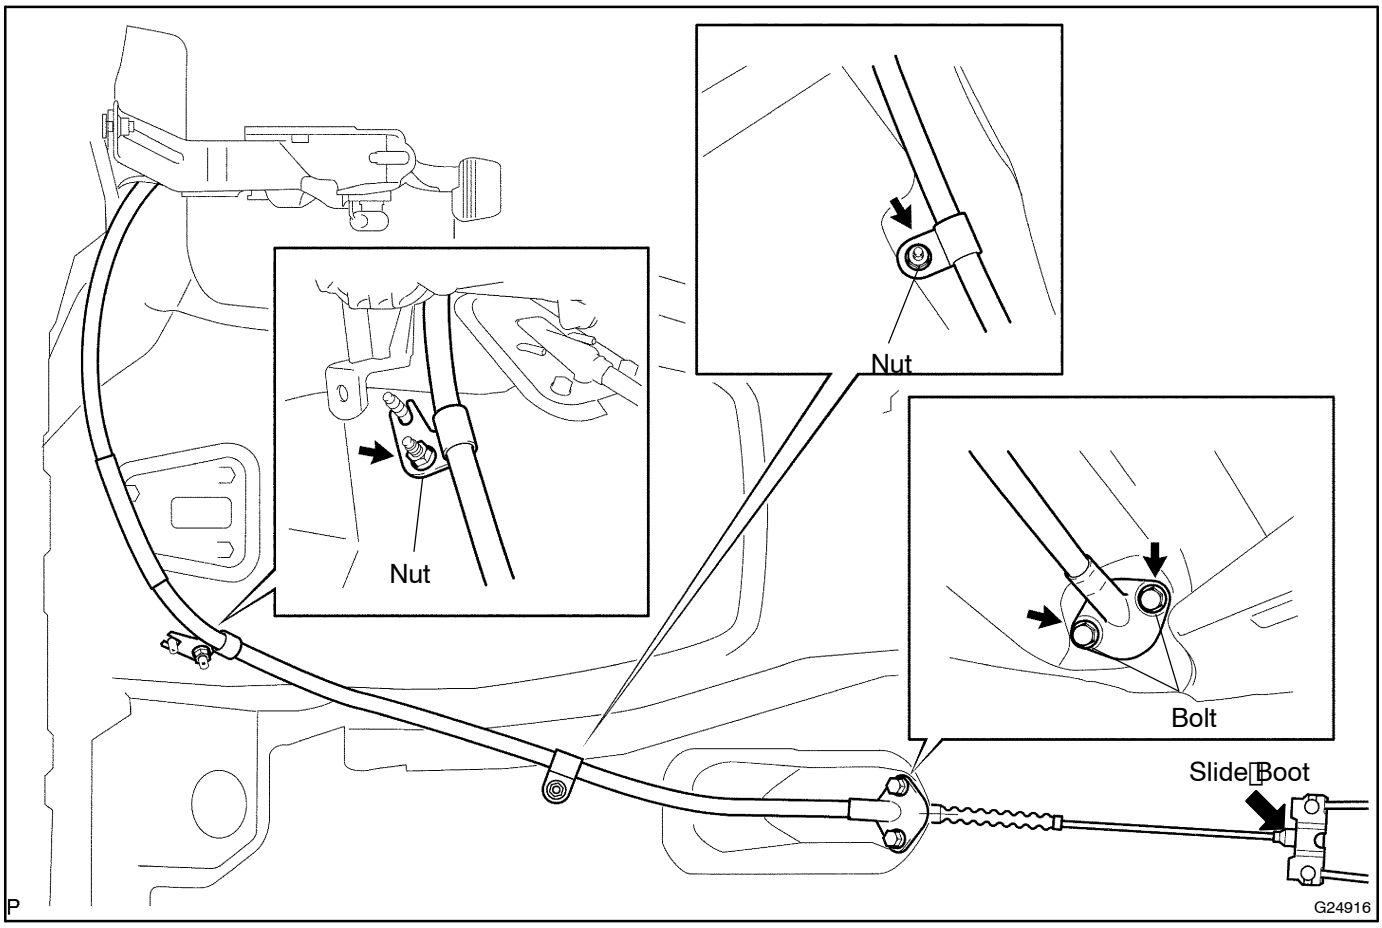


**18. INSTALL FRONT SEAT ASSEMBLY RH (SEE PAGE 72–10, 72–17)**
**19. INSTALL FRONT SEAT ASSEMBLY LH**
**20. REMOVE REAR WHEEL**
**21. ADJUST PARKING BRAKE SHOE CLEARANCE (SEE PAGE 33–17)**

22. INSTALL REAR WHEEL
    Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
23. INSPECT PARKING BRAKE PEDAL TRAVEL (SEE PAGE 33–2)
24. ADJUST PARKING BRAKE PEDAL TRAVEL (SEE PAGE 33–2)
25. CONNECT BATTERY NEGATIVE TERMINAL
26. INSPECT SRS WARNING LIGHT (W/ SIDE AIRBAG) (SEE PAGE 05–507)