
330D4–02

REPLACEMENT

HINT:

COMPONENTS: See page 71–6, 72–9, 72–16

1. PRECAUTION (W/ SIDE AIRBAG) (SEE PAGE 60–1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)
3. REMOVE INSTRUMENT PANEL FINISH PANEL SUB–ASSY LOWER (SEE PAGE 71–9)
4. REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY CENTER (SEE PAGE 71–9)
5. REMOVE FLOOR CARPET COVER CENTER RH (SEE PAGE 71–9)
6. REMOVE FLOOR CARPET COVER CENTER LH (SEE PAGE 71–9)
7. REMOVE FRONT SEAT ASSEMBLY RH (SEE PAGE 72–10, 72–17)
8. REMOVE FRONT SEAT ASSEMBLY LH
9. REMOVE CONSOLE BOX ASSY (SEE PAGE 71–9)
10. REMOVE PARKING BRAKE CONTROL PEDAL ASSY (SEE PAGE 33–5)

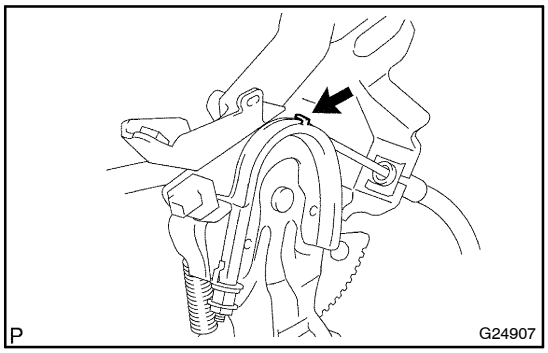


11. REMOVE PARKING BRAKE CABLE ASSY NO.1

(a) Using a screwdriver, disengage the claw.


NOTICE:

Be careful not to damage the parking brake cable assy No.1.

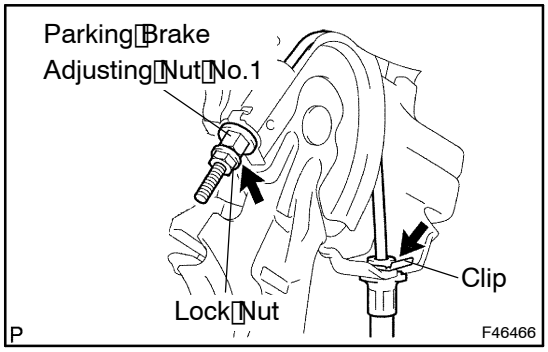

(b) Remove the clip from the parking brake control pedal assy.


(c) Remove the lock nut and parking brake wire adjusting nut No.1.

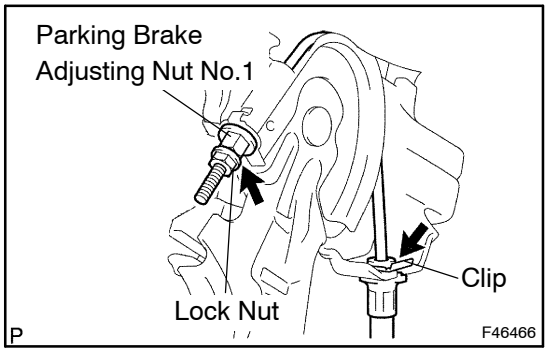

12. INSTALL PARKING BRAKE CABLE ASSY NO.1

(a) Install the parking brake cable assy No.1 with the clip.

(b) Temporarily install the parking brake wire adjusting nut No.1 and lock nut.

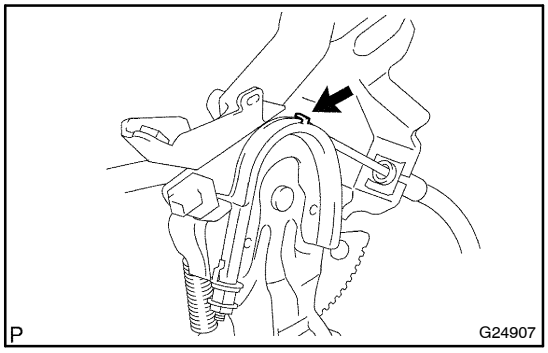

(c) Bend the claw.

NOTICE:

Bend the claw fully.

13. **INSTALL PARKING BRAKE CONTROL PEDAL ASSY (SEE PAGE 33–5)**
14. **INSTALL FRONT SEAT ASSEMBLY RH (SEE PAGE 72–10, 72–17)**
15. **INSTALL FRONT SEAT ASSEMBLY LH**
16. **REMOVE REAR WHEEL**
17. **ADJUST PARKING BRAKE SHOE CLEARANCE (SEE PAGE 33–17)**
18. **INSTALL REAR WHEEL**
    Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
19. **INSPECT PARKING BRAKE PEDAL TRAVEL (SEE PAGE 33–2)**
20. **ADJUST PARKING BRAKE PEDAL TRAVEL (SEE PAGE 33–2)**
21. **CONNECT BATTERY NEGATIVE TERMINAL**
22. **INSPECT SRS WARNING LIGHT (SEE PAGE 05–507)**