AUTOMATIC TRANSAXLE FLUID (ATM)

400GL–03


ON–VEHICLE INSPECTION

1. CHECK THE FLUID LEVEL

HINT:

Drive the vehicle so that the engine and transaxle are at normal operating temperature.

Fluid temperature: 70 to 80 °C (158 to 176 °F)

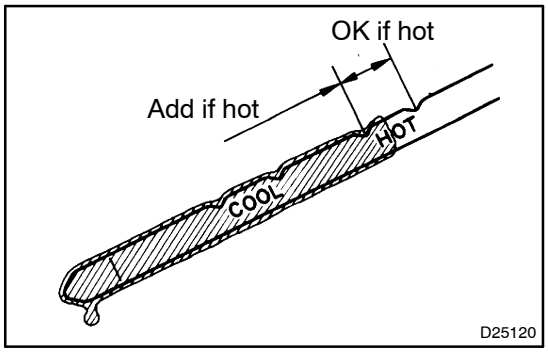

(a) Park the vehicle on a level surface and set the parking brake.
(b) With the engine idling and the brake pedal depressed, shift the lever into all positions from the P to the S_1 position, and return to the P position.
(c) Take out the dipstick and wipe it clean.
(d) Put it back all the way into the pipe.
(e) Take it out and check that the fluid level is within the HOT range.

If there are leaks, it is necessary to repair or replace O–rings, FIPGs, oil seals, plugs and/or other parts.