COOLER ASSY, OIL W/HOSE (U151F)

400GY–03

REPLACEMENT


1. REMOVE FRONT BUMPER COVER (SEE PAGE 76–2)

2. DRAIN AUTOMATIC TRANSAXLE FLUID

(a) Remove the drain plug and gasket, and drain ATF.

(b) Install a new gasket and the drain plug.


Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)

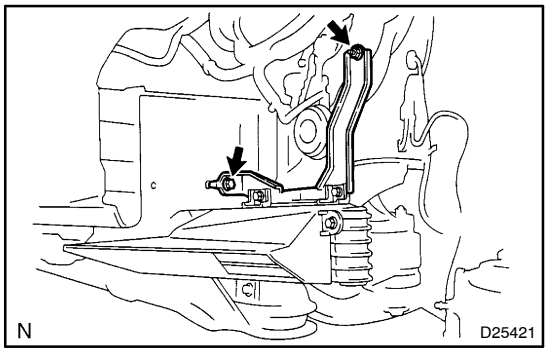

3. REMOVE COOLER ASSY, OIL W/HOSE

(a) Disconnect the 2 oil cooler hoses.

(b) Remove the bolt, nut and oil cooler assy.

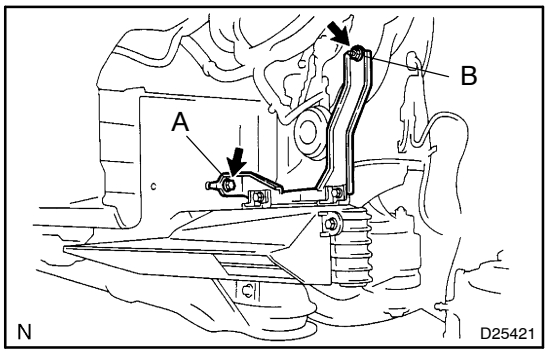

4. INSTALL COOLER ASSY, OIL W/HOSE

(a) Install the oil cooler assy, bolt A and nut B.

HINT:

After temporarily tightening the bolt A, fully tighten in order of the nut B, bolt A.

Torque: 7.0 N·m (71 kgf·cm, 62 in.·lbf)

(b) Connect the 2 oil cooler hoses.

5. INSTALL FRONT BUMPER COVER (SEE PAGE 76–2)

6. ADD AUTOMATIC TRANSAXLE FLUID

7. INSPECT AUTOMATIC TRANSAXLE FLUID (SEE PAGE 40–2)