
TRANSMISSION CONTROL CABLE ASSY (ATM)

4018L–01

REPLACEMENT


1. REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY CENTER (SEE PAGE 71–9)
2. REMOVE FLOOR CARPET COVER CENTER RH (SEE PAGE 71–9)
3. REMOVE FLOOR CARPET COVER CENTER LH (SEE PAGE 71–9)
4. REMOVE CONSOLE BOX ASSY (SEE PAGE 71–9)
5. REMOVE BATTERY
6. REMOVE AIR CLEANER ASSY
7. REMOVE AIR CLEANER HOSE NO.1

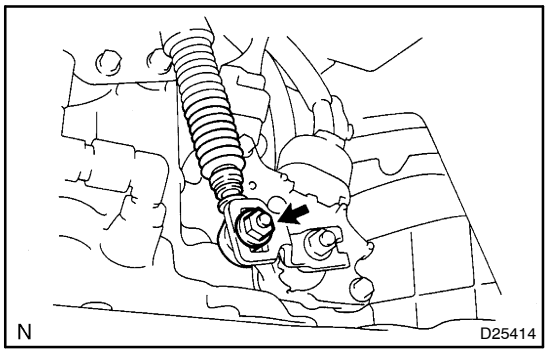


8. REMOVE TRANSMISSION CONTROL CABLE ASSY

(a) Remove the nut from the control shaft lever.


(b) Disconnect the control cable from the control shaft lever.

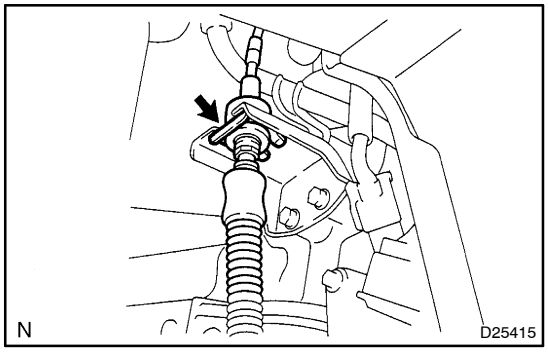


(c) Remove the clip and disconnect the control cable from the control cable bracket.

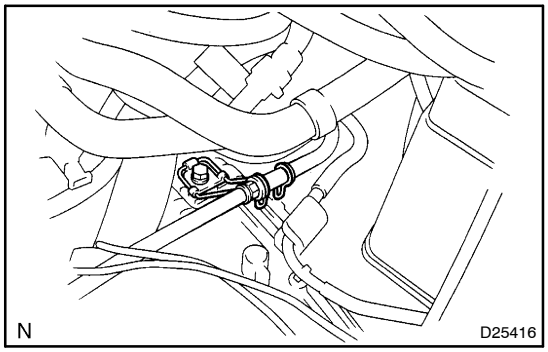


(d) Disconnect the control cable from the control cable clamp.

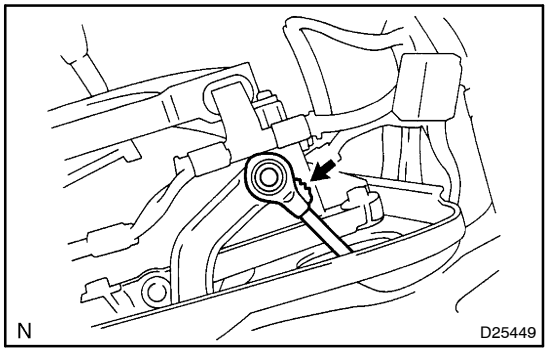


(e) Disconnect the cable end from the rod of the floor shift assy.

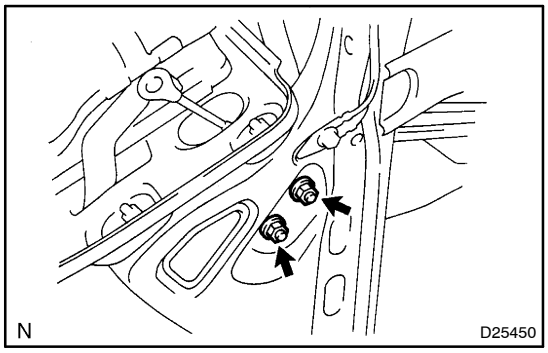

(f) Remove the 2 nuts.

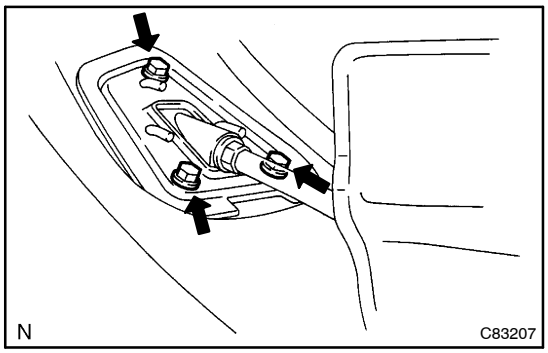


(g) Remove the 3 bolts.
(h) Pull out the control cable from the body.

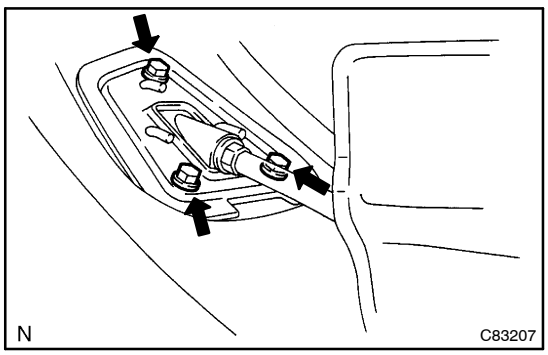


9. INSTALL TRANSMISSION CONTROL CABLE ASSY


(a) Pull in the control cable to the body.
(b) Install the 3 bolts.
Torque: 4.9 N·m (50 kgf·cm, 43 in.·lbf)

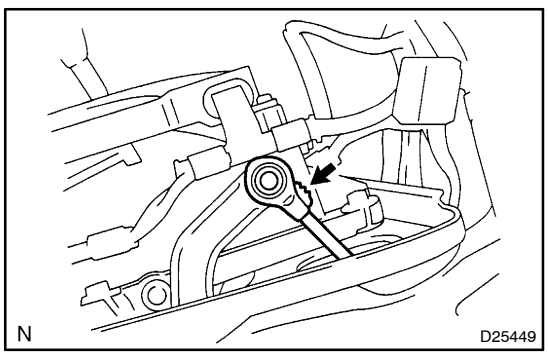


(c) Install the cable end, as shown in the illustration.
HINT:
Install it with the uneven surface facing up.

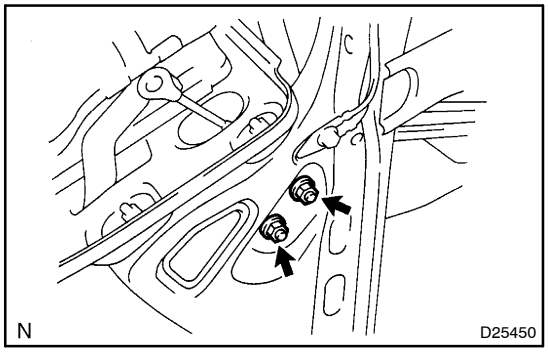


(d) Install the control cable and 2 nuts.
Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

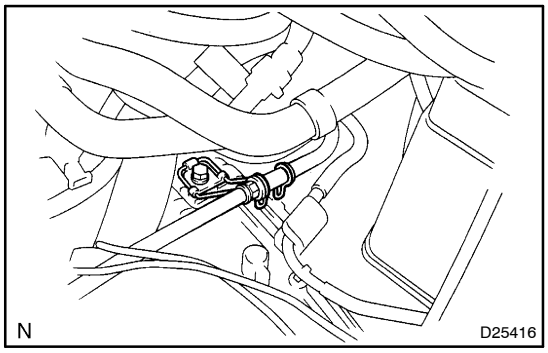

(e) Connect the control cable to the control cable clamp.

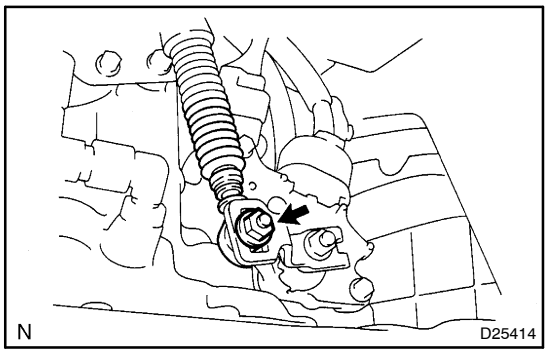

(f) Temporarily install the control cable to the control shaft lever with nuts.

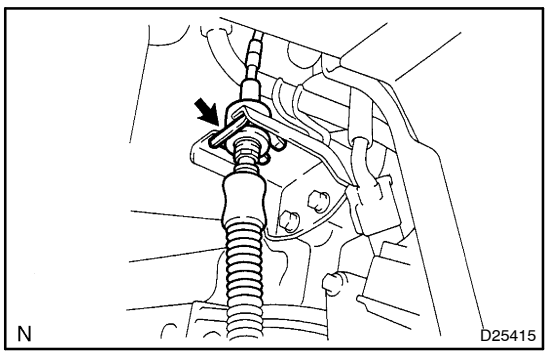

(g) Install the control cable and clip to the bracket.

10. INSTALL AIR CLEANER ASSY
11. ADJUST SHIFT LEVER POSITION (SEE PAGE 40–41)
12. INSPECT SHIFT LEVER POSITION (SEE PAGE 40–41)
13. INSTALL BATTERY
14. PERFORM INITIALIZATION (SEE PAGE 01–3)