
KEY INTER LOCK SOLENOID (ATM)

INSPECTION

4018K–01

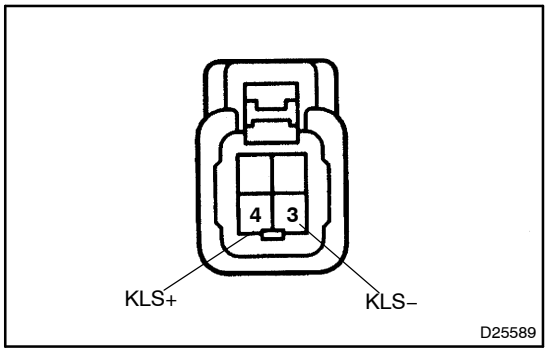

(a) Disconnect the solenoid connector.
(b) Connect KLS+ (4) terminal to the battery' positive (+) terminal, and KLS– (3) terminal to the battery negative (–) terminal, and apply about 12V between KLS+ and KLS– terminals.
(c) Check that operation noise can be heard from the solenoid.

If the solenoid does not operate, replace the solenoid.