
5009Q–01

ON–VEHICLE INSPECTION

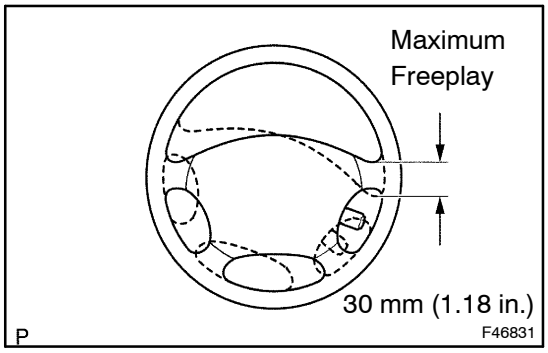

1. CHECK STEERING WHEEL FREEPLAY

(a) Stop the vehicle and face the tires straight ahead.

(b) Turn the steering wheel gently right and left by hand, and check the steering wheel freeplay.

Maximum freeplay: 30 mm (1.18 in.)

If the freeplay exceeds the maximum, replace the steering intermediate shaft sub–assy or steering gear.