

STEERING COLUMN ASSY

COMPONENTS

5009R–01

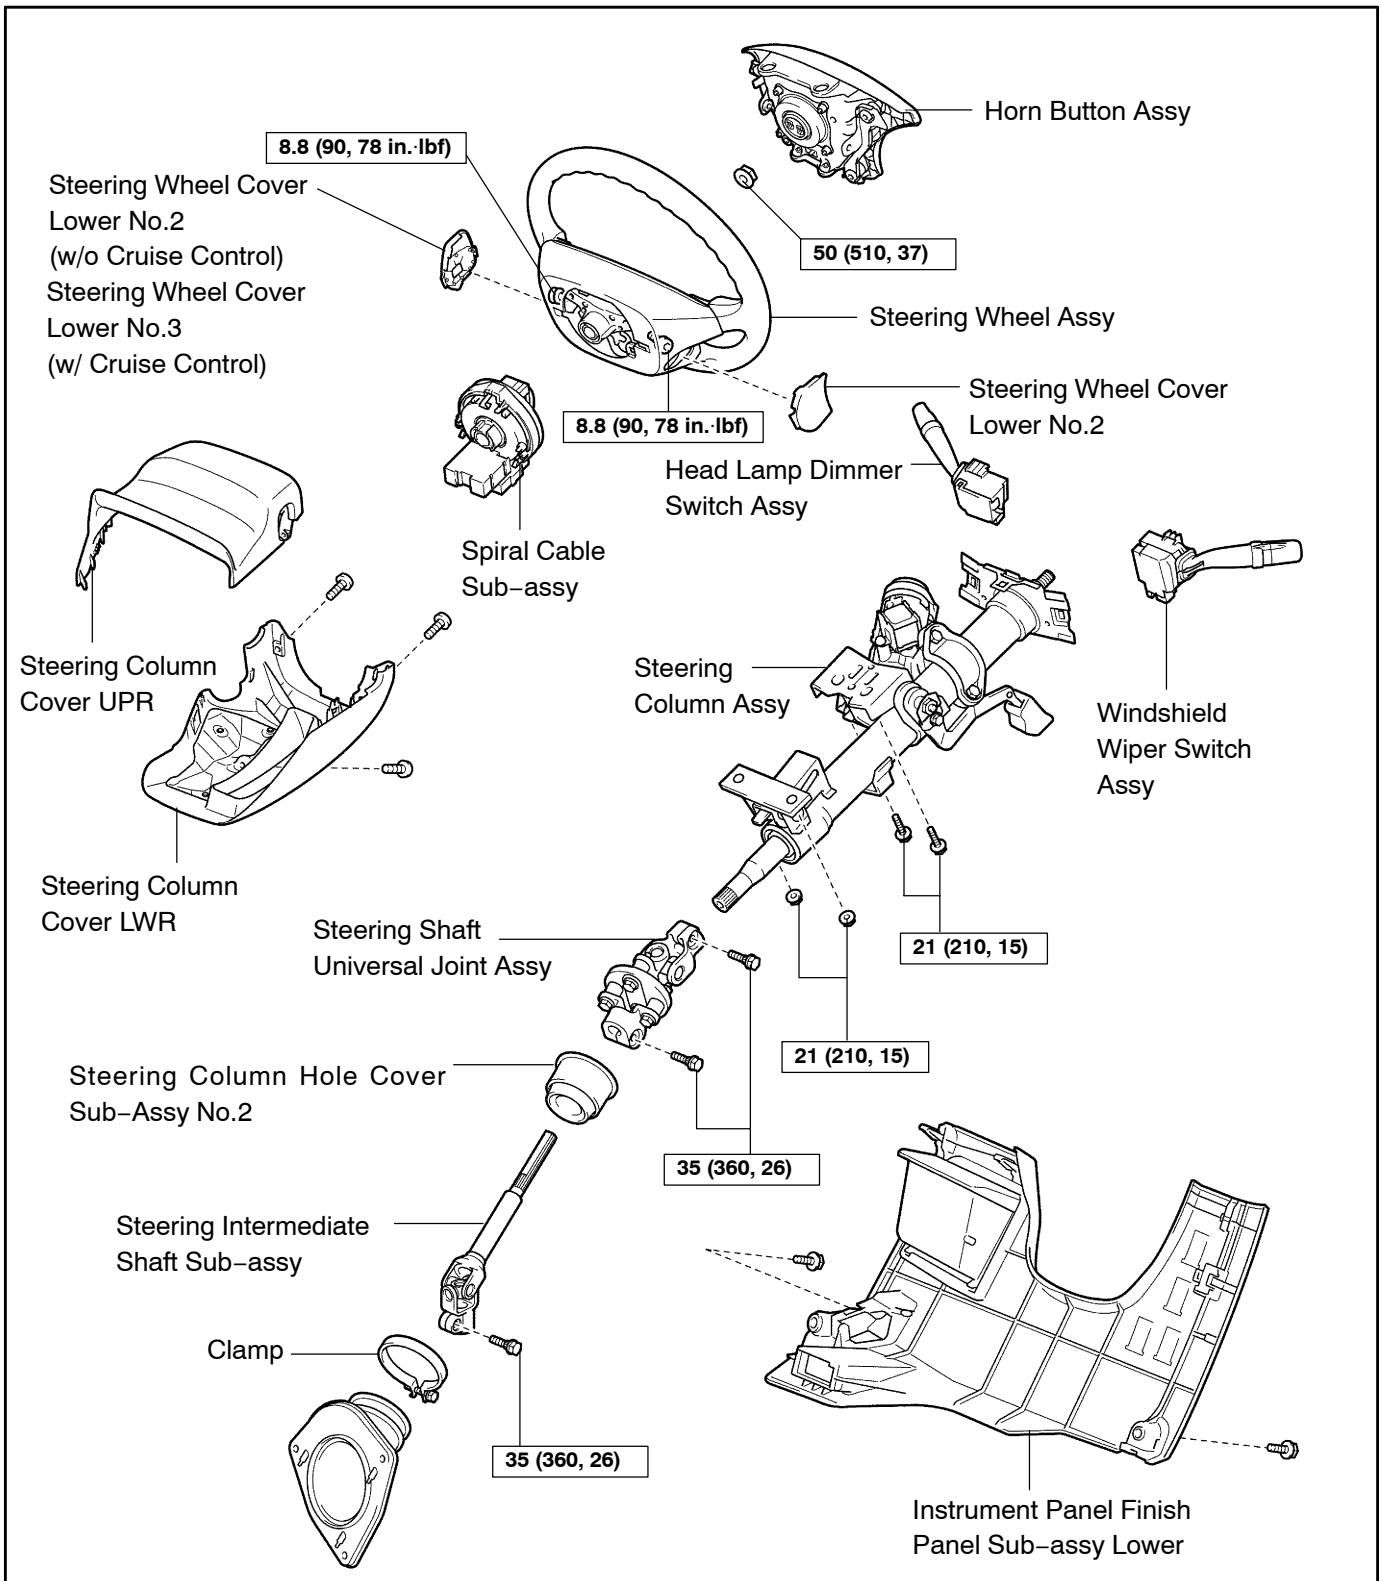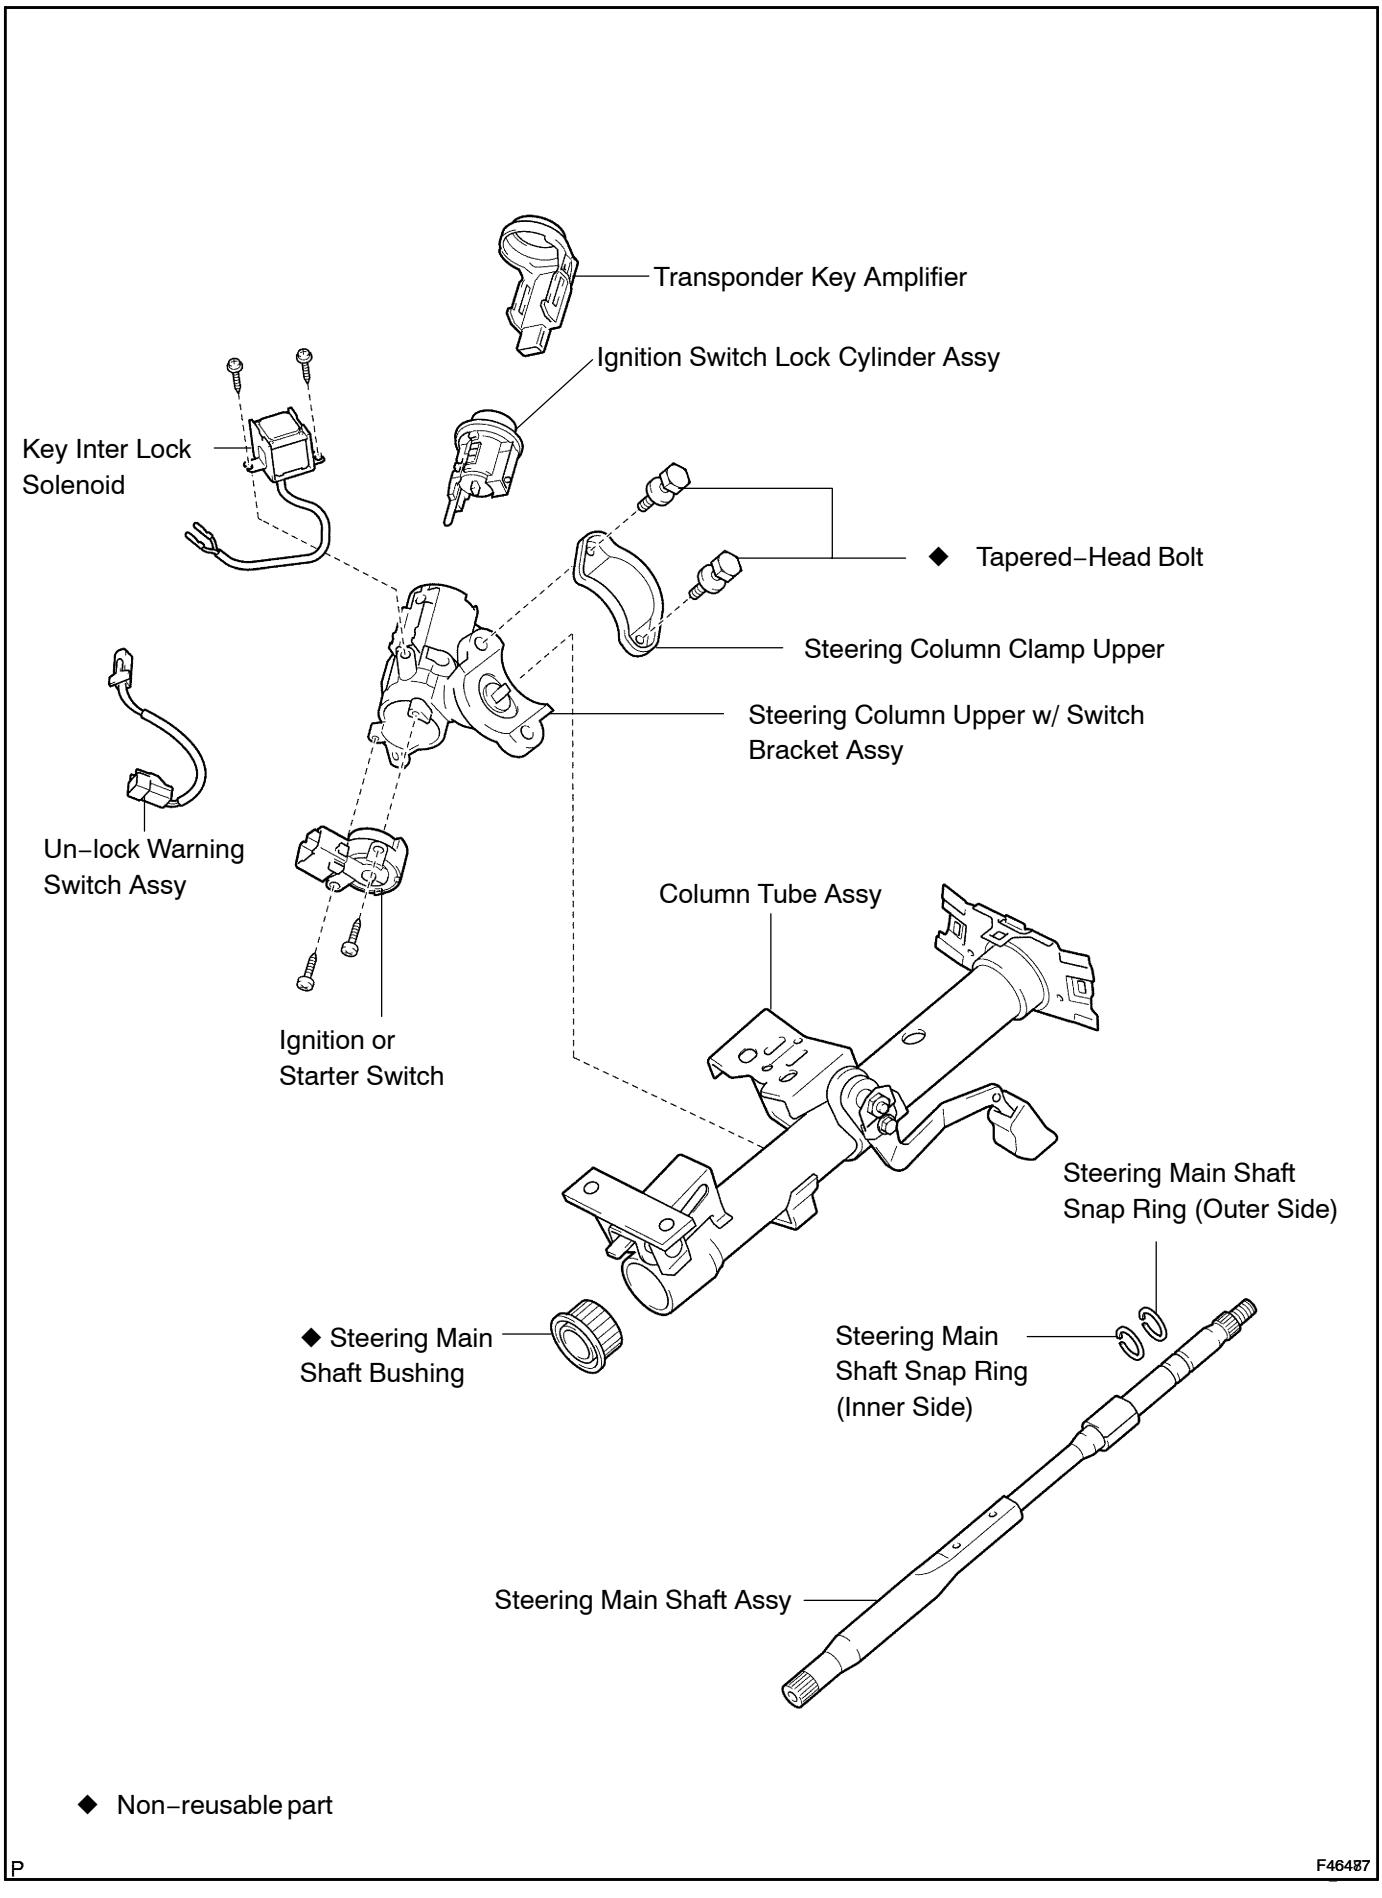


Transponder Key Amplifier
Ignition Switch Lock Cylinder Assy
Key Inter Lock Solenoid
◆ Tapered–Head Bolt
Steering Column Clamp Upper
Steering Column Upper w/ Switch Bracket Assy
Un–lock Warning Switch Assy
Column Tube Assy
Ignition or Starter Switch
Steering Main Shaft Snap Ring (Outer Side)
◆ Steering Main Shaft Bushing
Steering Main Shaft Snap Ring (Inner Side)
Steering Main Shaft Assy
◆ Non–reusable part