


POWER STEERING LINK ASSY

COMPONENTS

510HB–01

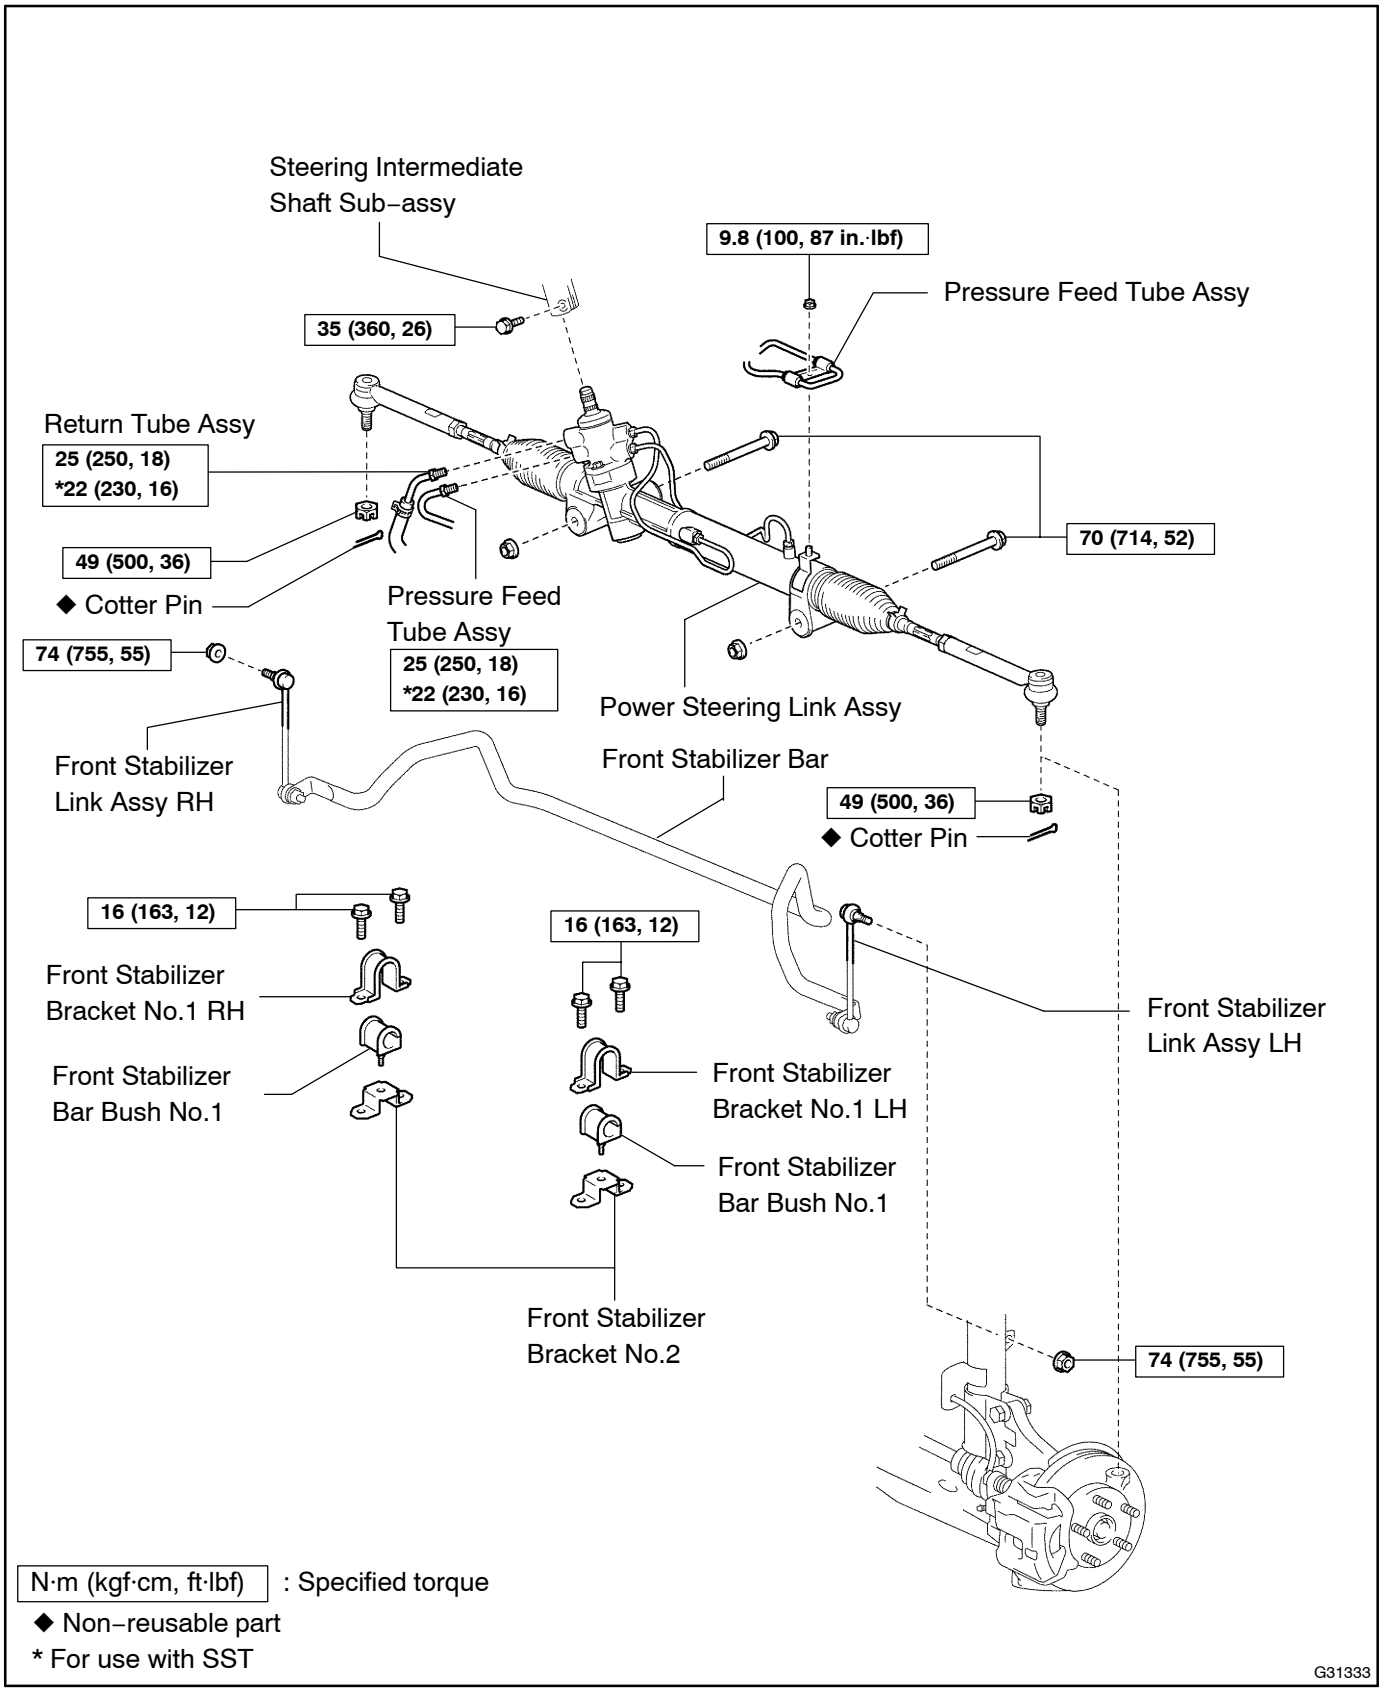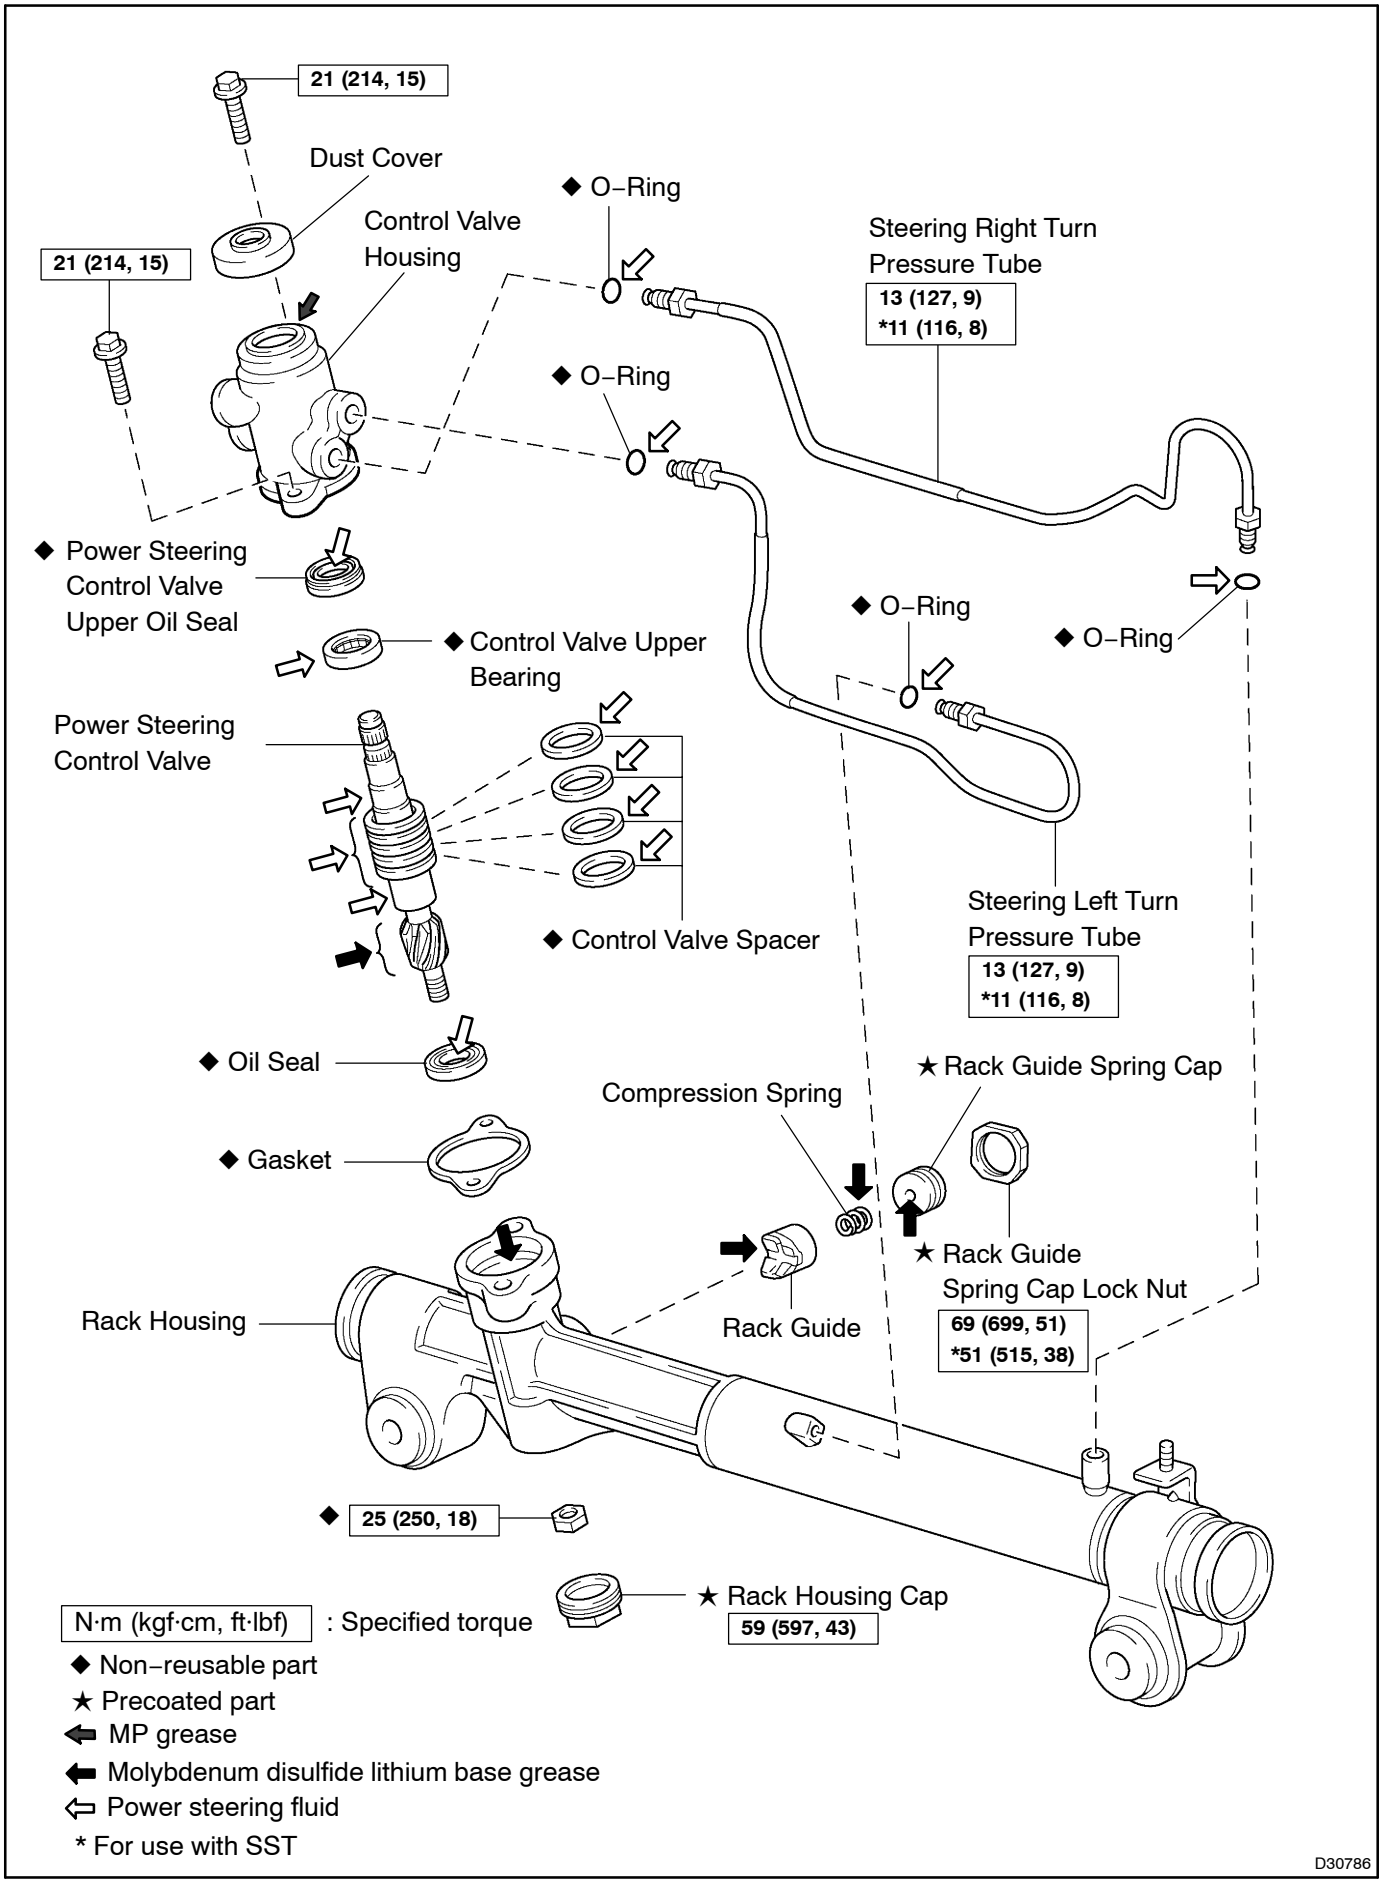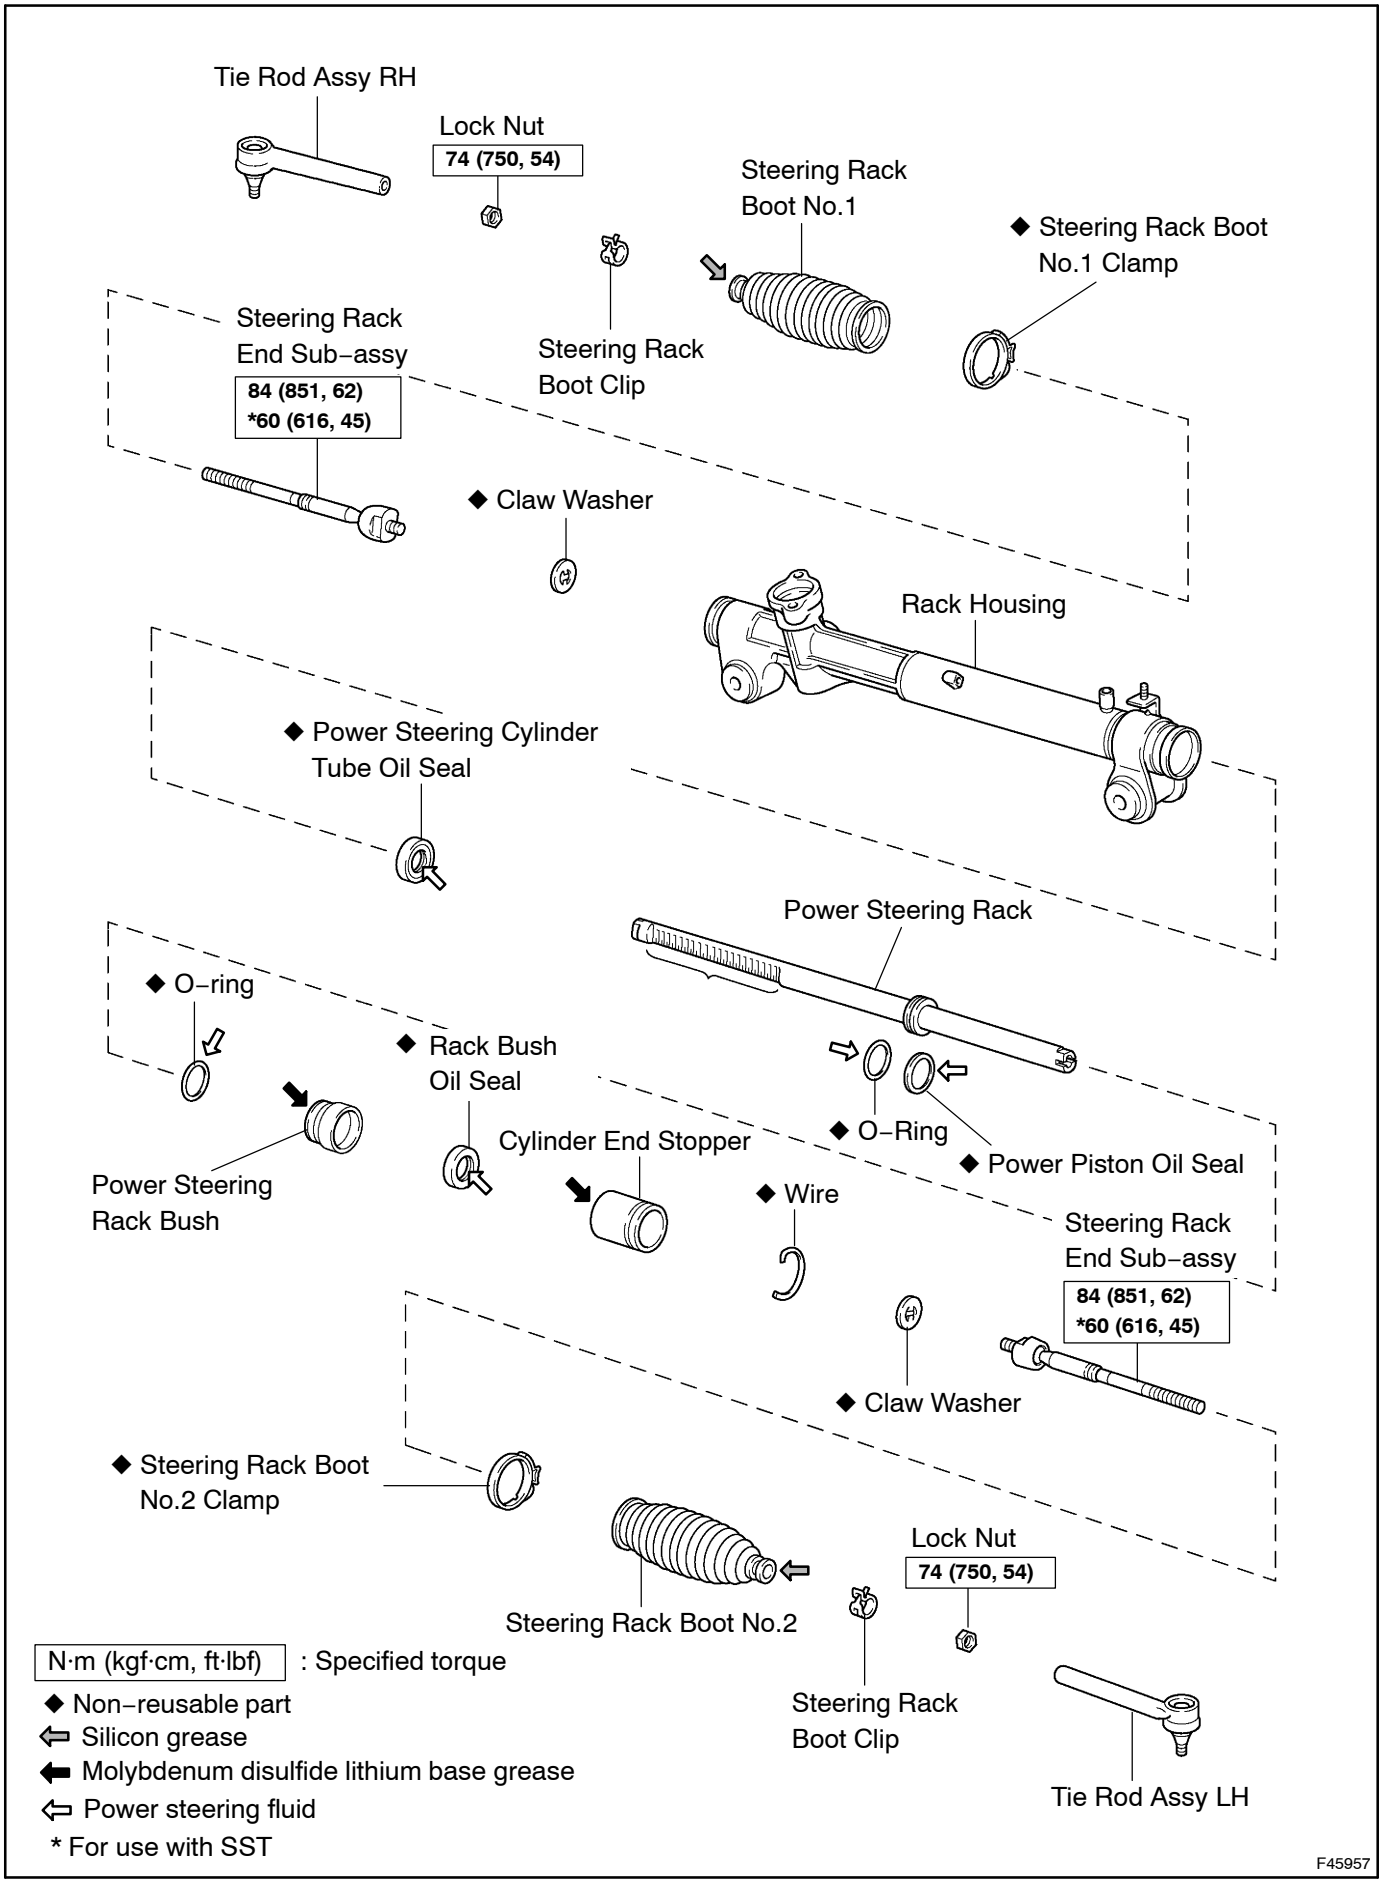


21 (214, 15)
Dust Cover
◆ O–Ring
Control Valve Housing
Steering Right Turn Pressure Tube
13 (127, 9)
*11 (116, 8)
21 (214, 15)
◆ O–Ring
◆ Power Steering Control Valve Upper Oil Seal
◆ Control Valve Upper Bearing
◆ O–Ring
◆ O–Ring
Power Steering Control Valve
◆ Control Valve Spacer
Steering Left Turn Pressure Tube
13 (127, 9)
*11 (116, 8)
◆ Oil Seal
★ Rack Guide Spring Cap
Compression Spring
◆ Gasket
★ Rack Guide Spring Cap Lock Nut
69 (699, 51)
*51 (515, 38)
Rack Housing
Rack Guide
◆ 25 (250, 18)
★ Rack Housing Cap
59 (597, 43)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part
MP grease
Molybdenum disulfide lithium base grease
Power steering fluid
* For use with SST
D30786


Tie Rod Assy RH
Lock Nut
74 (750, 54)
Steering Rack Boot No.1
◆ Steering Rack Boot No.1 Clamp
Steering Rack Boot Clip
Steering Rack End Sub–assy
84 (851, 62)
*60 (616, 45)
◆ Claw Washer
Rack Housing
◆ Power Steering Cylinder Tube Oil Seal
Power Steering Rack
◆ O–ring
◆ Rack Bush Oil Seal
Cylinder End Stopper
◆ O–Ring
◆ Power Piston Oil Seal
Power Steering Rack Bush
◆ Wire
Steering Rack End Sub–assy
84 (851, 62)
*60 (616, 45)
◆ Claw Washer
◆ Steering Rack Boot No.2 Clamp
Lock Nut
74 (750, 54)
Steering Rack Boot No.2
Steering Rack Boot Clip
Tie Rod Assy LH
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
⇦ Silicon grease
⬅ Molybdenum disulfide lithium base grease
⇦ Power steering fluid
* For use with SST
F45957