
REAR HEATER BLOWER SWITCH

551CB–01


REPLACEMENT

HINT:
Installation is in the reverse order of removal.

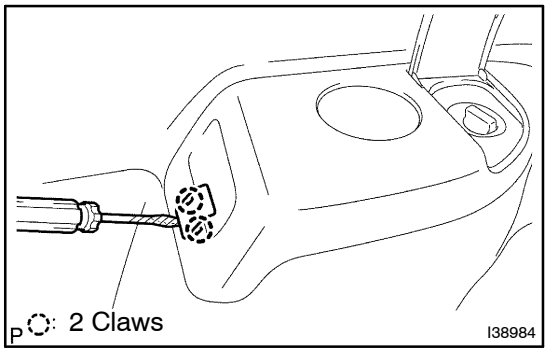


1. REMOVE DECK SIDE TRIM COVER FRONT LH

(a) Using a thin flat–head screwdriver with the tip taped up with protective tape, disengage the 2 claw fittings and remove the deck side trim cover front.

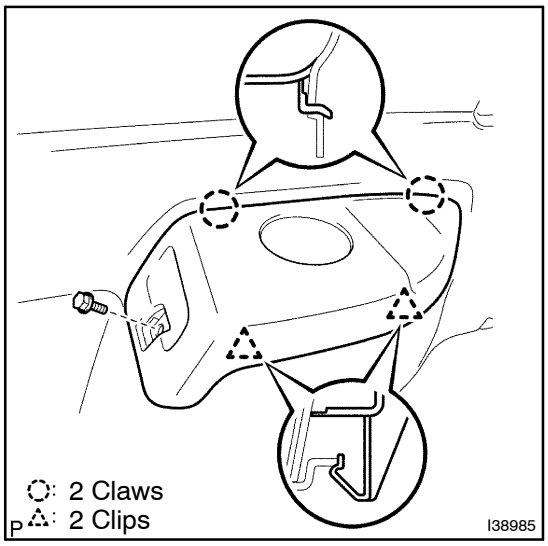

2. REMOVE DECK SIDE TRIM COVER RH

(a) Remove the bolt.
(b) Release the 2 clip fittings and 2 claw fittings.
(c) Remove the connector and deck side trim cover RH.

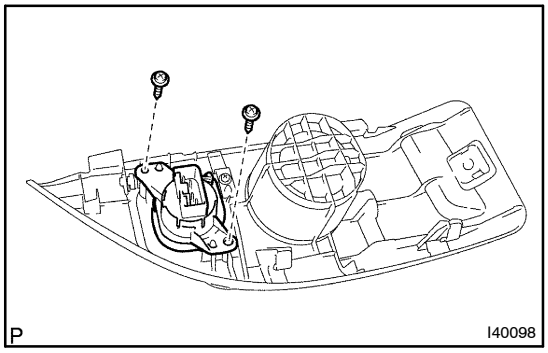

3. REMOVE REAR HEATER BLOWER SWITCH

(a) Remove the 2 screws and rear heater blower switch.