
REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. **PRECAUTION (SEE PAGE 60–1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)**
3. **REMOVE GLOVE COMPARTMENT DOOR ASSY (SEE PAGE 71–9)**
4. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO.2 (SEE PAGE 71–9)**
5. **REMOVE NAVIGATION ECU (W/ NAVIGATION SYSTEM) (SEE PAGE 67–8)**

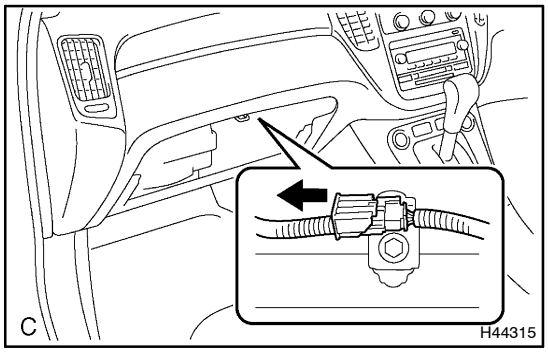


6. DISCONNECT FRONT PASSENGER AIRBAG ASSY CONNECTOR

(a) Disconnect the connector from the front passenger airbag assy.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

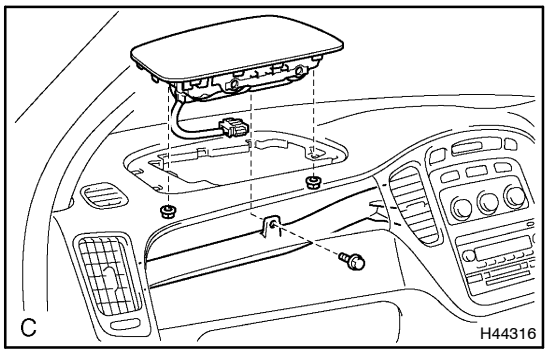

7. REMOVE FRONT PASSENGER AIRBAG ASSY

(a) Remove the bolt and the 2 nuts.

(b) Remove the front passenger airbag assy.


8. **INSPECT FRONT PASSENGER AIRBAG ASSY (SEE PAGE 60–10)**
9. **INSTALL FRONT PASSENGER AIRBAG ASSY**

(a) Install the front passenger airbag assy with the bolt and the 2 nuts.

Torque:

Bolt: 20 N·m (204 kgf·cm, 15 ft·lbf)

Nut: 5.6 N·m (57 kgf·cm, 49 in.·lbf)

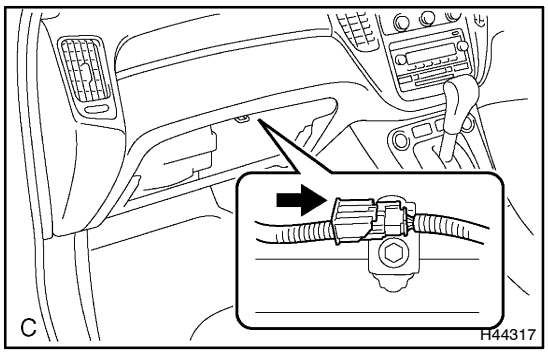

10. CONNECT FRONT PASSENGER AIRBAG ASSY CONNECTOR

(a) Connect the connector to the front passenger airbag assy.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

11. CONNECT BATTERY NEGATIVE TERMINAL

12. INSPECT SRS WARNING LIGHT (SEE PAGE 05–507)