600TE–01

# REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

**1. PRECAUTION (SEE PAGE 60–1)**

**2. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)**

**3. REMOVE ROOF HEADLINING ASSY (SEE PAGE 76–23)**

**4. REMOVE CURTAIN SHIELD AIR BAG ASSY LH**


(a) Disconnect the connector from the curtain shield airbag assy LH.

**NOTICE:**

**When handling the airbag connector, take care not to damage the airbag wire harness.**

(b) Remove the 3 clips.

(c) Remove the 9 bolts and the curtain shield airbag assy LH in the order shown in the illustration.

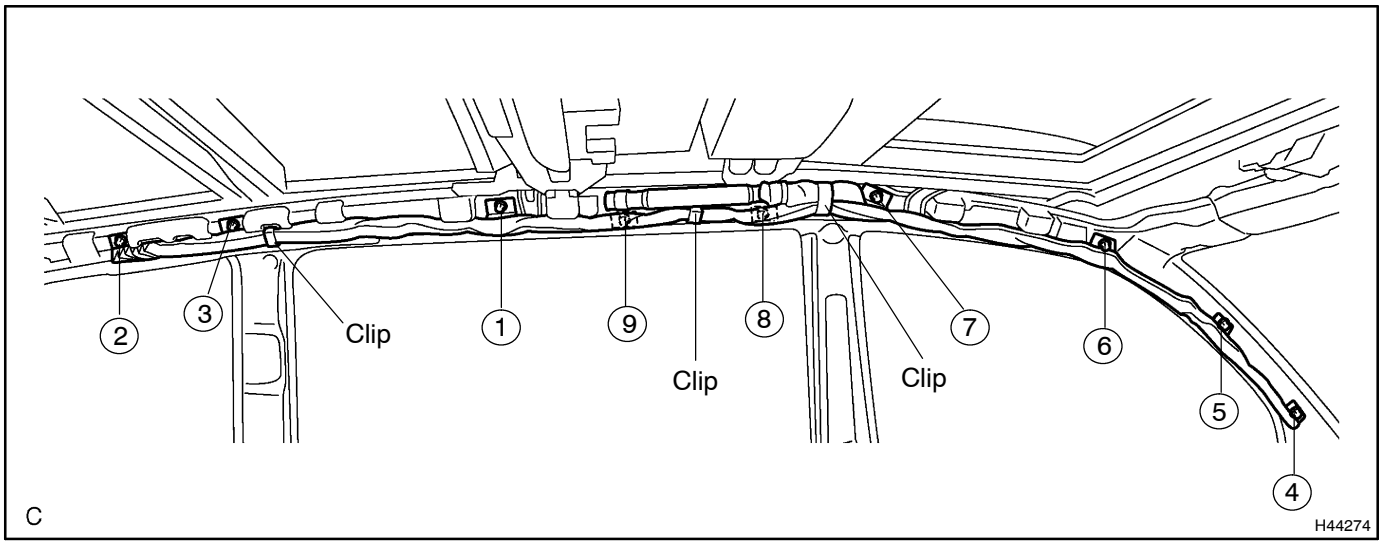

**5. INSPECT CURTAIN SHIELD AIR BAG ASSY LH (SEE PAGE 60–10)**

**6. INSTALL CURTAIN SHIELD AIR BAG ASSY LH**

(a) Install the curtain shield airbag assy LH with the 9 bolts in the order shown in the illustration.


(b) Install the 3 clips.

**Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)**

(c) Connect the connector to the curtain shield airbag assy LH.

**NOTICE:**

**When handling the airbag connector, take care not to damage the airbag wire harness.**

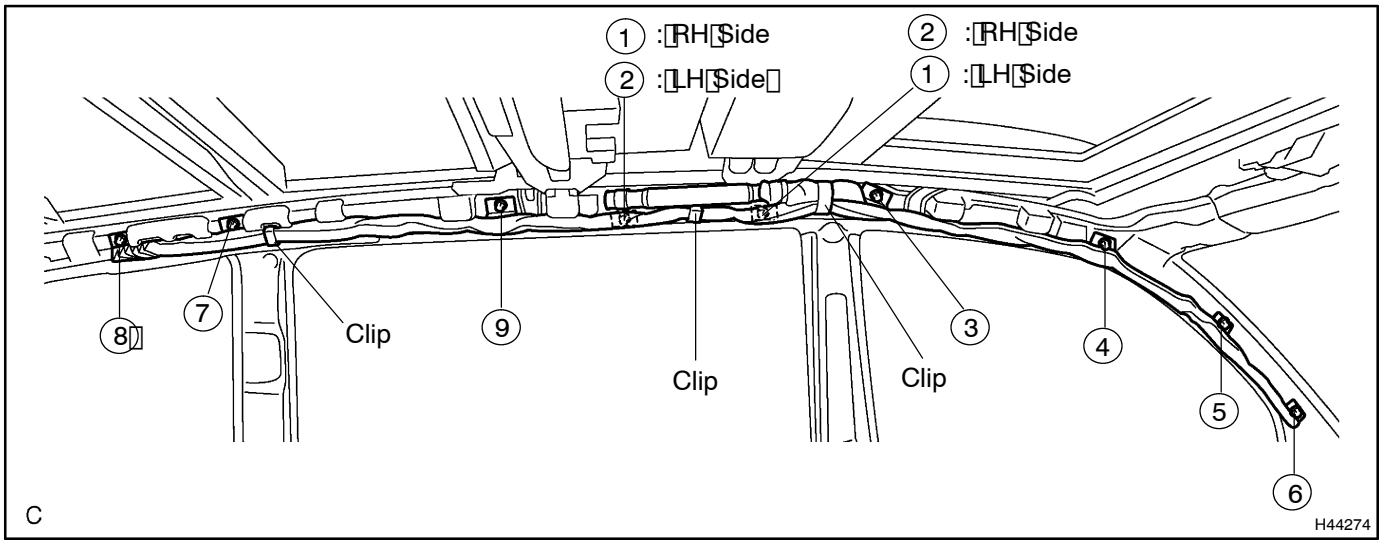


**7. INSTALL ROOF HEADLINING ASSY (SEE PAGE 76–23)**

**8. CONNECT BATTERY NEGATIVE TERMINAL**

**9. INSPECT SRS WARNING LIGHT (SEE PAGE 05–507)**