
600TH–01

REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. **PRECAUTION (SEE PAGE 60–1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)**
3. **REMOVE FLOOR CARPET COVER CENTER LH (SEE PAGE 71–9)**
4. **REMOVE FLOOR CARPET COVER CENTER RH (SEE PAGE 71–9)**
5. **REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY CENTER (SEE PAGE 71–9)**
6. **REMOVE BOX BOTTOM MAT (SEE PAGE 71–9)**
7. **REMOVE CONSOLE BOX ASSY (SEE PAGE 71–9)**
8. **REMOVE AIR DUCT REAR NO.2 (SEE PAGE 55–20)**
9. **REMOVE AIR DUCT REAR NO.1 (SEE PAGE 55–20)**

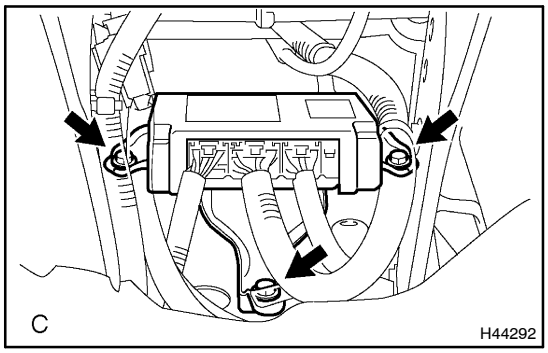

10. **REMOVE AIR BAG SENSOR ASSY CENTER**

(a) Disconnect the 3 connectors from the airbag sensor assy center.

(b) Remove the 3 bolts and the airbag sensor assy center.

11. **INSTALL AIR BAG SENSOR ASSY CENTER**

(a) Check that the ignition switch is off.

(b) Check that the battery negative (–) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

(c) Temporarily install the airbag sensor assy center with the 3 bolts.

NOTICE:

- **If the airbag sensor assy center has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the airbag sensor assy center, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

(d) Tighten the 3 bolts to the specified torque.

Torque: 17.5 N·m (179 kgf·cm, 13 ft·lbf)

(e) Check that there is no looseness in the installation parts of the airbag sensor assy center.

(f) Connect the 3 connectors to the airbag sensor assy center.

(g) Check that the water–proof sheet is properly set.

12. **CONNECT BATTERY NEGATIVE TERMINAL**
13. **INSPECT SRS WARNING LIGHT (SEE PAGE 05–507)**