
REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. **PRECAUTION (SEE PAGE 60–1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)**
3. **REMOVE FRONT BUMPER COVER (SEE PAGE 76–2)**
4. **REMOVE RADIATOR GRILLE (SEE PAGE 76–2)**
5. **REMOVE LH HEADLAMP ASSY (SEE PAGE 65–9)**

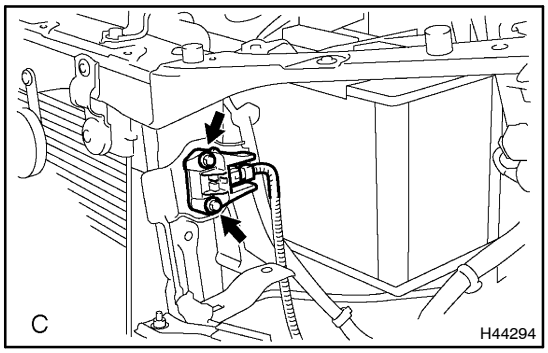

6. **REMOVE AIRBAG SENSOR FRONT LH**

(a) Disconnect the connector from the airbag sensor front LH.

(b) Remove the 2 bolts and the airbag sensor front LH.

7. **INSTALL AIRBAG SENSOR FRONT LH**

(a) Check that the ignition switch is off.

(b) Check that the battery negative (–) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

(c) Install the airbag sensor front LH with the 2 bolts.

Torque: 9.0 N·m (92 kgf·cm, 80 in.·lbf)

NOTICE:

- **If the airbag sensor front LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the airbag sensor front LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

(d) Check that there is no looseness in the installation parts of the airbag sensor front LH.

(e) Connect the connector to the airbag sensor front LH.

8. **INSTALL LH HEADLAMP ASSY (SEE PAGE 65–9)**
9. **HEADLIGHT AIM ONLY (SEE PAGE 65–13)**
10. **CONNECT BATTERY NEGATIVE TERMINAL**
11. **INSPECT SRS WARNING LIGHT (SEE PAGE 05–507)**