
600TJ-01

REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. **PRECAUTION** (SEE PAGE 60–1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL** (SEE PAGE 60–1)
3. **REMOVE REAR DOOR SCUFF PLATE LH** (SEE PAGE 76–23)
4. **REMOVE FRONT DOOR SCUFF PLATE LH** (SEE PAGE 76–23)
5. **REMOVE REAR DOOR WEATHERSTRIP LH** (SEE PAGE 76–23)
6. **REMOVE FRONT DOOR WEATHERSTRIP LH** (SEE PAGE 76–23)
7. **REMOVE CENTER PILLAR GARNISH LOWER LH** (SEE PAGE 76–23)
8. **REMOVE FRONT SEAT OUTER BELT ASSY LH** (SEE PAGE 61–5)

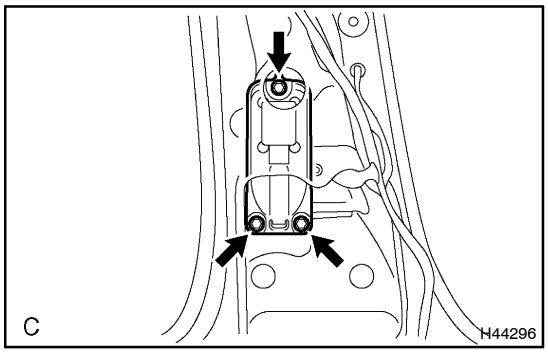

9. **REMOVE SIDE AIRBAG SENSOR ASSY LH**
   (a) Disconnect the connector from the side airbag sensor assy LH.
   (b) Remove the 3 bolts and the side airbag sensor assy LH.

10. **INSTALL SIDE AIRBAG SENSOR ASSY LH**
    (a) Check that the ignition switch is off.
    (b) Check that the battery negative (–) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

    (c) Install the side airbag sensor assy LH with the 3 bolts.
    Torque: 17.5 N·m (179 kgf·cm, 13 ft·lbf)

NOTICE:

- **If the side airbag sensor assy LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the side airbag sensor assy LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

    (d) Check that there is no looseness in the installation parts of the side airbag sensor assy LH.
    (e) Connect the connector to the side airbag sensor assy LH.

11. **CONNECT BATTERY NEGATIVE TERMINAL**
12. **INSPECT SRS WARNING LIGHT** (SEE PAGE 05–507)