
600A9-06

REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. **PRECAUTION (SEE PAGE 60-1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
3. **REMOVE TONNEAU COVER ASSY (SEE PAGE 76-23)**
4. **REMOVE DECK FLOOR BOX REAR (SEE PAGE 76-23)**
5. **REMOVE REAR FLOOR FINISH PLATE (SEE PAGE 76-23)**
6. **REMOVE DECK SIDE TRIM BOX LH (SEE PAGE 76-23)**
7. **REMOVE DECK SIDE TRIM BOX RH (SEE PAGE 76-23)**
8. **REMOVE DECK SIDE TRIM COVER LH (SEE PAGE 76-23)**
9. **REMOVE ROPE HOOK (SEE PAGE 76-23)**
10. **REMOVE DECK TRIM SIDE PANEL ASSY LH (SEE PAGE 76-23)**

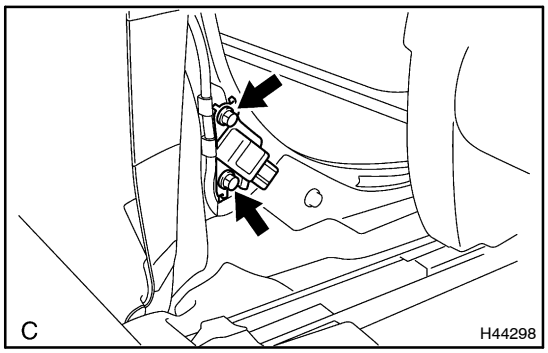

11. **REMOVE AIR BAG SENSOR REAR LH**
(a) Disconnect the connector from the airbag sensor rear LH.
(b) Remove the 2 bolts and the airbag sensor rear LH.

12. **INSTALL AIR BAG SENSOR REAR LH**
(a) Check that the ignition switch is off.
(b) Check that the battery negative (–) terminal is disconnected.

CAUTION:
After removing the terminal, wait for at least 90 seconds before starting the operation.

(c) Install the airbag sensor rear LH with the 2 bolts.
Torque: 17.5 N·m (179 kgf·cm, 13 ft·lbf)

NOTICE:

- **If the airbag sensor rear LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the airbag sensor rear LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

(d) Check that there is no looseness in the installation parts of the airbag sensor rear LH.
(e) Connect the connector to the airbag sensor rear LH.

13. **CONNECT BATTERY NEGATIVE TERMINAL**
14. **INSPECT SRS WARNING LIGHT (SEE PAGE 05-507)**