
610KA–01

INSPECTION

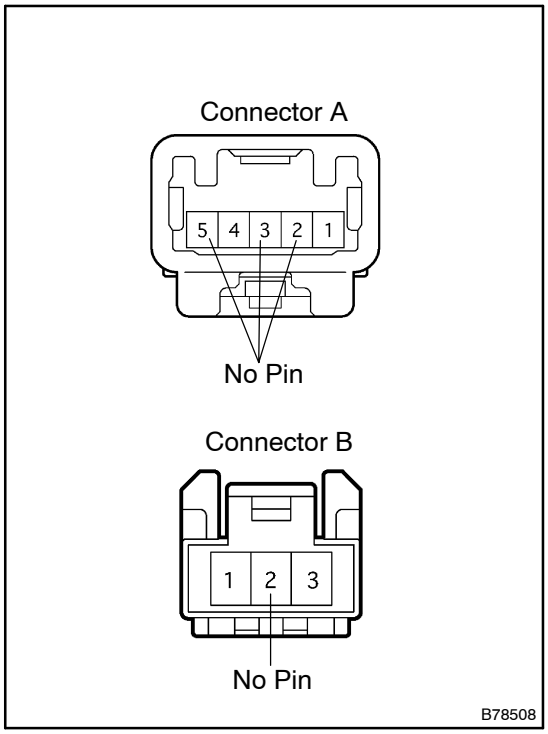


1. INSPECT FRONT SEAT INNER BELT ASSY LH

(a) Measure the resistance between the terminals of the buckle switch.

Standard:

Tester Condition	Condition	Specified Condition
A4 – B3	Fasten seat belt	1 MΩ or higher
A4 – B3	Release seat belt	Below 1 Ω

If the result is not as specified, replace the inner belt assy.

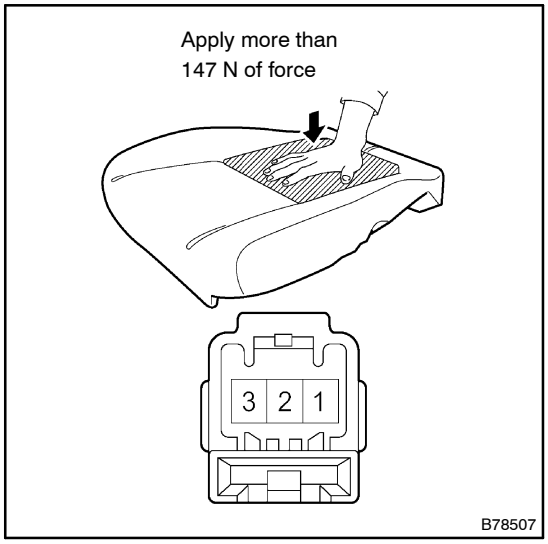

2. INSPECT OCCUPANT DETECTION SENSOR

(a) Measure the resistance between the terminals.

Standard:

Tester Condition	Condition	Specified Condition
1 – 3	Apply more than 147 N (15 kg, 33 lb) force to occupant detection sensor	Below 1 Ω
1 – 3	Free	1 MΩ or higher

If the result is not as specified, replace the seat cushion pad.