610K7–01

REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the RH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03–2).

1. REMOVE REAR SEAT LAP TYPE BELT RH

(a) Remove the rear No.2 seat (see page 72–45).

(b) Remove the rear seat lap type belt RH.

(1) Remove the bolt and belt.

(c) Install the rear seat lap type belt RH.

(1) Remove the bolt and belt.


Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

2. REMOVE REAR SEAT INNER BELT ASSY

(a) Remove the rear No.2 seat (see page 72–45).

(b) Remove the rear seat inner belt assy.

(1) Remove the 2 bolts and 2 belts.

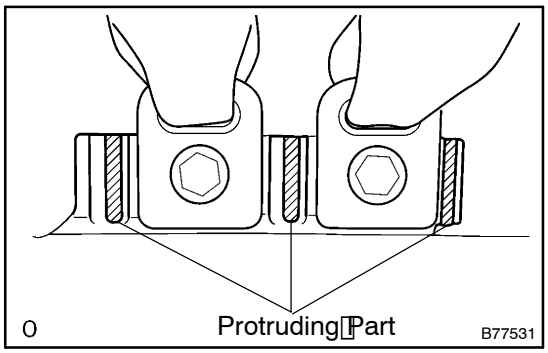

(c) Install the rear seat inner belt.

(1) Remove the 2 bolts and 2 belts.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

NOTICE:

Do not allow the anchor part of the rear belt and the protruding parts of the floor panel to overlap.

3. REMOVE REAR NO.2 SEAT OUTER BELT ASSY RH

(a) Remove the tonneau cover (see page 76–23).

(b) Remove the deck board cover (see page 76–23).

(c) Remove the deck board cover No.2 (see page 76–23).

(d) Remove the deck board cover No.3 (see page 76–23).

(e) Remove the rear seat reclining cover LH (see page 76–23).

(f) Remove the rear seat reclining cover RH (see page 76–23).

(g) Remove the deck floor box RR (see page 76–23).

(h) Remove the rear floor finish plate (see page 76–23).

(i) Remove the deck side trim box LH (see page 76–23).

(j) Remove the deck side trim box RH (see page 76–23).

(k) Remove the rear No.1 seat LH (see page 72–37).

(l) Remove the rear No.1 seat RH (see page 72–26).

(m) Remove the rear No.2 seat RH (see page 72–45).

(n) Remove the rear door opening trim weatherstrip RH (see page 76–23).


(o) Remove the back door weatherstrip (see page 76–23).

(p) Remove the rope hook (see page 76–23).

(q) Remove the rear door scuff plate RH (see page 76–23).

(r) Remove the deck trim side panel RH (see page 76–23).

(s) Remove the quarter pillar garnish RH (see page 76–23).

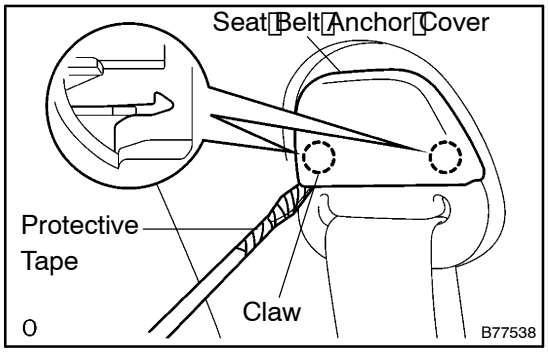

(t) Remove the rear No. 2 seat belt outer RH.


(1) Using a screwdriver, open the seat belt anchor cover

HINT:

Tape the screwdriver tip before use.

(2) Remove the bolt and shoulder anchor.

(3) Remove the 2 bolts and belt.

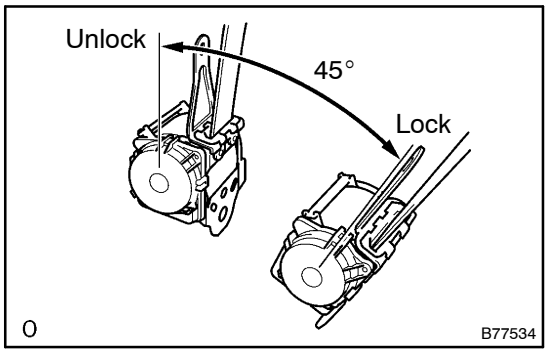

(u) Install the rear No. 2 seat belt outer RH.

(1) Check the amount of inclination required to lock the retractor.

- When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks.

NOTICE:

Do not disassemble the retractor.

If operation is not as specified, replace the outer belt assy.

(2) Install the belt with the 2 bolts.

Torque:

7.5 N·m (76.5 kgf·cm, 66 in.·lbf) for upper bolt

42 N·m (428 kgf·cm, 31 ft·lbf) for lower bolt

(3) Install the shoulder anchor with the bolt.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)