
6514G–01

ON–VEHICLE INSPECTION

Connector Front View:

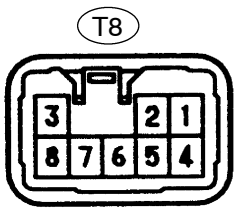

E15683

1. INSPECT TURN SIGNAL FLASHER CIRCUIT

(a) Disconnect the connector from the turn signal flasher relay.

(b) Measure the voltage according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
1 – body ground	Turn ignition switch ON	10 to 14 V
1 – body ground	Turn ignition switch OFF	Below 1 V
4 – body ground	Always	10 to 14 V
7 – body ground	Always	Below 1 V

(c) Reconnect the connector to the turn signal flasher.

(d) Measure the voltage according to the valve(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
2 – body ground	Hazard switch OFF → ON	0 V ⇔ 10 to 14 V (60 to 120 times per minute)
2 – body ground	Turn signal switch (right turn) OFF → ON	0 V ⇔ 10 to 14 V (60 to 120 times per minute)
3 – body ground	Hazard switch OFF → ON	0 V ⇔ 10 to 14 V (60 to 120 times per minute)
3 – body ground	Turn signal switch (left turn) OFF → ON	0 V ⇔ 10 to 14 V (60 to 120 times per minute)
5 – body ground	Turn signal switch (left turn) OFF → ON	10 to 14 V → 0 V
6 – body ground	Turn signal switch (right turn) OFF → ON	10 to 14 V → 0 V
8 – body ground	Hazard switch OFF → ON	10 to 14 V → 0 V