FOG LAMP ASSY LH


65139–01

OVERHAUL


HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.


1. **REMOVE FRONT FENDER SPLASH SHIELD SUB–ASSY LH** (SEE PAGE 76–2)

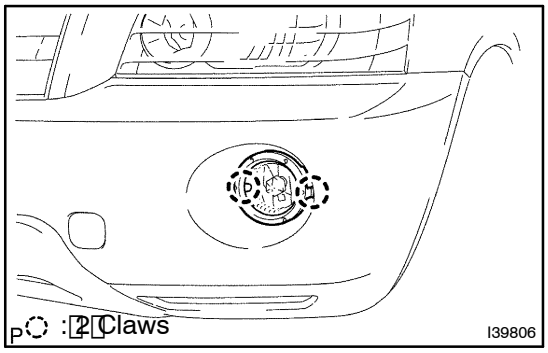

2. **REMOVE FOG LAMP PROTECTOR LH**
   (a) Disengage the 2 claws, and remove the fog lamp protector RH.

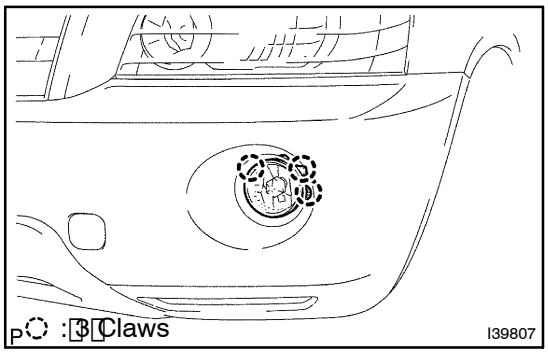

3. **REMOVE FOG LAMP ASSY LH**
   (a) Disconnect the connector.
   (b) Disengage the 3 claws, and remove the fog lamp assy LH.

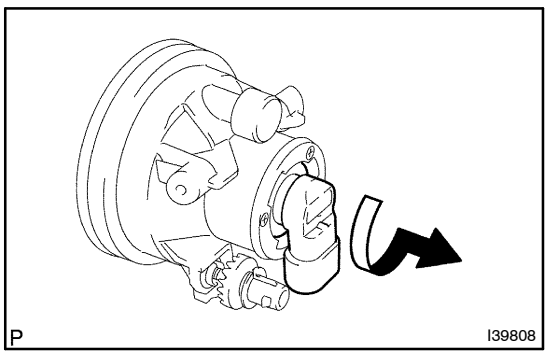

4. **REMOVE FOG LAMP BULB**
   (a) Remove the fog lamp bulb as shown in the illustration.

5. **REMOVE BEARING FOG LAMP**
6. **REMOVE FOG LAMP LAMP UNIT LH**
7. **VEHICLE PREPARATION FOR FOG LAMP AIM ADJUSTMENT** (SEE PAGE 65–18)
8. **PREPARATION FOR FOG LAMP AIMING** (SEE PAGE 65–18)
9. **FOG LAMP AIMING INSPECTION** (SEE PAGE 65–18)
10. **FOG LAMP AIMING ADJUSTMENT** (SEE PAGE 65–18)