
SIDE TURN SIGNAL LAMP LENS LH

6513B–01

REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

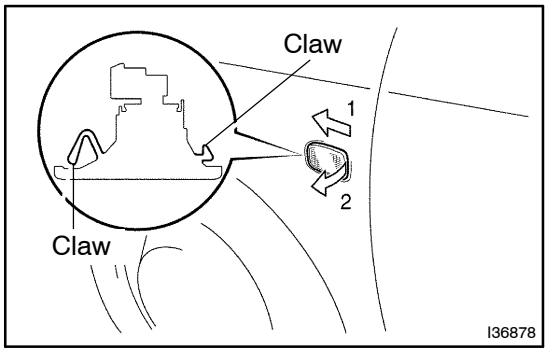

1. REMOVE SIDE TURN SIGNAL LAMP ASSY

(a) Disengage the 2 claws, and disconnect the side turn signal lamp assy as shown in the illustration.

(b) Disconnect the connector, and remove the side turn signal lamp assy.

2. REMOVE SIDE TURN SIGNAL LAMP BULB

(a) Remove the side turn signal lamp bulb and the socket.

(b) Remove the side turn signal lamp bulb from the socket.

3. REMOVE SIDE TURN SIGNAL LAMP SOCKET AND WIRE

4. REMOVE SIDE TURN SIGNAL LAMP LENS LH