REAR COMBINATION LAMP ASSY LH


6513C–01

OVERHAUL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. REMOVE REAR COMBINATION LAMP SERVICE COVER LH

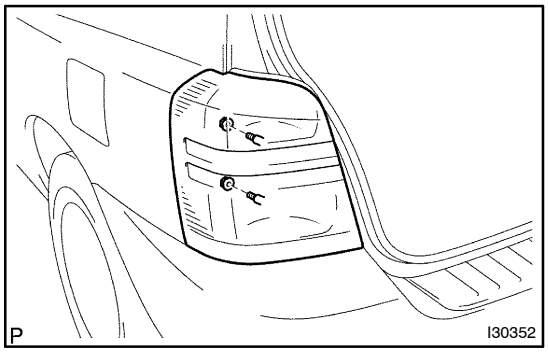

2. REMOVE REAR COMBINATION LAMP ASSY LH

(a) Disconnect the connector.

(b) Remove the 2 nuts and the rear combination lamp assy LH.

3. REMOVE REAR COMBINATION LAMP LENS GASKET RH

4. REMOVE REAR COMBINATION LAMP BULB

(a) Remove the rear combination lamp bulb and the socket and wire.

(b) Remove the rear combination lamp bulb from the socket and wire.

5. REMOVE REAR COMBINATION LAMP SOCKET AND WIRE SUB–ASSY LH

6. REMOVE REAR COMBINATION LAMP LENS LH