LICENSE PLATE LAMP ASSY


6513F–01

REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. **REMOVE BACK WINDOW PANEL TRIM UPPER (SEE PAGE 75–20)**
2. **REMOVE BACK DOOR TRIM COVER RH (SEE PAGE 75–20)**
3. **REMOVE BACK DOOR TRIM COVER LH (SEE PAGE 75–20)**
4. **REMOVE ASSIST STRAP HOLE COVER (SEE PAGE 75–20)**
5. **REMOVE ASSIST STRAP ASSY RH (SEE PAGE 75–20)**
6. **REMOVE BACK DOOR TRIM PANEL ASSY (SEE PAGE 75–20)**
7. **REMOVE BACK DOOR LOCK ASSY (SEE PAGE 75–20)**
8. **REMOVE BACK DOOR HANDLE ASSY OUTSIDE (SEE PAGE 75–20)**
9. **REMOVE LUGGAGE COMPARTMENT DOOR GARNISH SUB–ASSY OUTSIDE (SEE PAGE 76–16)**

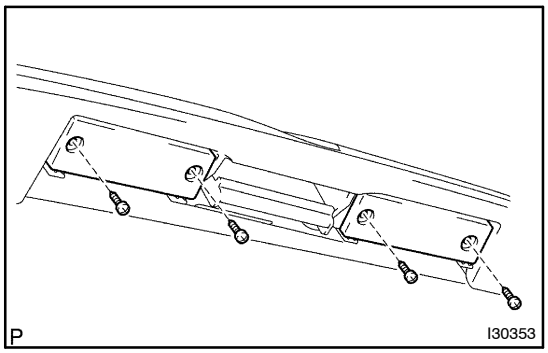

10. **REMOVE LICENSE PLATE LAMP ASSY**
(a) Remove the 4 screws and the 2 license plate lamp lenses.
(b) Remove the license plate lamp assy from the luggage compartment door garnish sub–assy outside.

11. **INSTALL BACK DOOR LOCK ASSY (SEE PAGE 75–20)**