HEADLAMP DIMMER SWITCH ASSY

6513E–01


REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. REMOVE STEERING COLUMN COVER LWR (SEE PAGE 50–6)

2. REMOVE STEERING COLUMN COVER UPR (SEE PAGE 50–6)

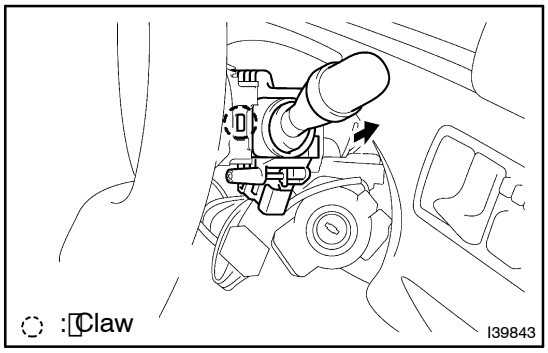

3. REMOVE HEADLAMP DIMMER SWITCH ASSY

(a) Disconnect the connector.

(b) Using a screwdriver, disengage the claw, and remove the headlamp dimmer switch assy.

NOTICE:

Pressing the claw hard breaks the claw.

HINT:

Tape the screwdriver tip before use.