

660IR–01

ON–VEHICLE INSPECTION

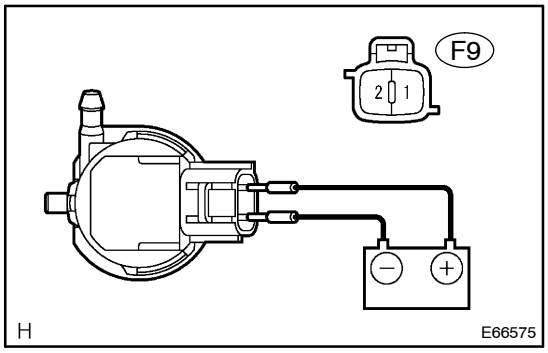

1. FRONT WASHER MOTOR

(a) Operation Check
  (1) Fill the washer jar with washer fluid.
  (2) Connect the positive battery (+) lead to terminal 1 of the windshield washer motor and pump assy, and the negative battery (–) lead to terminal 2.
  (3) Check that washer fluid flows from the washer jar.

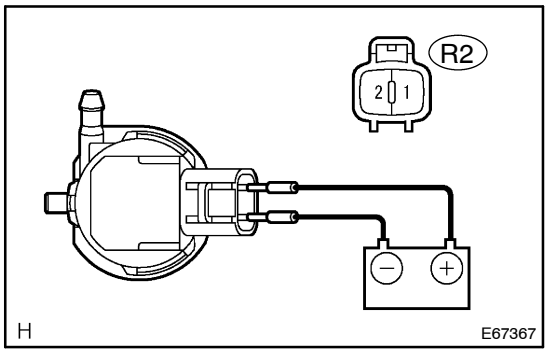

2. REAR WASHER MOTOR

(a) Operation Check
  (1) Fill the washer jar with washer fluid.
  (2) Connect the positive battery (+) lead to terminal 1 of the windshield washer motor and pump assy, and the negative battery (–) lead to terminal 2.
  (3) Check that washer fluid flows from the washer jar.

3. LEVEL WARNING SWITCH ASSY

(a) Check washer level warning switch continuity.
  (1) Check that no continuity exists between terminals with switch OFF (float up).
  (2) Check that continuity exists between terminals with switch ON (float down).