WIPER RUBBER LH

660I6–01

REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. REMOVE FR WIPER BLADE LH


(a) Remove the front wiper blade LH from the front wiper arm LH.

NOTICE:

Do not fold down the front wiper arm with the front wiper blade removed from it.

2. REMOVE WIPER RUBBER LH

(a) Remove the front wiper rubber LH from the front wiper blade.

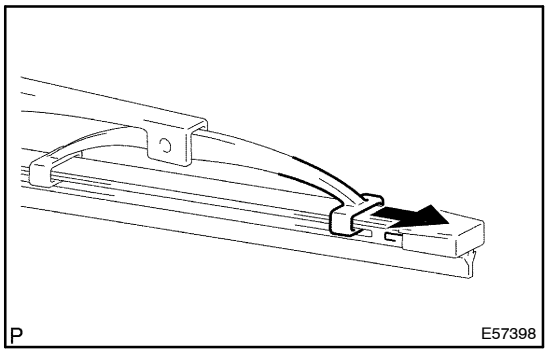

3. INSTALL WIPER RUBBER LH

(a) Install the wiper rubber LH so that the head part (larger side) of the wiper rubber faces the arm axle side.

NOTICE:

Push the front wiper blade into the grooves of the wiper rubber to engage them completely.