WINDSHIELD WIPER SWITCH ASSY


REPLACEMENT

660I8–01

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. **REMOVE STEERING COLUMN COVER LWR** (SEE PAGE 50–6)
2. **REMOVE STEERING COLUMN COVER UPR** (SEE PAGE 50–6)

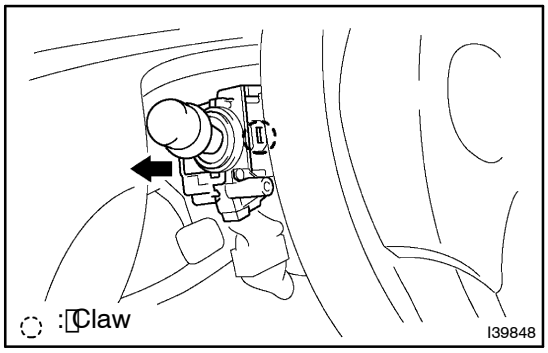

3. **REMOVE WINDSHIELD WIPER SWITCH ASSY**

(a) Disconnect the connector.

(b) Using a screwdriver, disengage the claw, and remove the windshield wiper switch assy.

NOTICE:

Pressing the claw hard breaks the claw.

HINT:

Tape the screwdriver tip before use.