MULTI–DISPLAY (CRT DISPLAY) DISPLAY


67178–01

REPLACEMENT

HINT:

- COMPONENTS: See page 67–2
- Installation is in the reverse order of removal.


1. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB–ASSY CENTER (SEE PAGE 71–9)

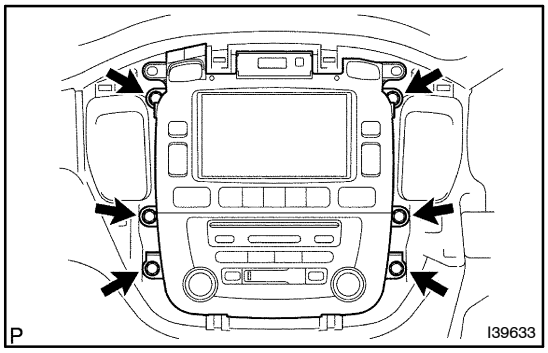

2. REMOVE INTEGRATION CONTROL & PANEL ASSY


(a) Remove the 6 bolts.

(b) Disconnect the connectors and remove the integration control & panel assy.

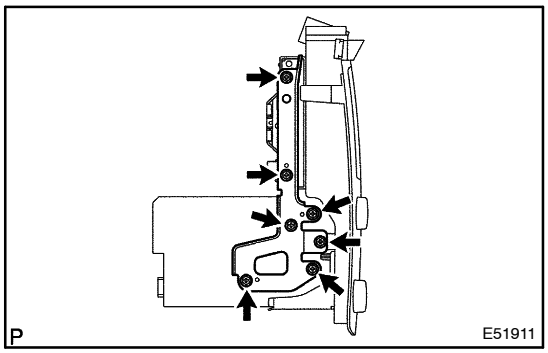

3. REMOVE MULTI–DISPLAY CONTROLER BRACKET A

(a) Remove the 7 screws and multi–display controller bracket A.

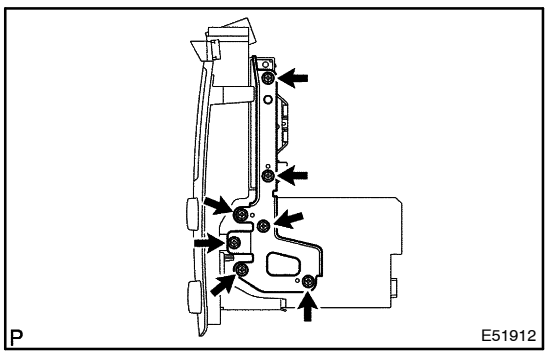

4. REMOVE MULTI–DISPLAY CONTROLER BRACKET B

(a) Remove the 7 screws and multi–display controller bracket B.

5. REMOVE MULTI–DISPLAY (CRT DISPLAY) DISPLAY

6. INSTALL MULTI–DISPLAY (CRT DISPLAY) DISPLAY

HINT:

Perform the screen noise automatic adjustment when screen noise occurs (see page 05–900).