FRONT NO.1 SPEAKER ASSY


6717A–01

REPLACEMENT

HINT:

- COMPONENTS: See page 67–2
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.


1. **REMOVE MULTIPLEX NETWORK MASTER SWITCH ASSY (SEE PAGE 75–6)**
2. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (SEE PAGE 75–6)**
3. **REMOVE DOOR PULL HANDLE (SEE PAGE 75–6)**
4. **REMOVE FRONT DOOR TRIM BOARD SUB–ASSY LH (SEE PAGE 75–6)**
5. **REMOVE FRONT DOOR INSIDE HANDLE SUB–ASSY LH (SEE PAGE 75–6)**

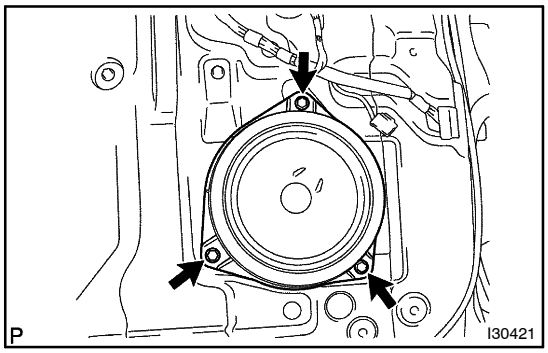

6. REMOVE FRONT NO.1 SPEAKER ASSY

(a) Disconnect the connector.

(b) Remove the 3 screws and front No.1 speaker assy.

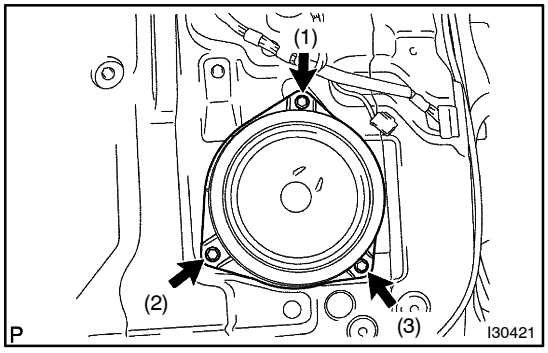

7. INSTALL FRONT NO.1 SPEAKER ASSY

(a) Install the front No.1 speaker assy with the 3 screws.

NOTICE:

Install them in the order shown in the illustration.

(b) Connect the connector.