FRONT NO.2 SPEAKER ASSY


6717B–01

REPLACEMENT

HINT:

- COMPONENTS: See page 67–2
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. REMOVE MULTIPLEX NETWORK MASTER SWITCH ASSY (SEE PAGE 75–6)
2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (SEE PAGE 75–6)
3. REMOVE DOOR PULL HANDLE (SEE PAGE 75–6)
4. REMOVE FRONT DOOR TRIM BOARD SUB–ASSY LH (SEE PAGE 75–6)
5. REMOVE FRONT DOOR INSIDE HANDLE SUB–ASSY LH (SEE PAGE 75–6)

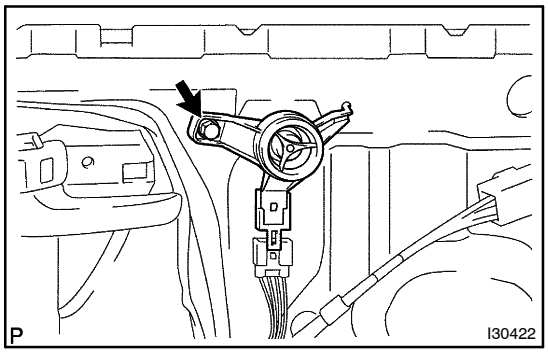

6. REMOVE FRONT NO.2 SPEAKER ASSY

(a) Disconnect the connector.

(b) Remove the screw and front No.2 speaker assy.