REAR SPEAKER ASSY


6717C–01

REPLACEMENT

HINT:


- COMPONENTS: See page 67–2
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. REMOVE DOOR PULL HANDLE (SEE PAGE 75–13)
2. REMOVE REAR DOOR TRIM BOARD SUB–ASSY LH (SEE PAGE 75–13)
3. REMOVE REAR DOOR INSIDE HANDLE SUB–ASSY LH (SEE PAGE 75–13)
4. REMOVE REAR DOOR SERVICE HOLE COVER LH (SEE PAGE 75–13)

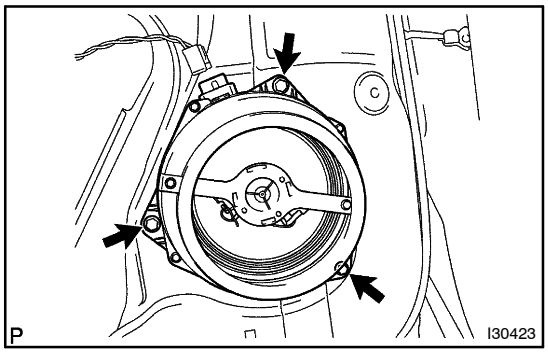

5. REMOVE REAR SPEAKER ASSY

(a) Disconnect the connector.
(b) Remove the 3 screws and rear speaker assy.

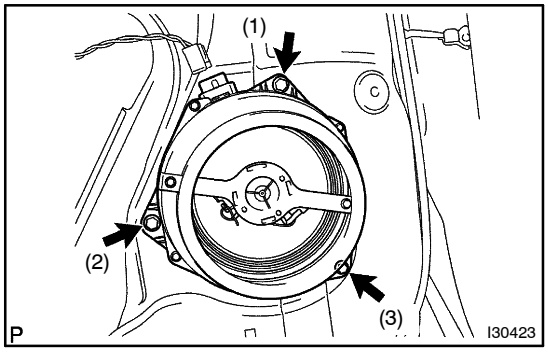

6. INSTALL REAR SPEAKER ASSY

(a) Install the rear speaker assy with the 3 screws.

NOTICE:

Install them in the order shown in the illustration.

(b) Connect the connector.