NETWORK GATEWAY ECU

6717G–01


REPLACEMENT

HINT:

- COMPONENTS: See page 67–5
- Installation is in the reverse order of removal.

1. REMOVE GLOVE COMPARTMENT DOOR ASSY (SEE PAGE 71–9)

2. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO.2 (SEE PAGE 71–9)

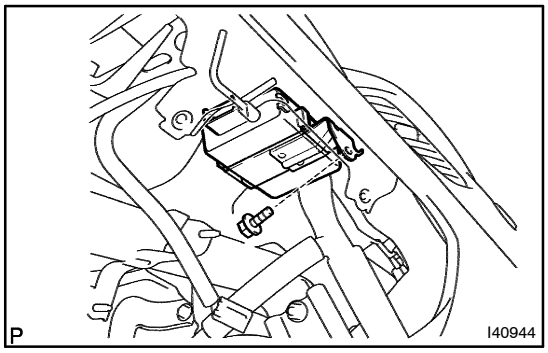

3. REMOVE NETWORK GATEWAY ECU

(a) Disconnect the connector.

(b) Remove the bolt and the network gateway ECU.