CIGARETTE LIGHTER ASSY


REPLACEMENT

6717H–01

HINT:


- COMPONENTS: See page 67–2
- Installation is in the reverse order of removal.

1. REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY CENTER (SEE PAGE 71–9)

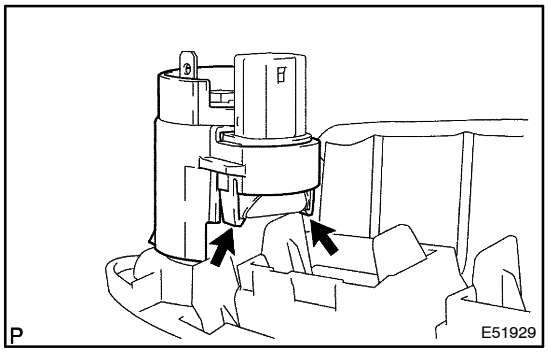

2. REMOVE CIGARETTE LIGHTER ASSY

(a) Release the 2 claws and remove the cigarette lighter cover.

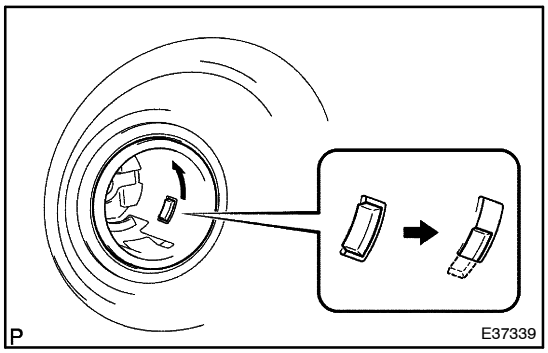

(b) Disengage the meshing of the cigarette lighter and the cigarette lighter indicator lens by rotating the cigarette lighter assy.

(c) Pull out the cigarette lighter assy.

3. INSTALL CIGARETTE LIGHTER ASSY

(a) Aligning the socket with the cutout of the socket cover, fully push it to install.