
POWER OUTLET SOCKET ASSY CTR

6717I–01

REPLACEMENT

HINT:

- COMPONENTS: See page 67–2
- Installation is in the reverse order of removal.

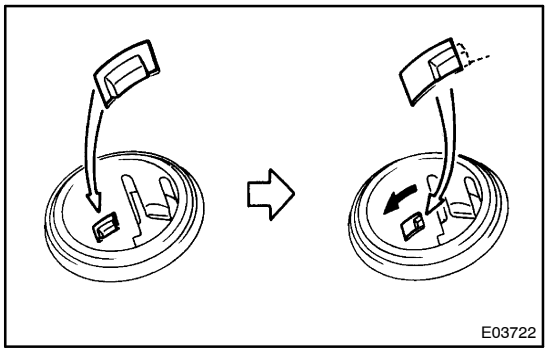

1. REMOVE POWER OUTLET SOCKET ASSY CTR

(a) Turn the socket in the circumference direction as shown in the illustration, disengage the claw between the socket and the power point socket cover, and push out the socket to the room side.

2. INSTALL POWER OUTLET SOCKET ASSY CTR

(a) Align the socket with the notch on the power point socket cover CTR and install the power socket assy CTR by pushing it in as hard as possible.