
7013Z–01

INSPECTION

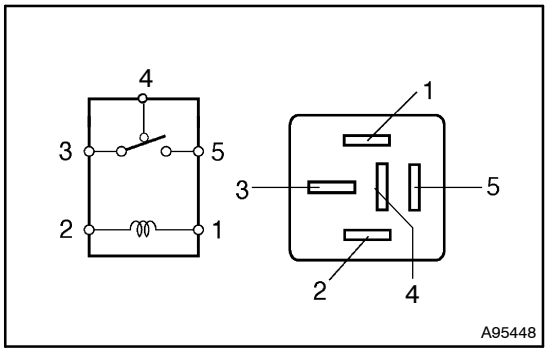

1. INSPECT RELAY (Marking: RR DEF)

(a) Remove the RR DEF relay from the engine room J/B.

(b) Measure the resistance of the relay.

Standard:

Tester Connection	Specified Condition
3 – 4	Below 1 Ω
3 – 5	10 kΩ or higher
3 – 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.