

REAR NO.1 SEAT ASSY RH

COMPONENTS

720T0–01

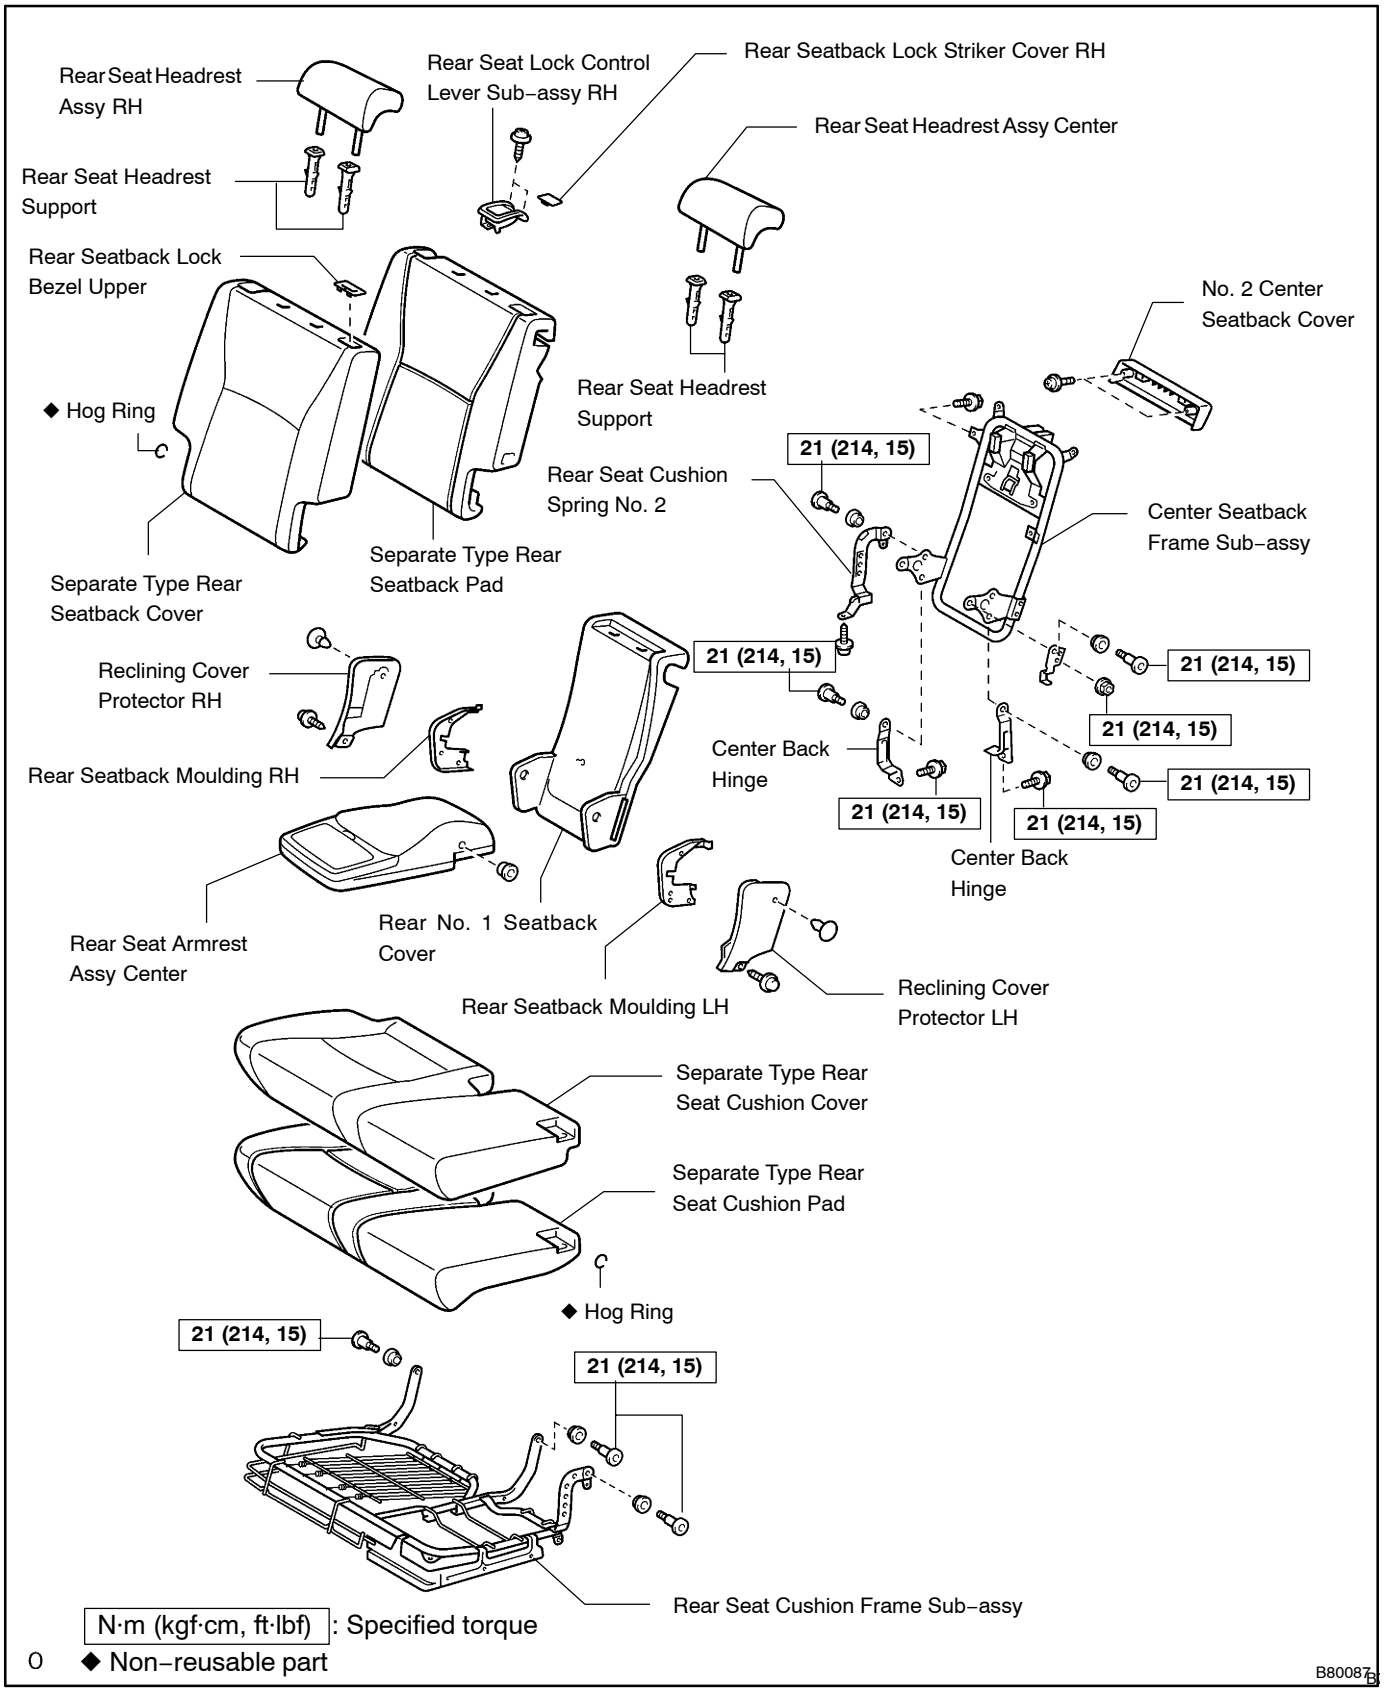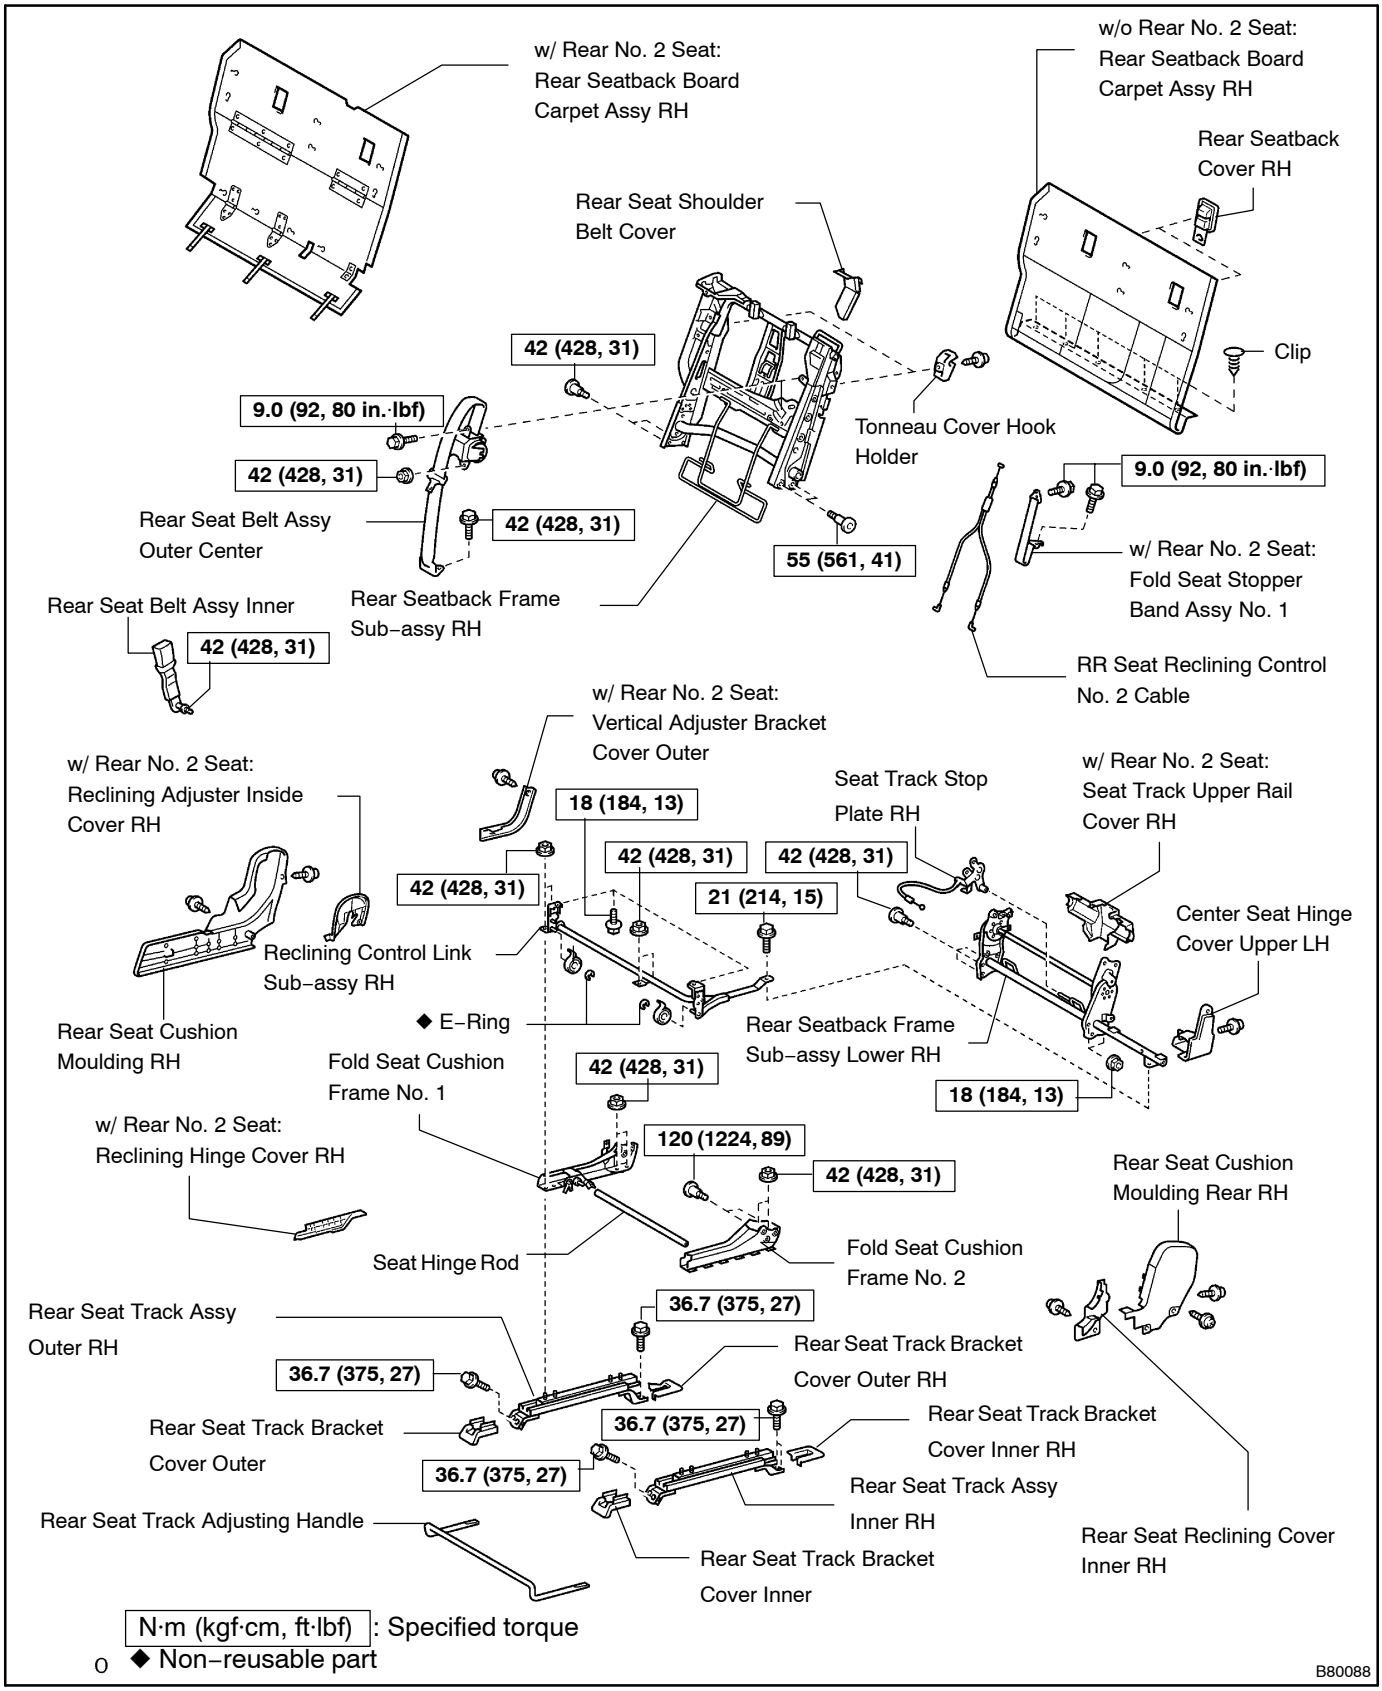


w/ Rear No. 2 Seat:
Rear Seatback Board
Carpet Assy RH
w/o Rear No. 2 Seat:
Rear Seatback Board
Carpet Assy RH
Rear Seatback
Cover RH
Rear Seat Shoulder
Belt Cover
42 (428, 31)
Clip
9.0 (92, 80 in.·lbf)
Tonneau Cover Hook
Holder
42 (428, 31)
9.0 (92, 80 in.·lbf)
Rear Seat Belt Assy
Outer Center
42 (428, 31)
w/ Rear No. 2 Seat:
Fold Seat Stopper
Band Assy No. 1
55 (561, 41)
Rear Seatback Frame
Sub–assy RH
Rear Seat Belt Assy Inner
42 (428, 31)
RR Seat Reclining Control
No. 2 Cable
w/ Rear No. 2 Seat:
Vertical Adjuster Bracket
Cover Outer
w/ Rear No. 2 Seat:
Reclining Adjuster Inside
Cover RH
18 (184, 13)
Seat Track Stop
Plate RH
w/ Rear No. 2 Seat:
Seat Track Upper Rail
Cover RH
42 (428, 31)
42 (428, 31)
42 (428, 31)
21 (214, 15)
Center Seat Hinge
Cover Upper LH
Reclining Control Link
Sub–assy RH
◆ E–Ring
Rear Seat Cushion
Moulding RH
Rear Seatback Frame
Sub–assy Lower RH
Fold Seat Cushion
Frame No. 1
42 (428, 31)
18 (184, 13)
w/ Rear No. 2 Seat:
Reclining Hinge Cover RH
120 (1224, 89)
42 (428, 31)
Rear Seat Cushion
Moulding Rear RH
Seat Hinge Rod
Fold Seat Cushion
Frame No. 2
36.7 (375, 27)
Rear Seat Track Assy
Outer RH
Rear Seat Track Bracket
Cover Outer RH
36.7 (375, 27)
Rear Seat Track Bracket
Cover Outer
36.7 (375, 27)
Rear Seat Track Bracket
Cover Inner RH
36.7 (375, 27)
Rear Seat Track Assy
Inner RH
Rear Seat Track Adjusting Handle
Rear Seat Reclining Cover
Inner RH
Rear Seat Track Bracket
Cover Inner
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
B80088