
TRANSMITTER BATTERY

730KU–01

REPLACEMENT

1. REMOVE TRANSMITTER SUB–ASSY, DOOR CONTROL (See page 73–11)

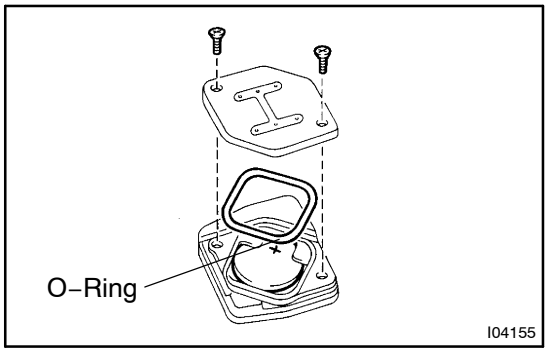


2. REPLACE TRANSMITTER BATTERY

(a) Remove the 2 screws and cover.

(b) Remove the transmitter battery (lithium battery).

NOTICE:

- **Do not push the terminals with your finger.**
- **Do not forcibly remove the battery (lithium battery) by prying it out. This may deform the terminals and damage the transmitter.**

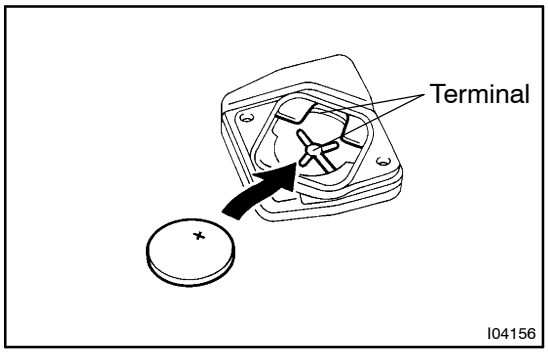

(c) Install the transmitter battery (lithium battery) as shown in the illustration.

NOTICE:

Face the battery upward, and take care not to deform the terminals.

(d) Check that the O–ring is not distorted or out of place, and then install the cover.

(e) Tighten the 2 screws.

NOTICE:

Fully tighten the screws. If the screws are loose, the battery (lithium battery) and terminals may not make contact properly.