
76188–01

REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03–2).

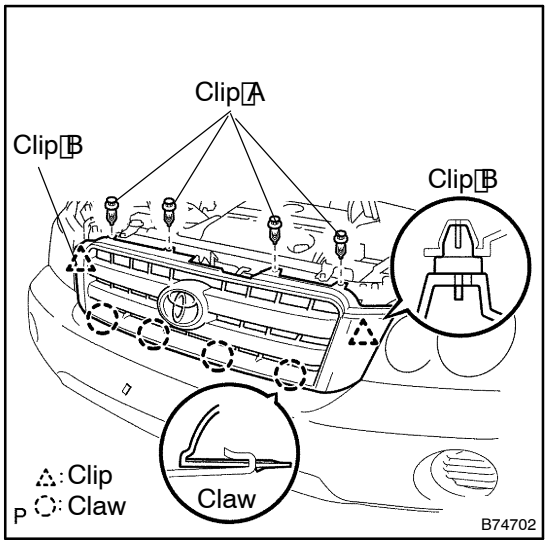


1. REMOVE RADIATOR GRILLE

(a) Using a screwdriver, disengage the 4 claws and remove the 4 clips labeled A, 2 clips labeled B and grille.

HINT:

Tape the screwdriver tip before use.

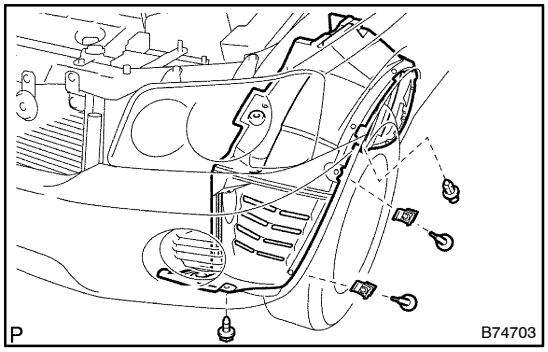

2. REMOVE FRONT FENDER SPLASH SHIELD SUB–ASSY LH

(a) Remove the screw and 3 clips.

(b) Partially remove the fender liner.


HINT:

It is not necessary to fully remove the fender liner completely. Partially remove it so that the bumper cover can be removed in step (4).

3. REMOVE FRONT FENDER SPLASH SHIELD SUB–ASSY RH

HINT:

Use the same procedure described for the LH side.

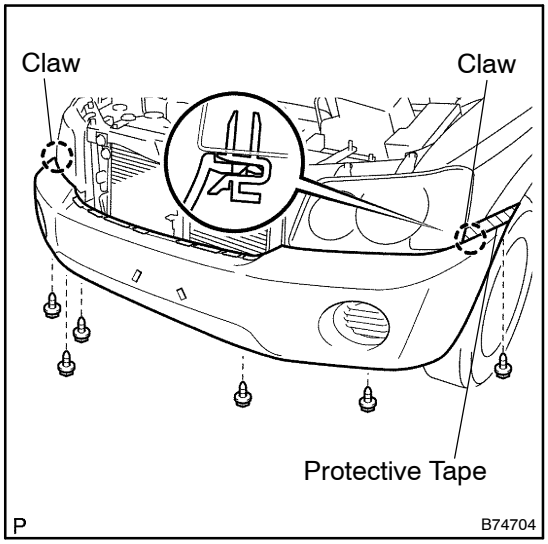

4. REMOVE FRONT BUMPER COVER

(a) Put protective tape under the front fender.

(b) Remove the 6 screws.


(c) Using a screwdriver, disengage the 2 claws and remove the bumper cover.

HINT:

Tape the screwdriver tip before use.

(d) w/ Fog lamp:
Disconnect the 2 connectors.

5. REMOVE FRONT BUMPER ENERGY ABSORBER

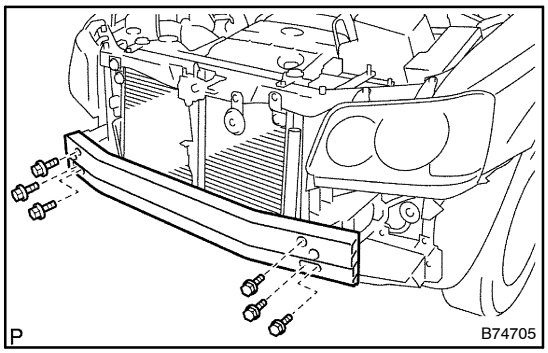


6. REMOVE FRONT BUMPER REINFORCEMENT

(a) Remove the 6 bolts and reinforcement.

7. REMOVE FOG LAMP ASSY LH (W/ FOG LAMP)

8. REMOVE FOG LAMP ASSY RH (W/ FOG LAMP)

9. REMOVE FRONT BUMPER HOLE COVER (W/O FOG LAMP)

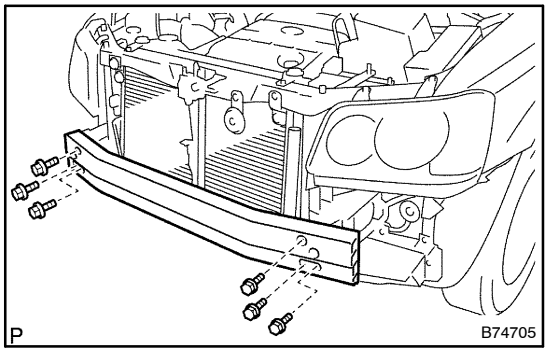

10. INSTALL FRONT BUMPER REINFORCEMENT

(a) Install the reinforcement with the 6 bolts.
Torque: 77 N·m (780 kgf·cm, 57 ft·lbf)

11. INSTALL FRONT BUMPER COVER

(a) Install the bumper cover with the 6 screws.
Torque: 5.5 N·m (55 kgf·cm, 49 in.·lbf)