
77015–01

INSPECTION

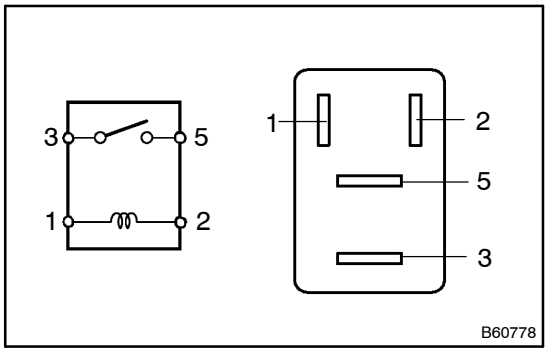


1. INSPECT RELAY (Marking: HORN)

(a) Remove the HORN relay from the engine room J/B.

(b) Measure the HORN relay resistance.

Standard:

Tester Connection	Specified Condition
3 – 5	10 kΩ or higher
3 – 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

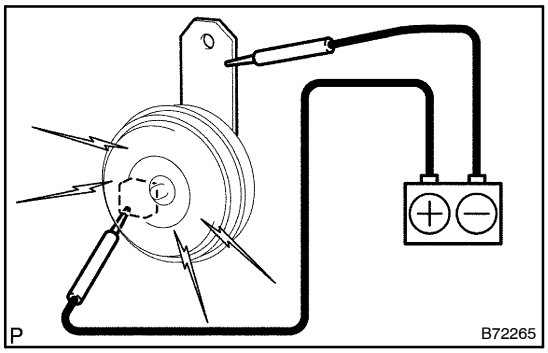


2. INSPECT HIGH PITCHED HORN ASSY

(a) Check operation of the horn.

Standard:

Measurement Condition	Specified Operation
Battery positive (+) → Terminal 1 Battery negative (–) → Horn bracket	Horn sounds

If the result is not as specified, replace the horn assy.

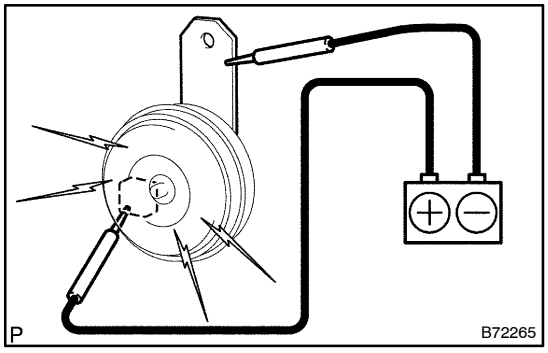

3. INSPECT LOW PITCHED HORN ASSY

(a) Check operation of the horn.

Standard:

Measurement Condition	Specified Operation
Battery positive (+) → Terminal 1 Battery negative (–) → Horn bracket	Horn sounds

If the result is not as specified, replace the horn assy.