
WATER PUMP ASSY (3MZ–FE)

160VM–01

INSPECTION

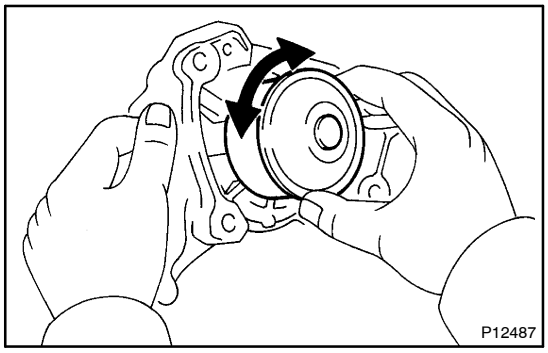

1. INSPECT WATER PUMP ASSY

(a) Turn the pulley, and check that the water pump bearing moves smoothly and noiselessly.

If the bearing moves roughly or noisily, replace the water pump assy.

(b) Visually check the drain hole and the air hole for coolant leakage.

If leakage is found, replace the water pump assy.

If engine coolant has leaked onto the timing belt, replace the timing belt.