
# QUARTER OUTER PANEL (CUT)

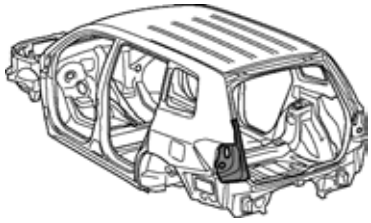

F28418A


With the quarter panel removed.

Symbol meaning

| | | |
|---|---|---|
| REMOVAL | : Remove Weld Points | : Cut and Join Location |
| INSTALLATION | : Plug Weld | : Butt Weld |

F28418B

**REMOVAL·INSTALLATION**

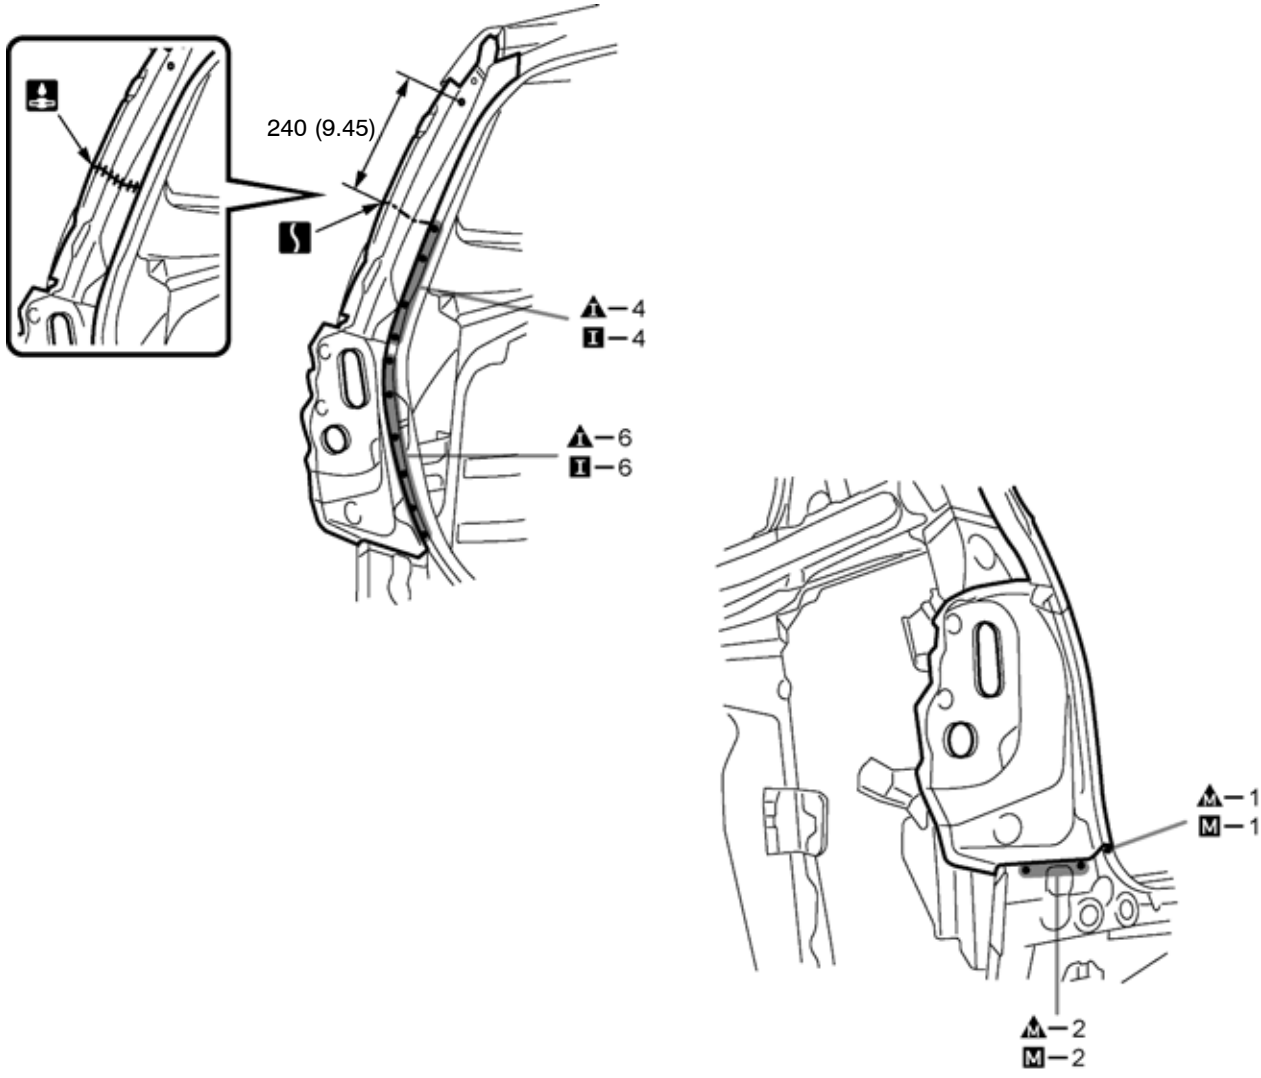


mm (in.)

F28418

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.