

(Cont. next page)

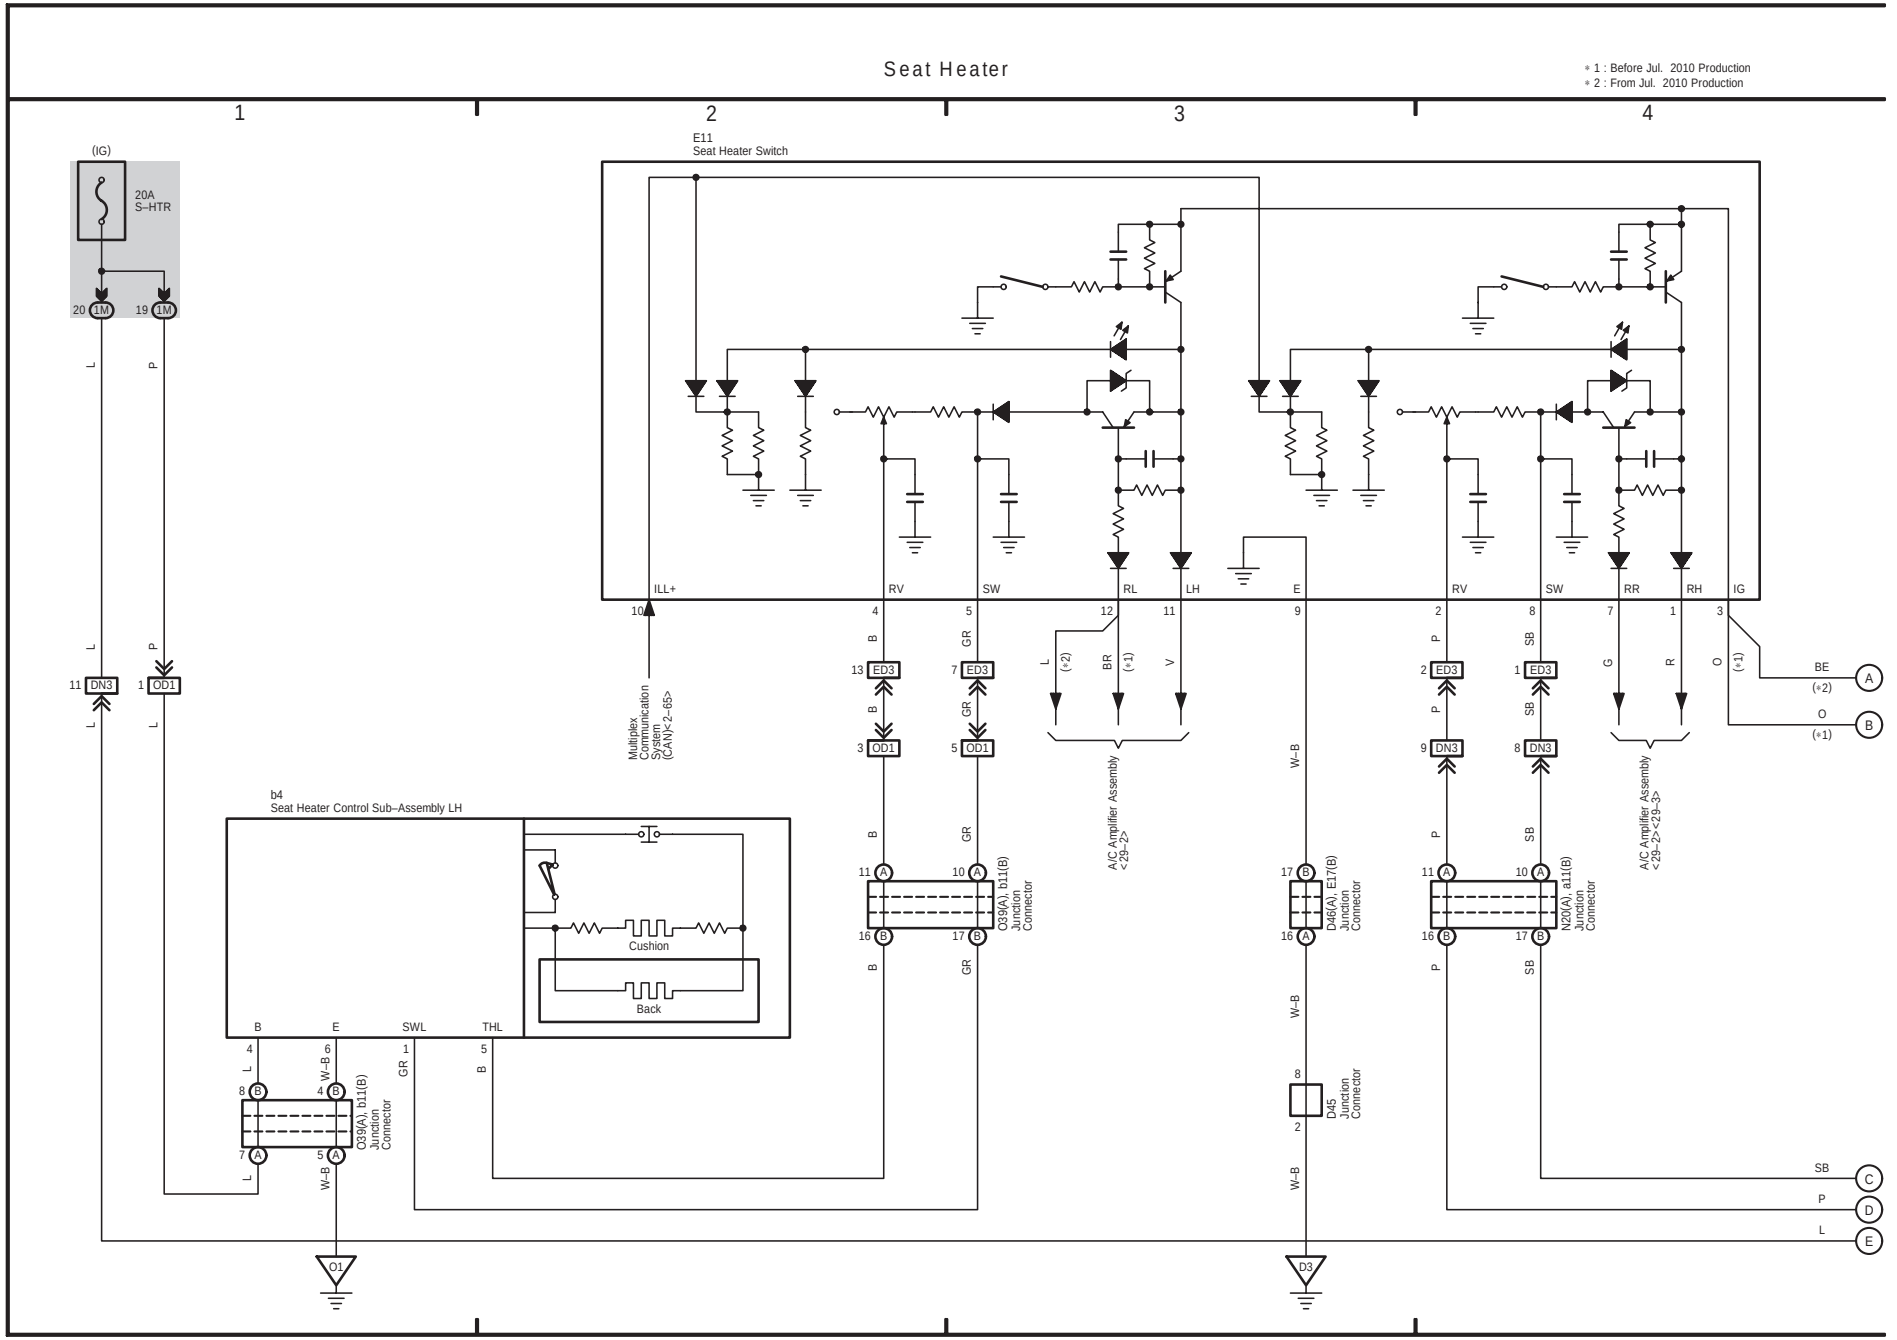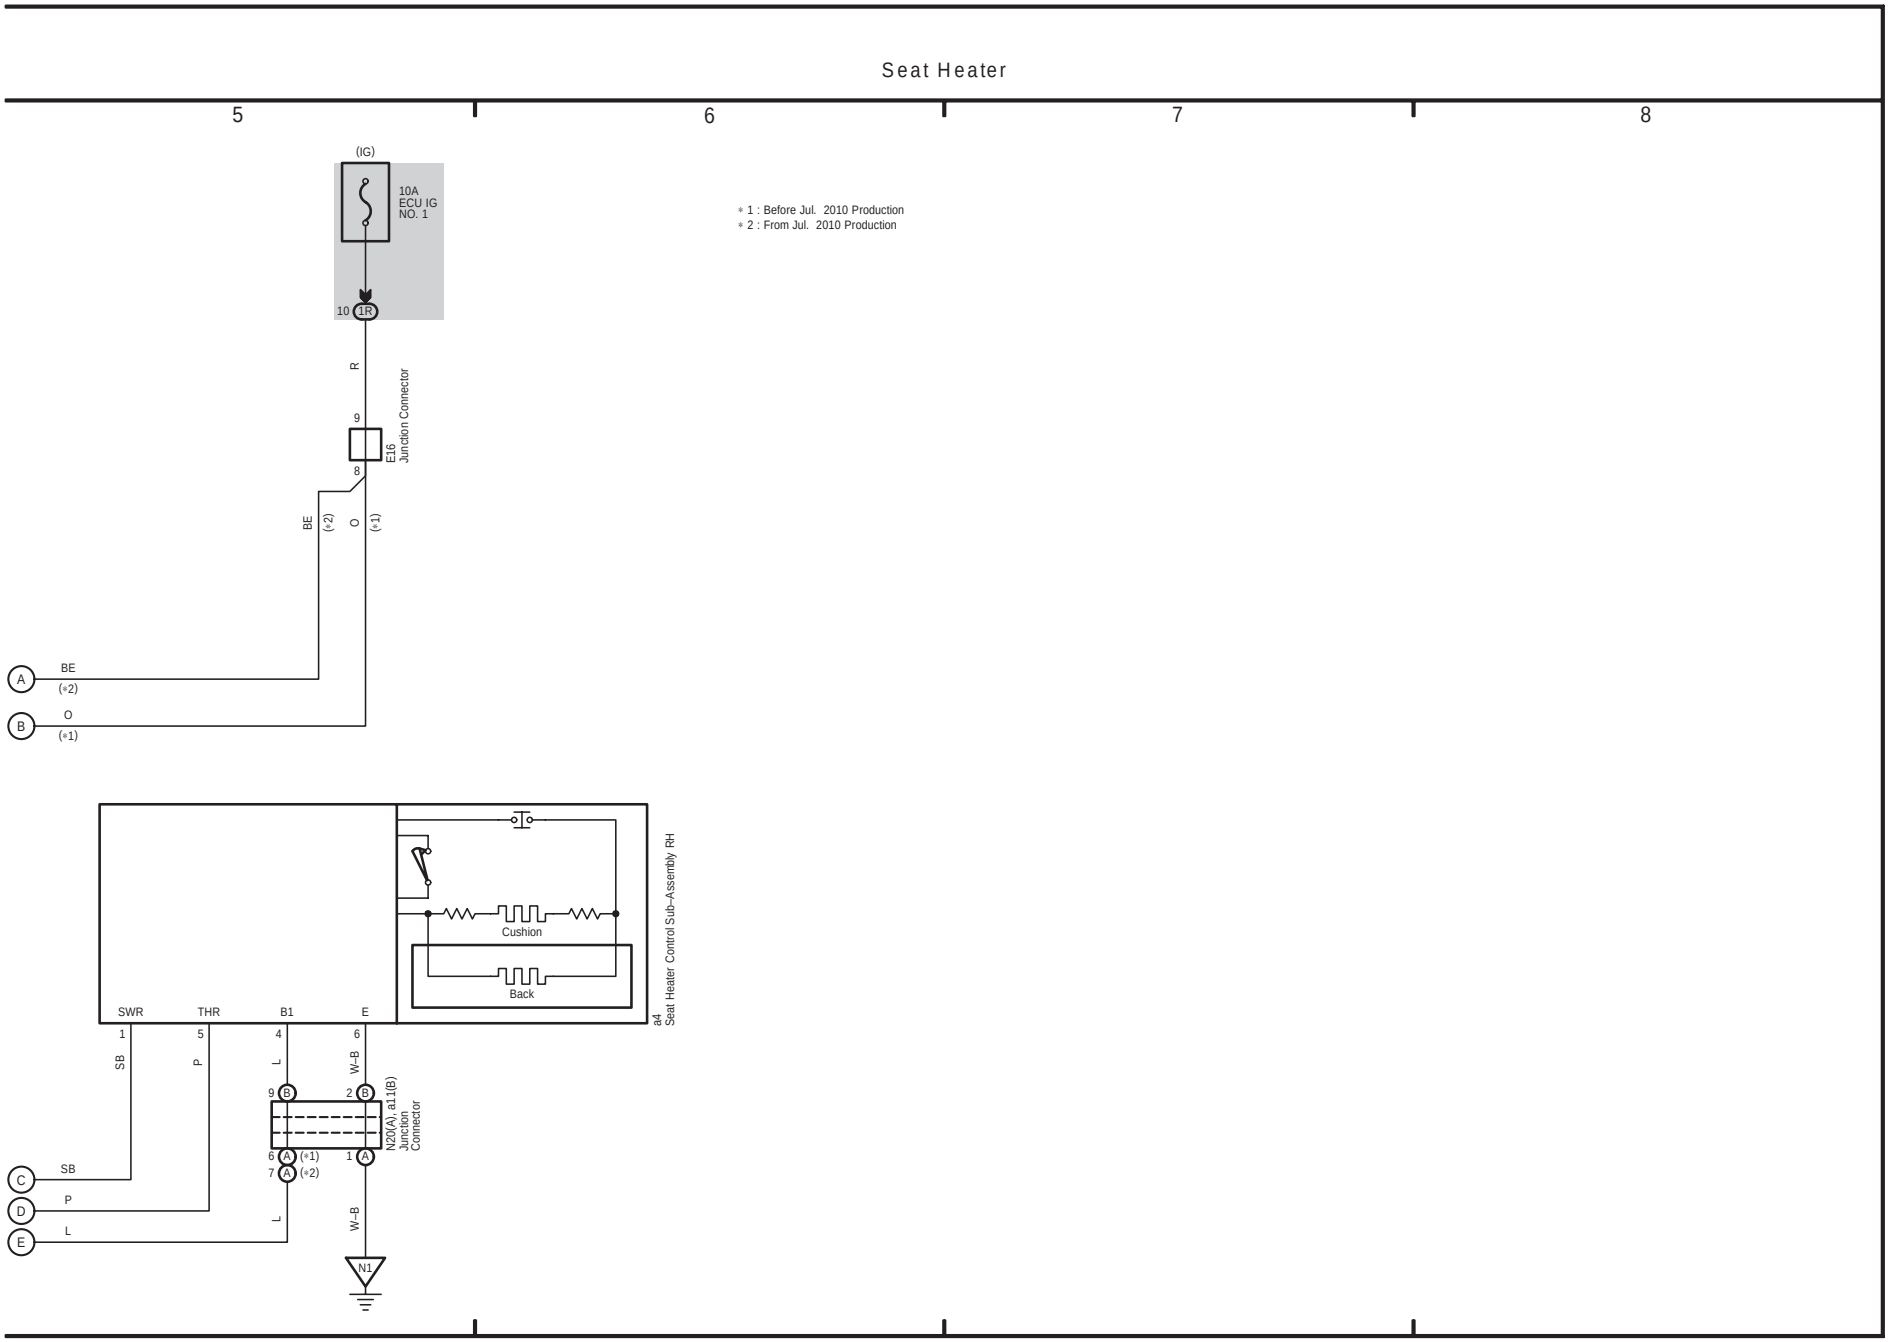


Seat Heater
5
6
7
8
(IG)
10A
ECU IG
NO. 1
10 1R
R
9
E16
Junction Connector
8
BE
(*2)
O
(*1)
A
BE
(*2)
B
O
(*1)
* 1 : Before Jul. 2010 Production
* 2 : From Jul. 2010 Production
Cushion
Back
a4
Seat Heater Control Sub-Assembly RH
SWR
THR
B1
E
1
5
4
6
SB
P
L
W-B
9 B
2 B
N20(A), a11(B)
Junction
Connector
6 A (*1)
7 A (*2)
1 A
C
SB
D
P
E
L
L
W-B
N1