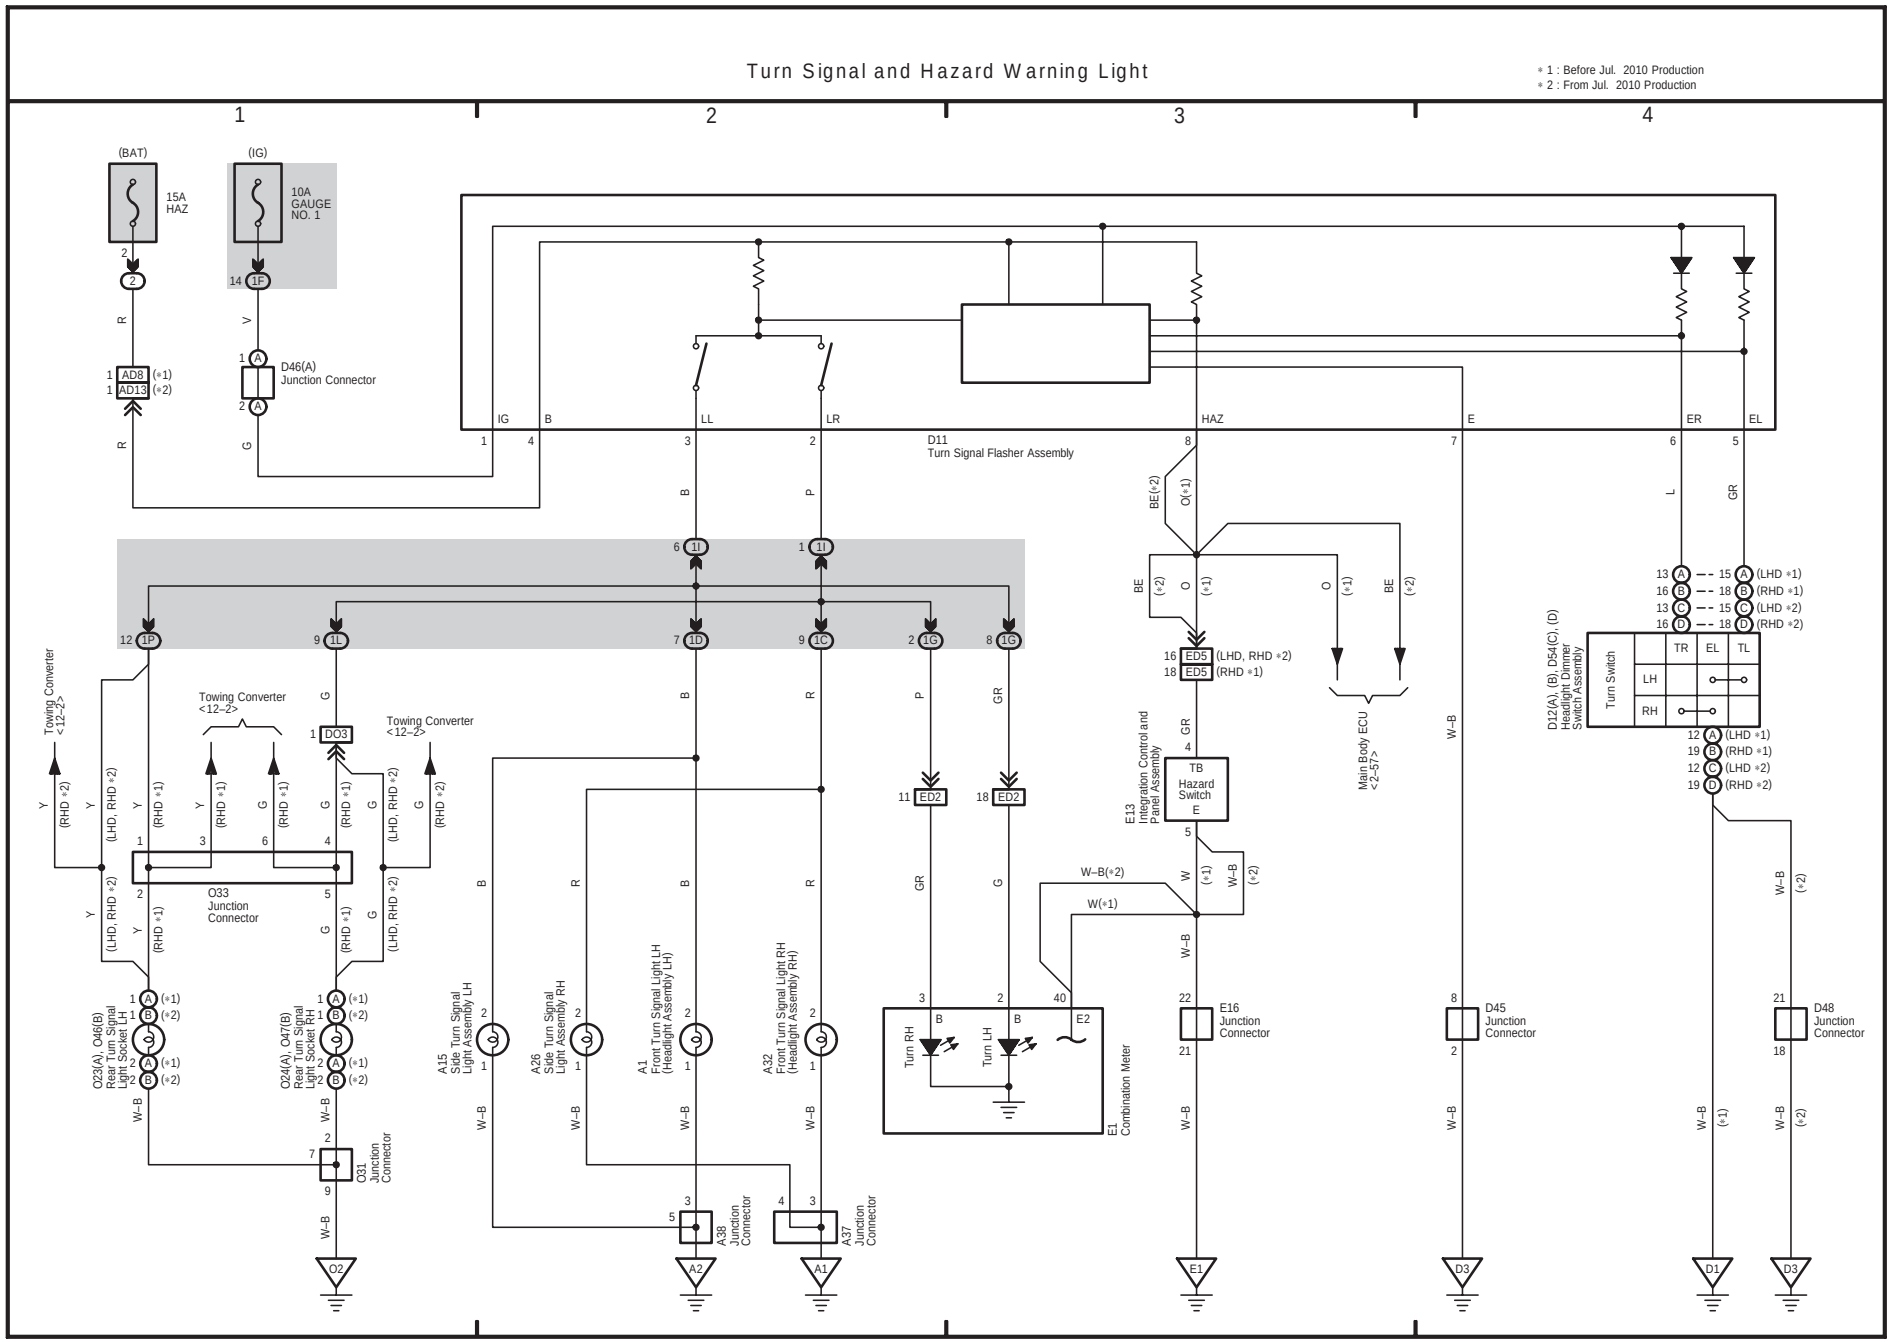

Turn Signal and Hazard Warning Light
* 1 : Before Jul. 2010 Production
* 2 : From Jul. 2010 Production
1
2
3
4
(BAT)
(IG)
15A HAZ
10A GAUGE NO. 1
D46(A) Junction Connector
AD8 (*1)
AD13 (*2)
D11 Turn Signal Flasher Assembly
IG
B
LL
LR
HAZ
E
ER
EL
Towing Converter <12–2>
O33 Junction Connector
DO3
O23(A), O46(B) Rear Turn Signal Light Socket LH
O24(A), O47(B) Rear Turn Signal Light Socket RH
O31 Junction Connector
A15 Side Turn Signal Light Assembly LH
A26 Side Turn Signal Light Assembly RH
A1 Front Turn Signal Light LH (Headlight Assembly LH)
A32 Front Turn Signal Light RH (Headlight Assembly RH)
A38 Junction Connector
A37 Junction Connector
E1 Combination Meter
Turn RH
Turn LH
E13 Integration Control and Panel Assembly
TB Hazard Switch E
Main Body ECU <2–57>
E16 Junction Connector
D45 Junction Connector
D48 Junction Connector
D12(A), (B), D54(C), (D) Headlight Dimmer Switch Assembly
Turn Switch
TR
EL
TL
LH
RH
O2
A2
A1
E1
D3
D1