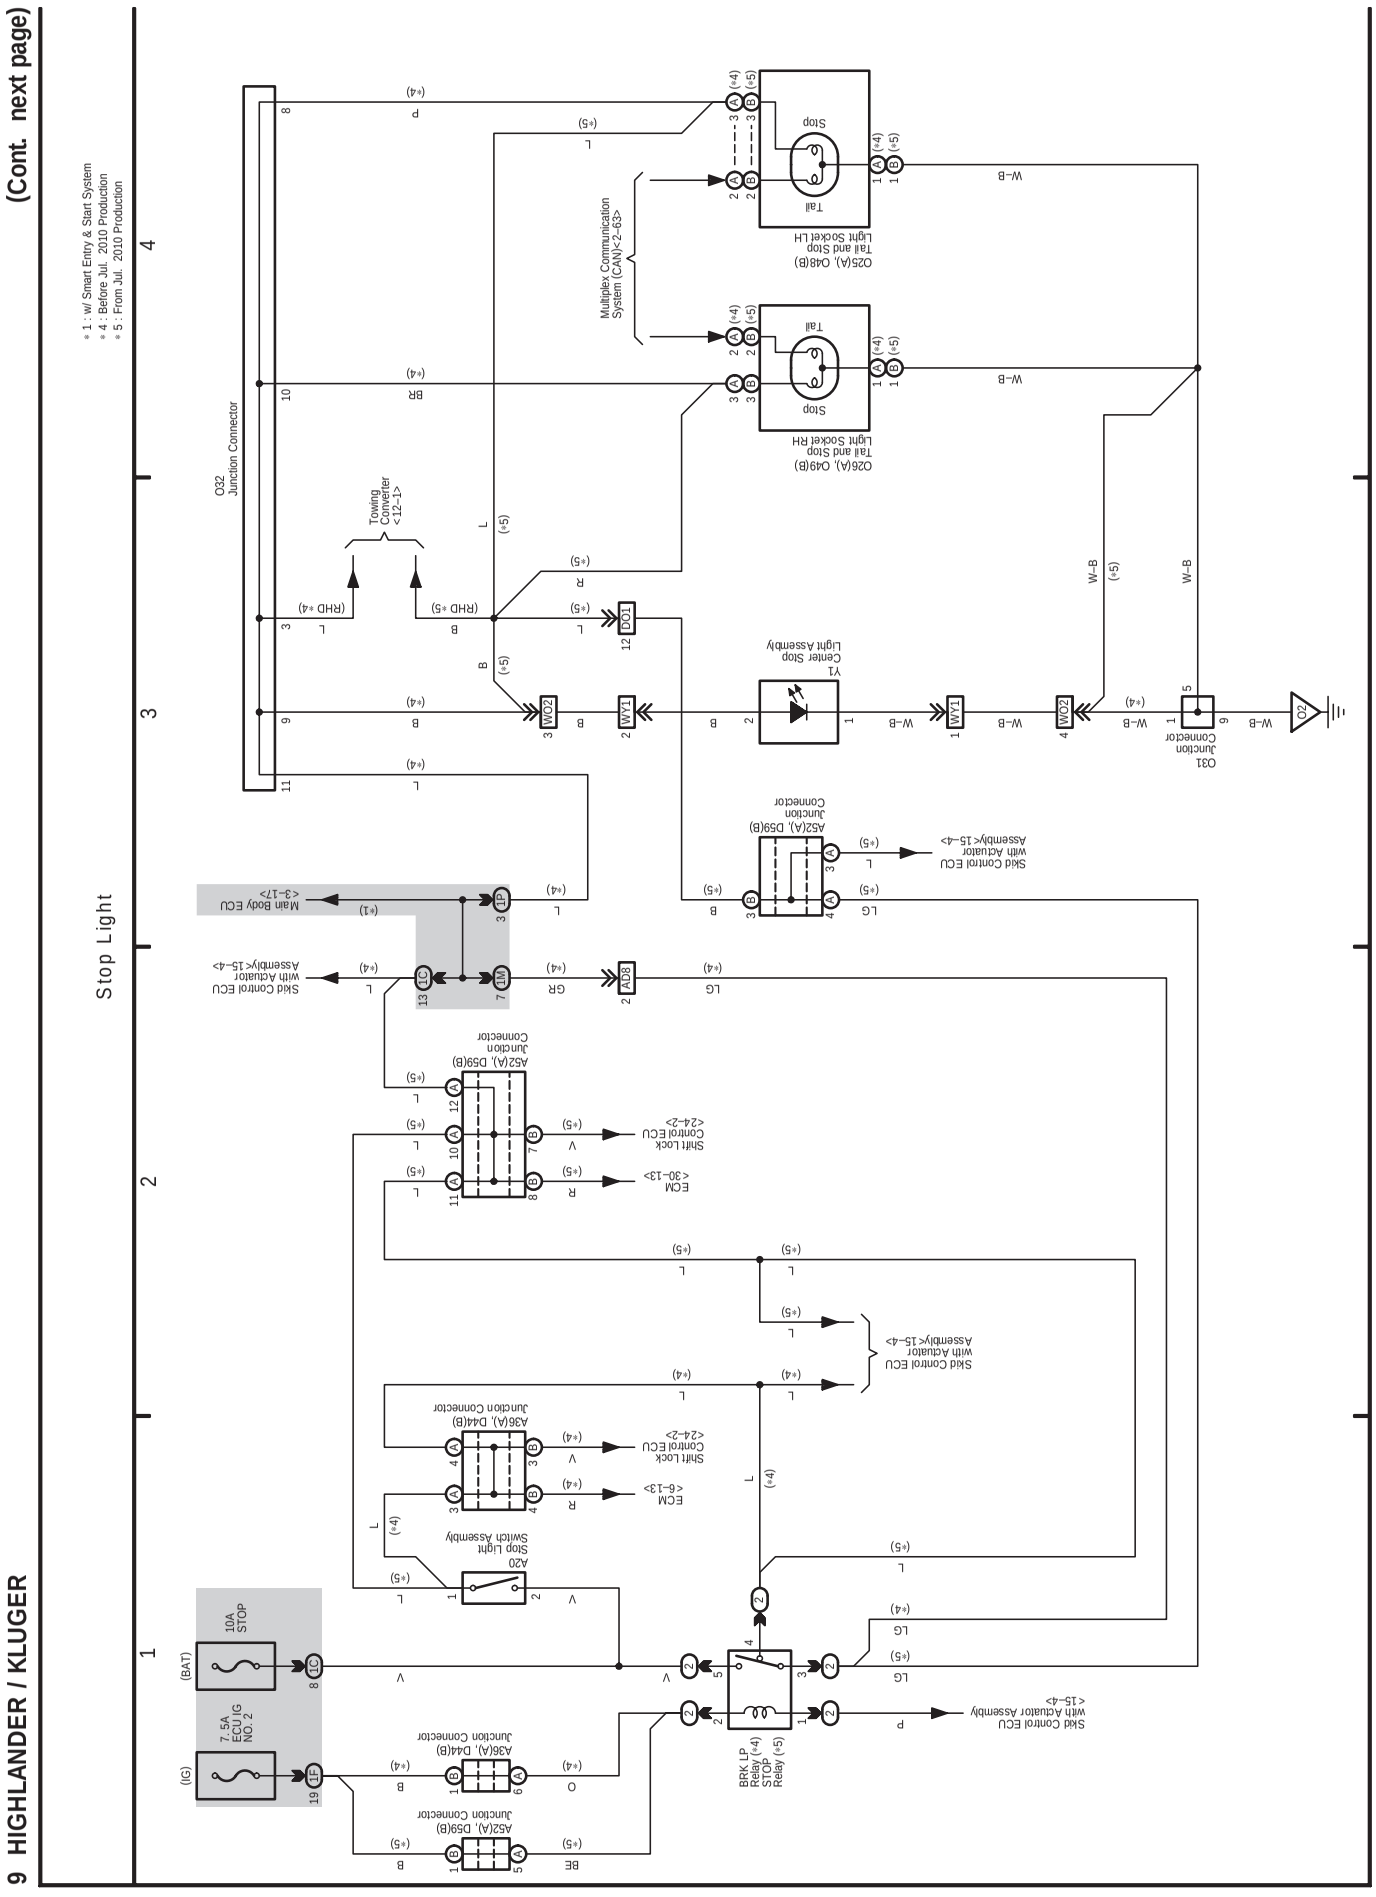
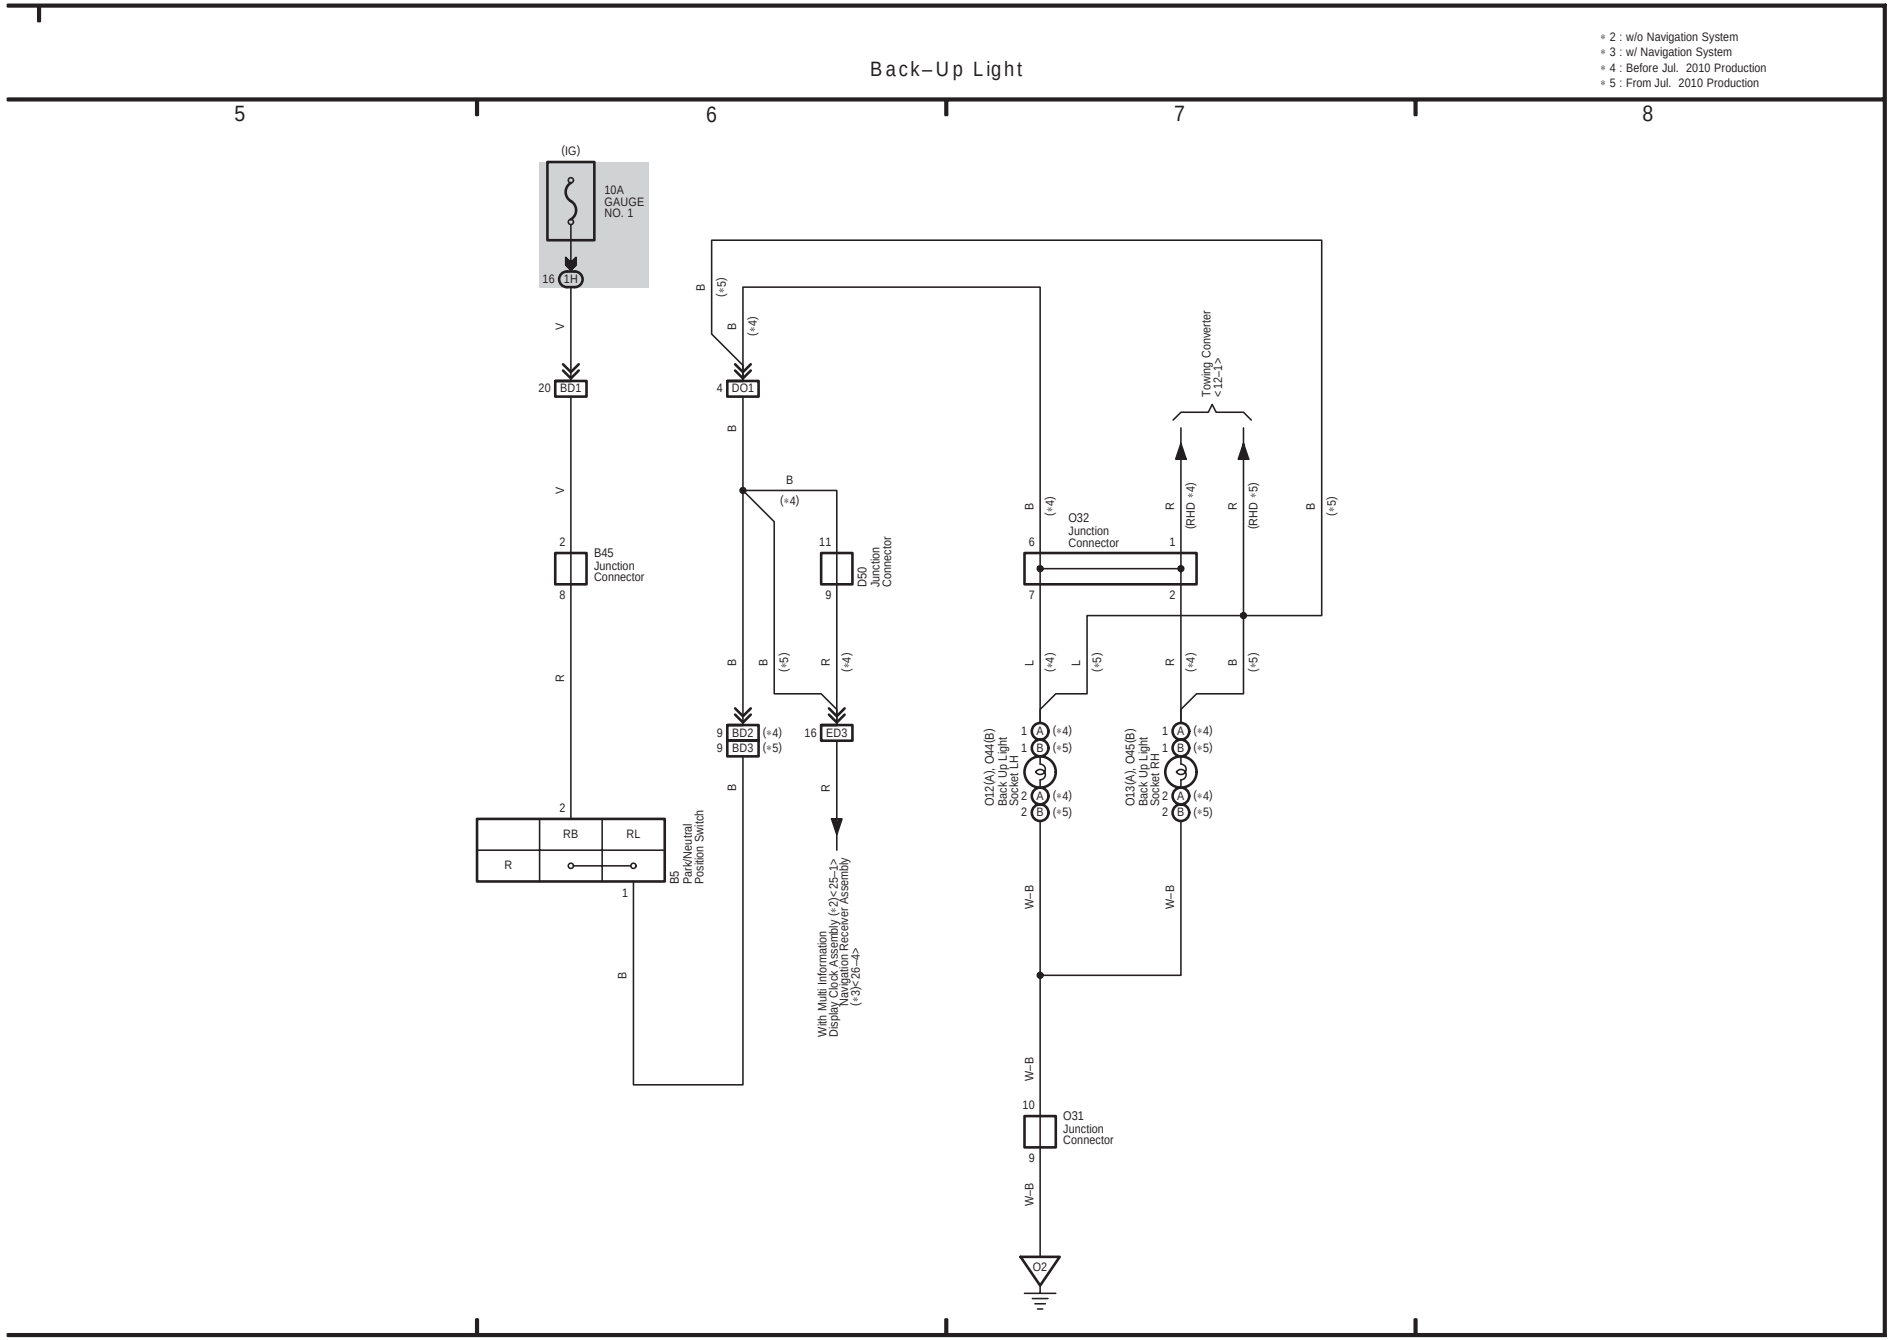

(Cont. next page)
9 HIGHLANDER / KLUGER
Stop Light
* 1 : w/ Smart Entry & Start System
* 4 : Before Jul. 2010 Production
* 5 : From Jul. 2010 Production
Multiplex Communication System (CAN)<2-63>
O25(A), O48(B) Tail and Stop Light Socket LH
O26(A), O49(B) Tail and Stop Light Socket RH
O32 Junction Connector
Towing Converter <12-15>
Center Stop Light Assembly
O31 Junction Connector
O2
A52(A), D59(B) Junction Connector
A36(A), D44(B) Junction Connector
A20 Stop Light Switch Assembly
BRK LP Relay (*4) STOP Relay (*5)
10A STOP
7.5A ECU IG NO. 2
(BAT)
(IG)
Skid Control ECU with Actuator Assembly <15-4>
Main Body ECU <3-17>
Shift Lock Control ECU <24-2>
ECM <30-13>
ECM <6-13>


Back–Up Light
∗ 2 : w/o Navigation System
∗ 3 : w/ Navigation System
∗ 4 : Before Jul. 2010 Production
∗ 5 : From Jul. 2010 Production
5
6
7
8
(IG)
10A GAUGE NO. 1
16 1H
V
20 BD1
V
2 B45 Junction Connector 8
R
2
RB
RL
R
1
B5 Park/Neutral Position Switch
B
B (∗5)
B (∗4)
4 DO1
B
B (∗4)
11 D50 Junction Connector 9
B
B (∗5)
R (∗4)
9 BD2 (∗4)
9 BD3 (∗5)
16 ED3
B
R
With Multi Information Display Clock Assembly (∗2)<25–1> Navigation Receiver Assembly (∗3)<26–4>
Towing Converter <12–1>
B (∗4)
6 O32 Junction Connector 7
1 2
R (RHD ∗4)
R (RHD ∗5)
B (∗5)
L (∗4)
L (∗5)
R (∗4)
B (∗5)
O12(A), O44(B) Back Up Light Socket LH
O13(A), O45(B) Back Up Light Socket RH
1 A (∗4)
1 B (∗5)
2 A (∗4)
2 B (∗5)
W–B
W–B
W–B
10 O31 Junction Connector 9
W–B
O2

M