
* 1:4WD
* 3:Before Jan. 2009 Production
* 4:From Jan. 2009 Production
* 5:Before Jul. 2010 Production
* 6:From Jul. 2010 Production

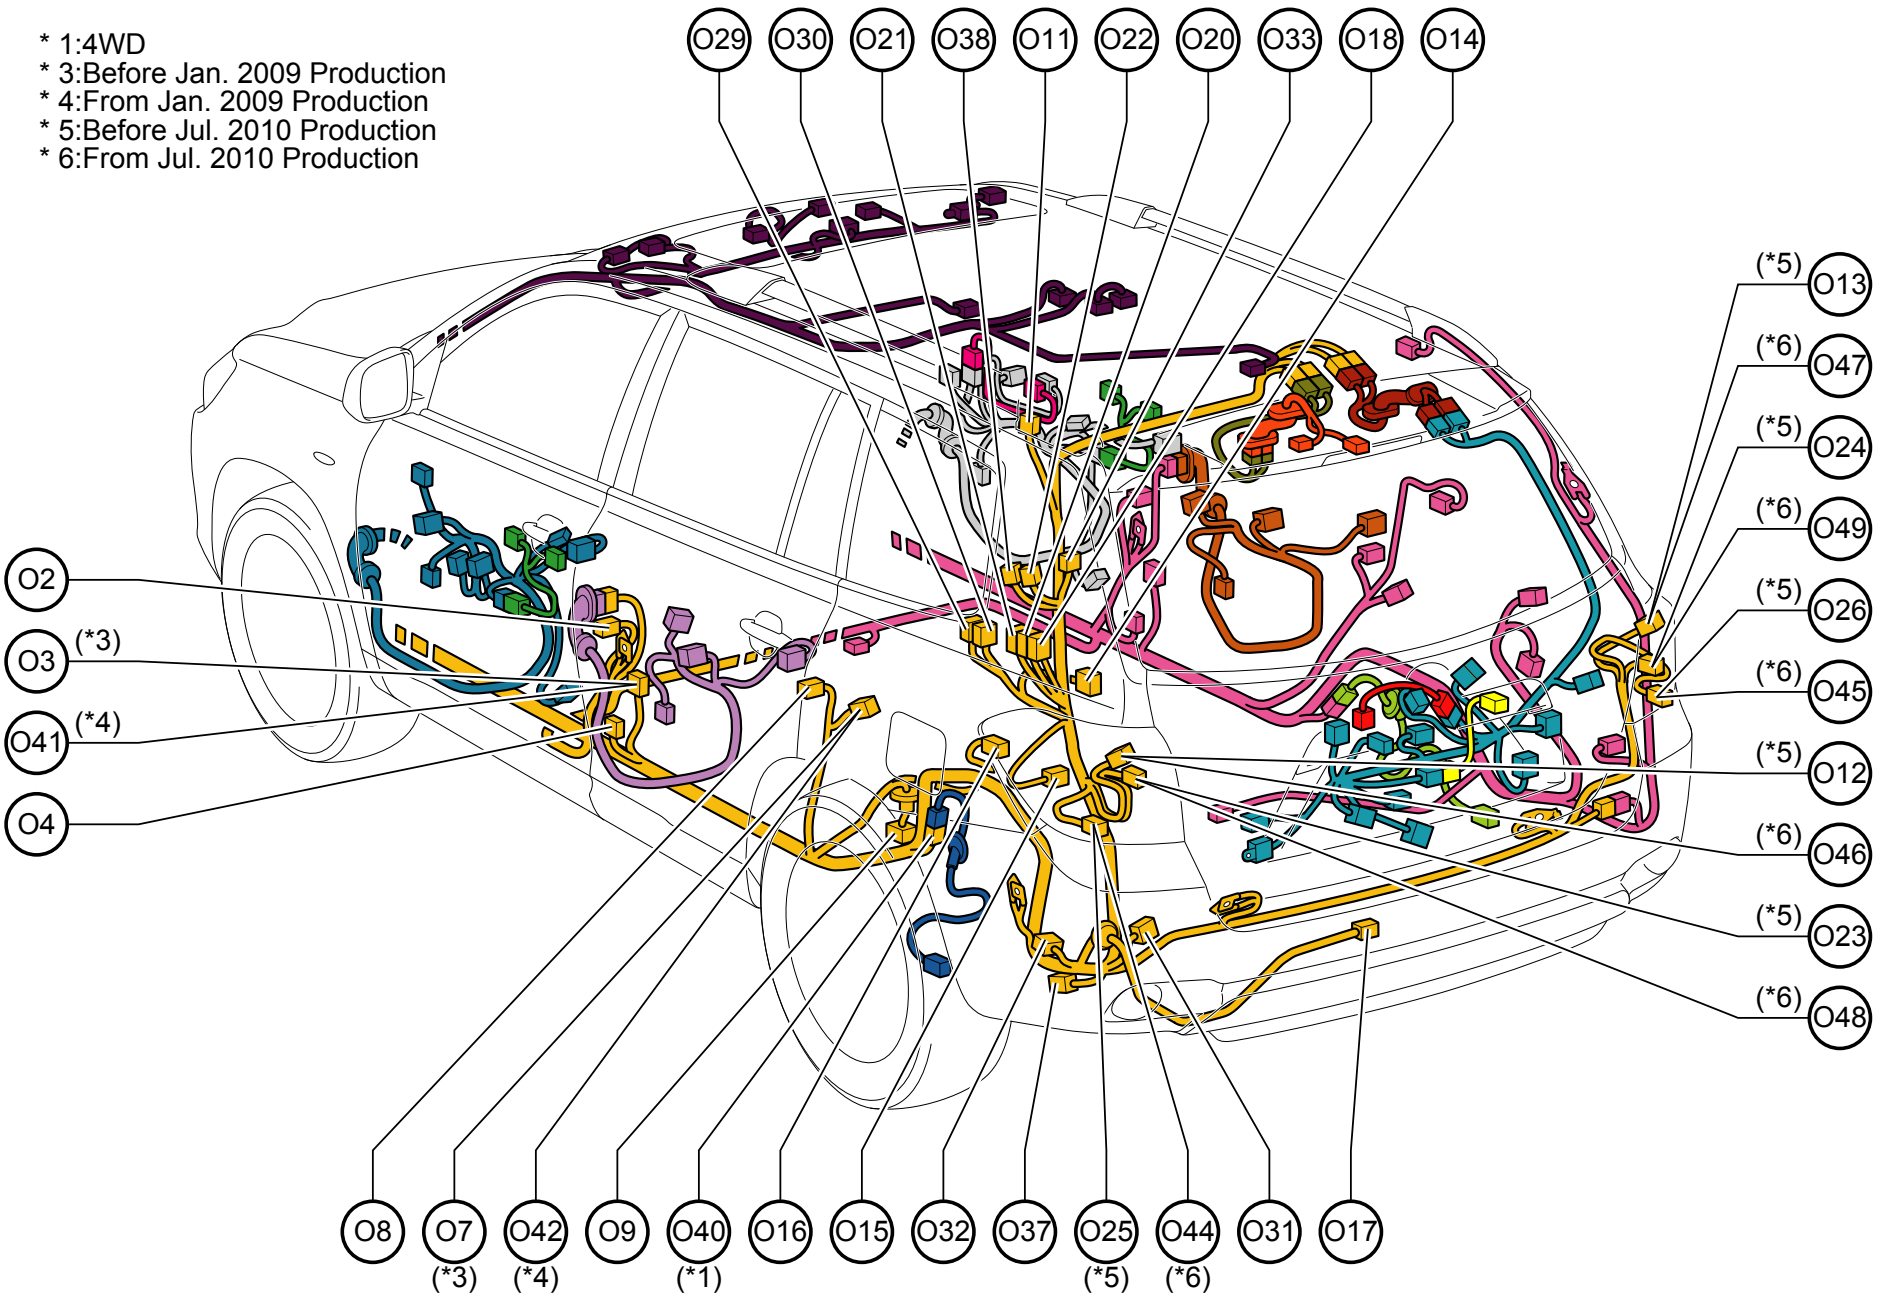


O 2 Front Door Courtesy Light Switch Assembly LH
O 3 Front Side Airbag Sensor Assembly LH
O 4 Front Pretensioner LH
O 7 Rear Side Airbag Sensor Assembly LH
O 8 Rear Door Courtesy Light Switch Assembly LH
O 9 Fuel Pump , Fuel Sender Gauge Assembly
O 11 Curtain Shield Airbag Assembly LH
O 12 Back Up Light Socket LH
O 13 Back Up Light Socket RH
O 14 Back Door Motor Unit
O 15 Power Outlet Socket Assembly
O 16 Rear Indoor Electrical Key Oscillator
O 17 Outside Luggage Electrical Key Antenna
O 18 Junction Connector
O 20 Junction Connector
O 21 Junction Connector
O 22 Door Control Receiver
O 23 Rear Turn Signal Light Socket LH
O 24 Rear Turn Signal Light Socket RH
O 25 Tail and Stop Light Socket LH
O 26 Tail and Stop Light Socket RH
O 29 No.1 Glass Hatch Junction Relay
O 30 No.2 Glass Hatch Junction Relay
O 31 Junction Connector
O 32 Junction Connector
O 33 Junction Connector
O 37 Towing Converter
O 38 Door Control Receiver
O 40 Rear Speed Sensor LH
O 41 Front Side Airbag Sensor Assembly LH
O 42 Rear Side Airbag Sensor Assembly LH
O 44 Back Up Light Socket LH
O 45 Back Up Light Socket RH
O 46 Rear Turn Signal Light Socket LH
O 47 Rear Turn Signal Light Socket RH
O 48 Tail and Stop Light Socket LH
O 49 Tail and Stop Light Socket RH


O 2
White




O 3
Yellow

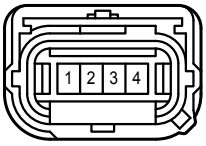

O 4
Black



O 7
Yellow

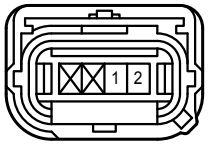


O 8
White



O 9
White



O 11
Black

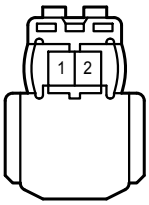


O 12
Gray




O 13
Gray




O 14
White

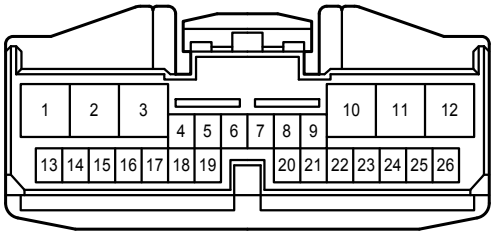


O 15
White




O 16
White

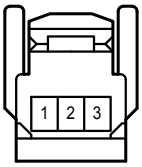


O 17
White

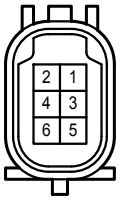


O 18
Black




O 20
White




O 21
Gray




O 22
White

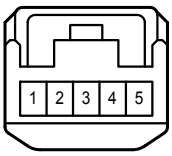


O 23
White




O 24
White




O 25
Black

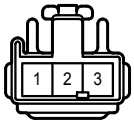


O 26
Black

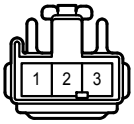


O 29
Gray

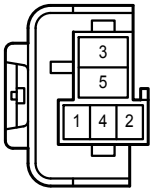


O 30
Gray

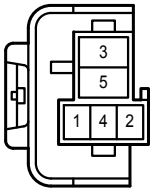


O 31
Black

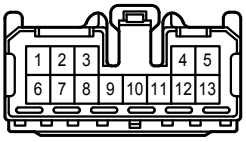

O 32
White

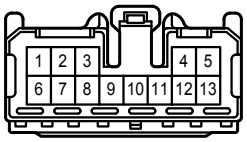


O 33
White

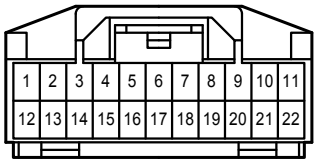


O 37
White




O 38
White

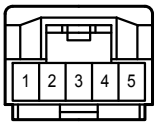


O 40
Black




O 41
Yellow

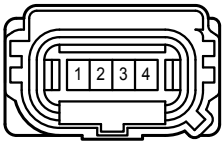


O 42
Yellow

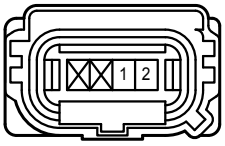


O 44
Black




O 45
Black




O 46
Gray



O 47
Gray



O 48
White

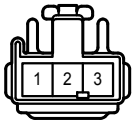

O 49
White

