



B13
B15
B17
B9
B20
B24
B22
B25
B14
B23
B21
B10
B19
B11
B7
B6
B26
B16
B18
B12
B8
B5
B4

B 4 Electronically Controlled Transmission Solenoid
B 5 Park/Neutral Position Switch
B 6 Transmission Revolution Sensor (Turbine)
B 7 Transmission Revolution Sensor (Counter Gear)
B 8 VSV (ACM)
B 9 Noise Filter (Ignition Bank 1)
B 10 Mass Air Flow Meter
B 11 E.F.I. Engine Coolant Temperature Sensor
B 12 Starter Assembly
B 13 Fuel Injector Assembly No.1
B 14 Fuel Injector Assembly No.2
B 15 Fuel Injector Assembly No.3
B 16 Fuel Injector Assembly No.4
B 17 Fuel Injector Assembly No.5
B 18 Fuel Injector Assembly No.6
B 19 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
B 20 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B 21 Crankshaft Position Sensor
B 22 VVT Sensor (Bank 1 Intake Side)
B 23 VVT Sensor (Bank 2 Intake Side)
B 24 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
B 25 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
B 26 Engine Oil Pressure Switch Assembly


B 4
Gray

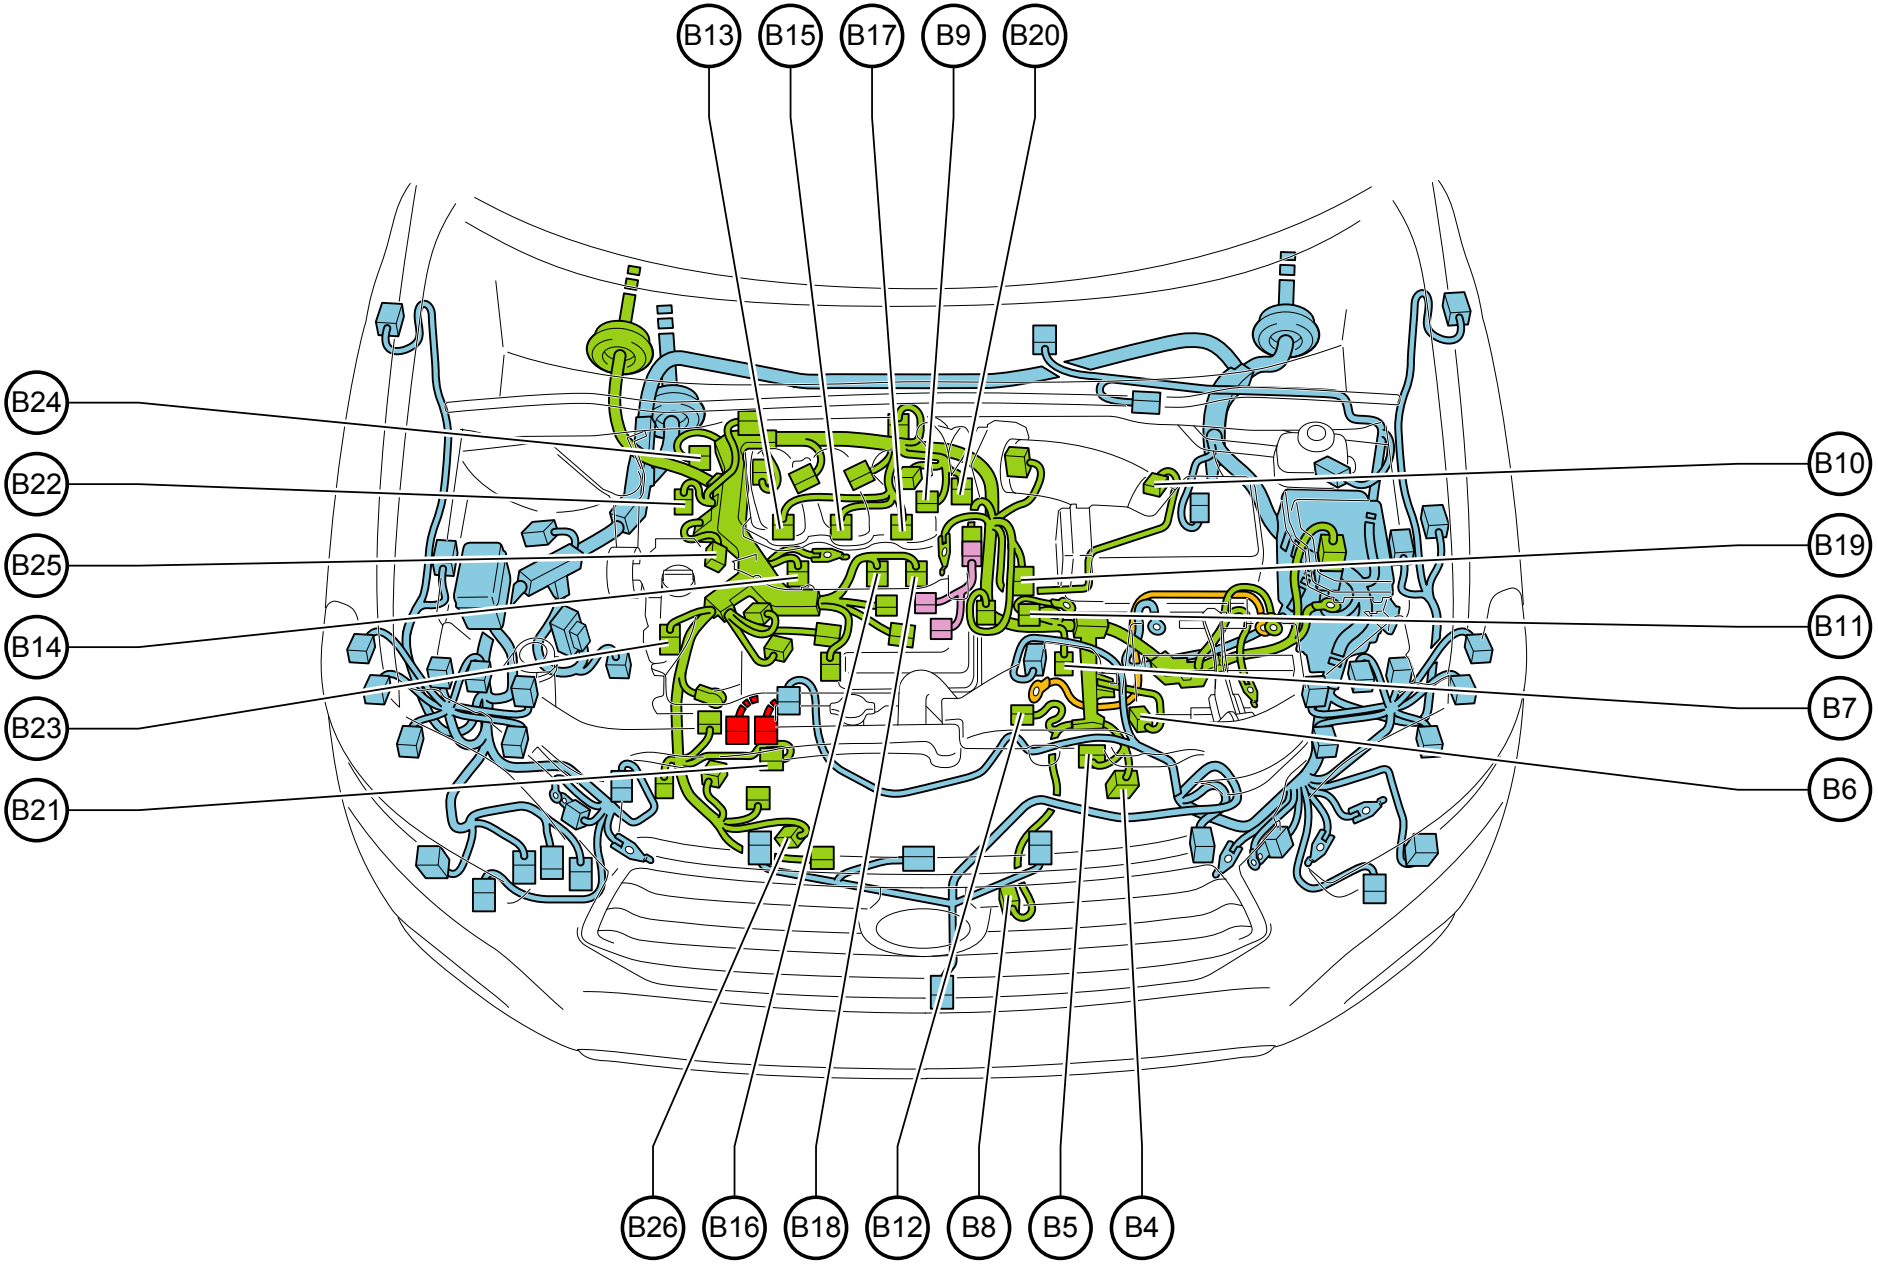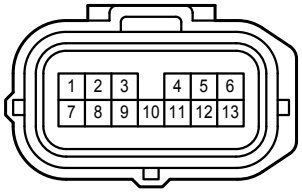


B 5
Gray

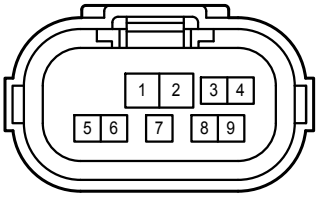


B 6
Black

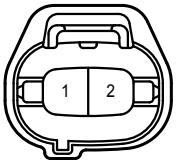


B 7
Black

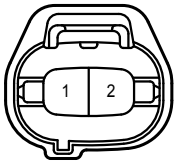

B 8
Black

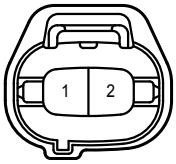

B 9
Gray

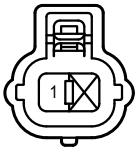

B 10
Black




B 11
Gray




B 12
Black




B 13
Brown




B 14
Brown




B 15
Brown




B 16
Brown



B 17
Brown



B 18
Brown




B 19
Dark Gray




B 20
Dark Gray




B 21
Black

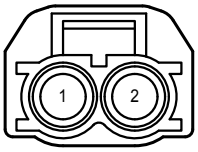

B 22
Black

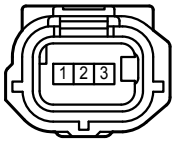

B 23
Black

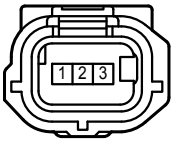

B 24
Black



B 25
Black



B 26
Gray

