


a7
N5
a6
a5
a1
a8
a10
a9
a3
a4
b10
b4
a11
N20
N19
a2
b2
O39
b11
O36
O5
b5

N	5	Side Airbag Squib Circuit RH
N	19	Front Seat Inner Belt Assembly RH
N	20	Junction Connector
O	5	Side Airbag Squib Circuit LH
O	36	Front Seat Inner Belt Assembly LH
O	39	Junction Connector
a	1	Front Power Seat Vertical Position Motor Assembly RH
a	2	Front Power Seat Slide Position Motor Assembly RH
a	3	Front Power Seat Lift Position Motor Assembly RH
a	4	Seat Heater Control Sub-Assembly RH
a	5	Front Power Seat Switch RH
a	6	Front Power Seat Cushion Control Motor Assembly RH
a	7	Seat Variable Cushion Switch RH
a	8	Lumbar Support Switch RH (Power Seat Switch Assembly RH)
a	9	Front Lumbar Support Forward and Back Motor Assembly RH
a	10	Front Power Seat Reclining Position Motor Assembly RH
a	11	Junction Connector
b	2	Front Power Seat Slide Position Motor Assembly LH
b	4	Seat Heater Control Sub-Assembly LH
b	5	Front Power Seat Switch LH
b	10	Front Power Seat Reclining Position Motor Assembly LH
b	11	Junction Connector


N 5
Yellow

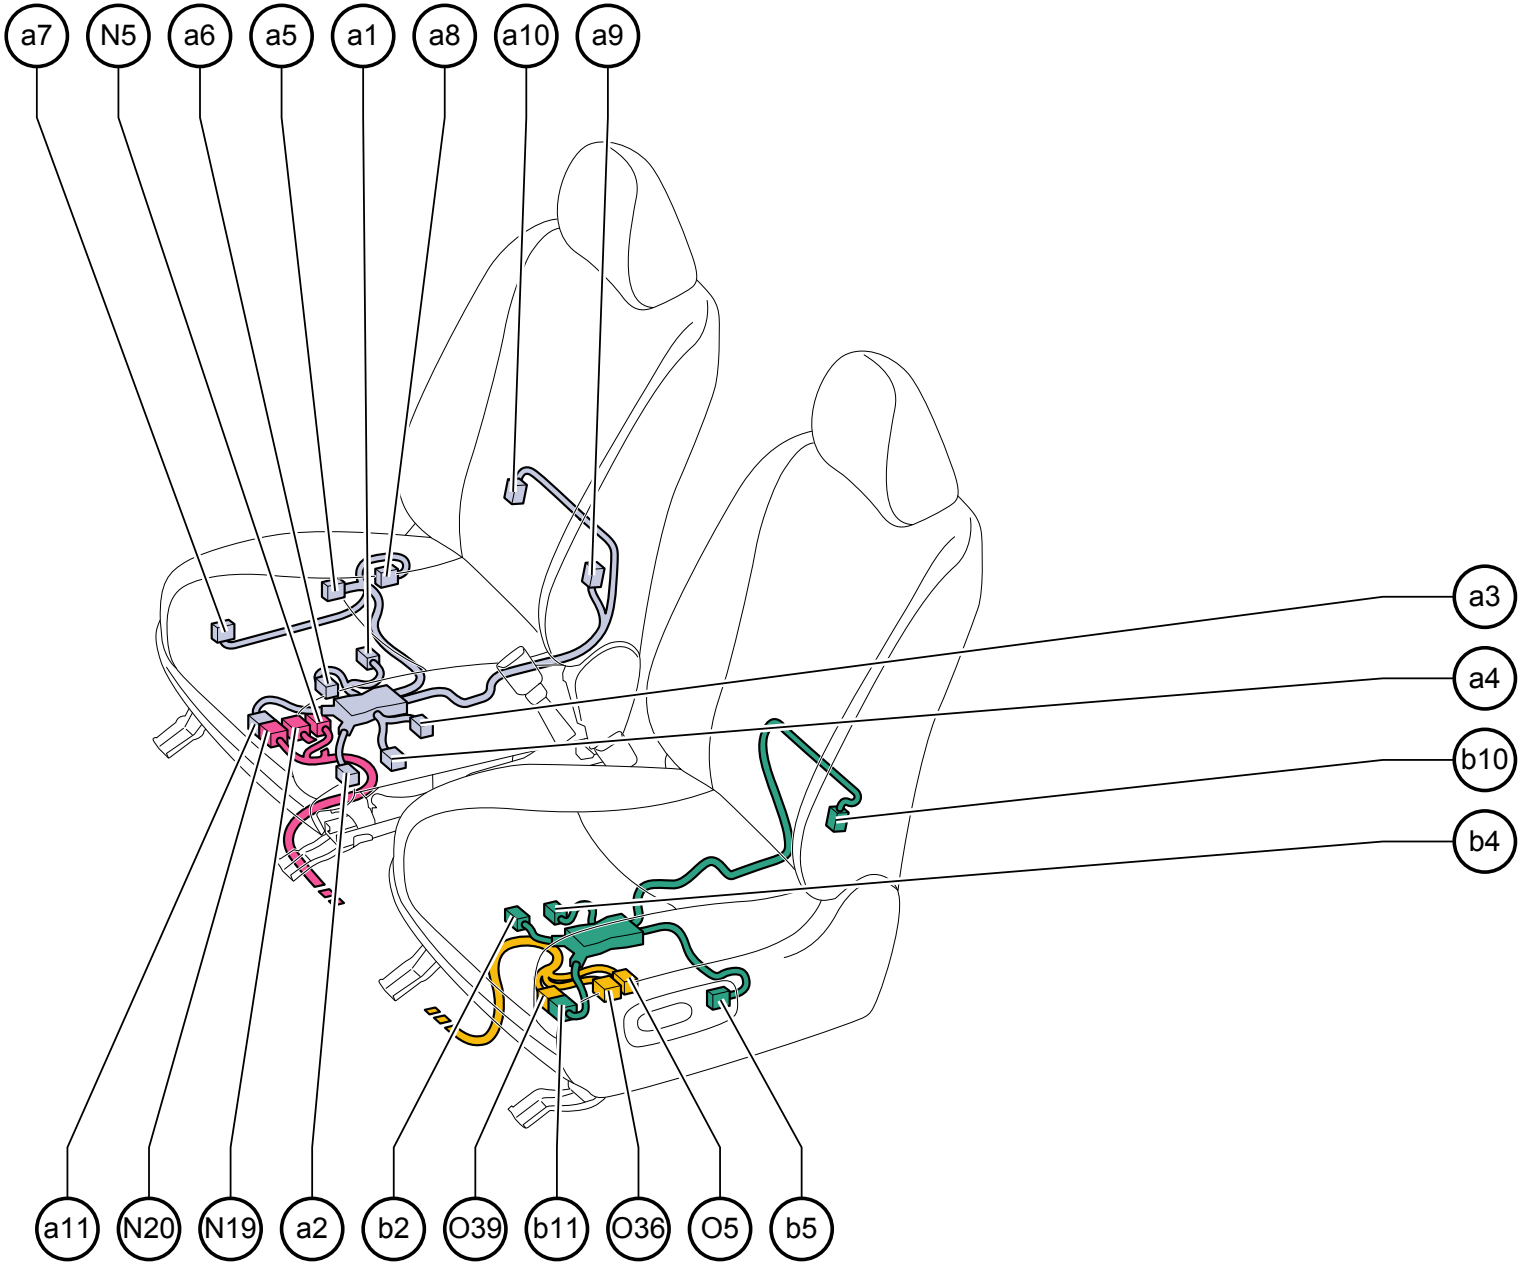

N 19
White

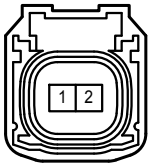


N 20
White

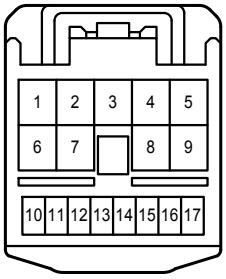


O 5
Yellow




O 36
White

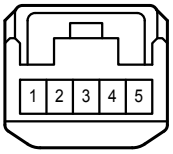


O 39
White

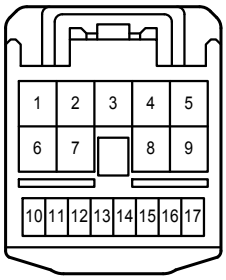


a 1
Black



a 2
Black




a 3
White




a 4
White




a 5
Black

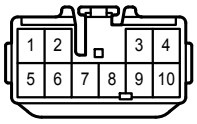


a 6
White




a 7
White

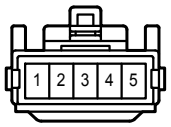


a 8
White

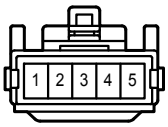


a 9
White




a 10
Black



a 11
White

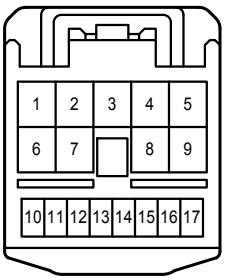


b 2
Black




b 4
White



b 5
Black

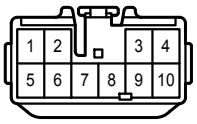

b 10
Black



b 11
White

