





(BAT)
10A
DOME
(IG)
7. 5A
GAUGE
NO. 2
(BAT)
10A
ECU–B (*6)
10A
ECU–B
NO. 1 (*7)
Integration Control and
Panel Assembly
Front Seat Inner Belt
Assembly RH (LHD)
Front Seat Inner Belt
Assembly LH (RHD)
Spiral Cable
Sub–Assembly
E16(A), (B)
Junction
Connector
E1
Combination Meter
B2
IG+
B
PBLT
P/SB
MSSL
LCD (ODO/TRIP)
(A/T Position)
Power Supply
Circuit
Speedometer
Tachometer
Fuel
Temp.
Micro Computer
+B(DOME)
IG2
Buzzer
CAN I/F
FR
FE
ES
WLVL
E3
E2
O9
Fuel Sender Gauge Assembly
Gauge
D46(A), E17(B)
Junction
Connector
D48
Junction
Connector
A29
Level Warning
Switch Assembly
A39
Junction
Connector
E16(A), (B)
Junction
Connector
D3
A6
E1


* 1 : w/ Multi Information Display
* 2 : w/ Navigation System
* 6 : Before Jul. 2010 Production
* 7 : From Jul. 2010 Production
* 8 : China

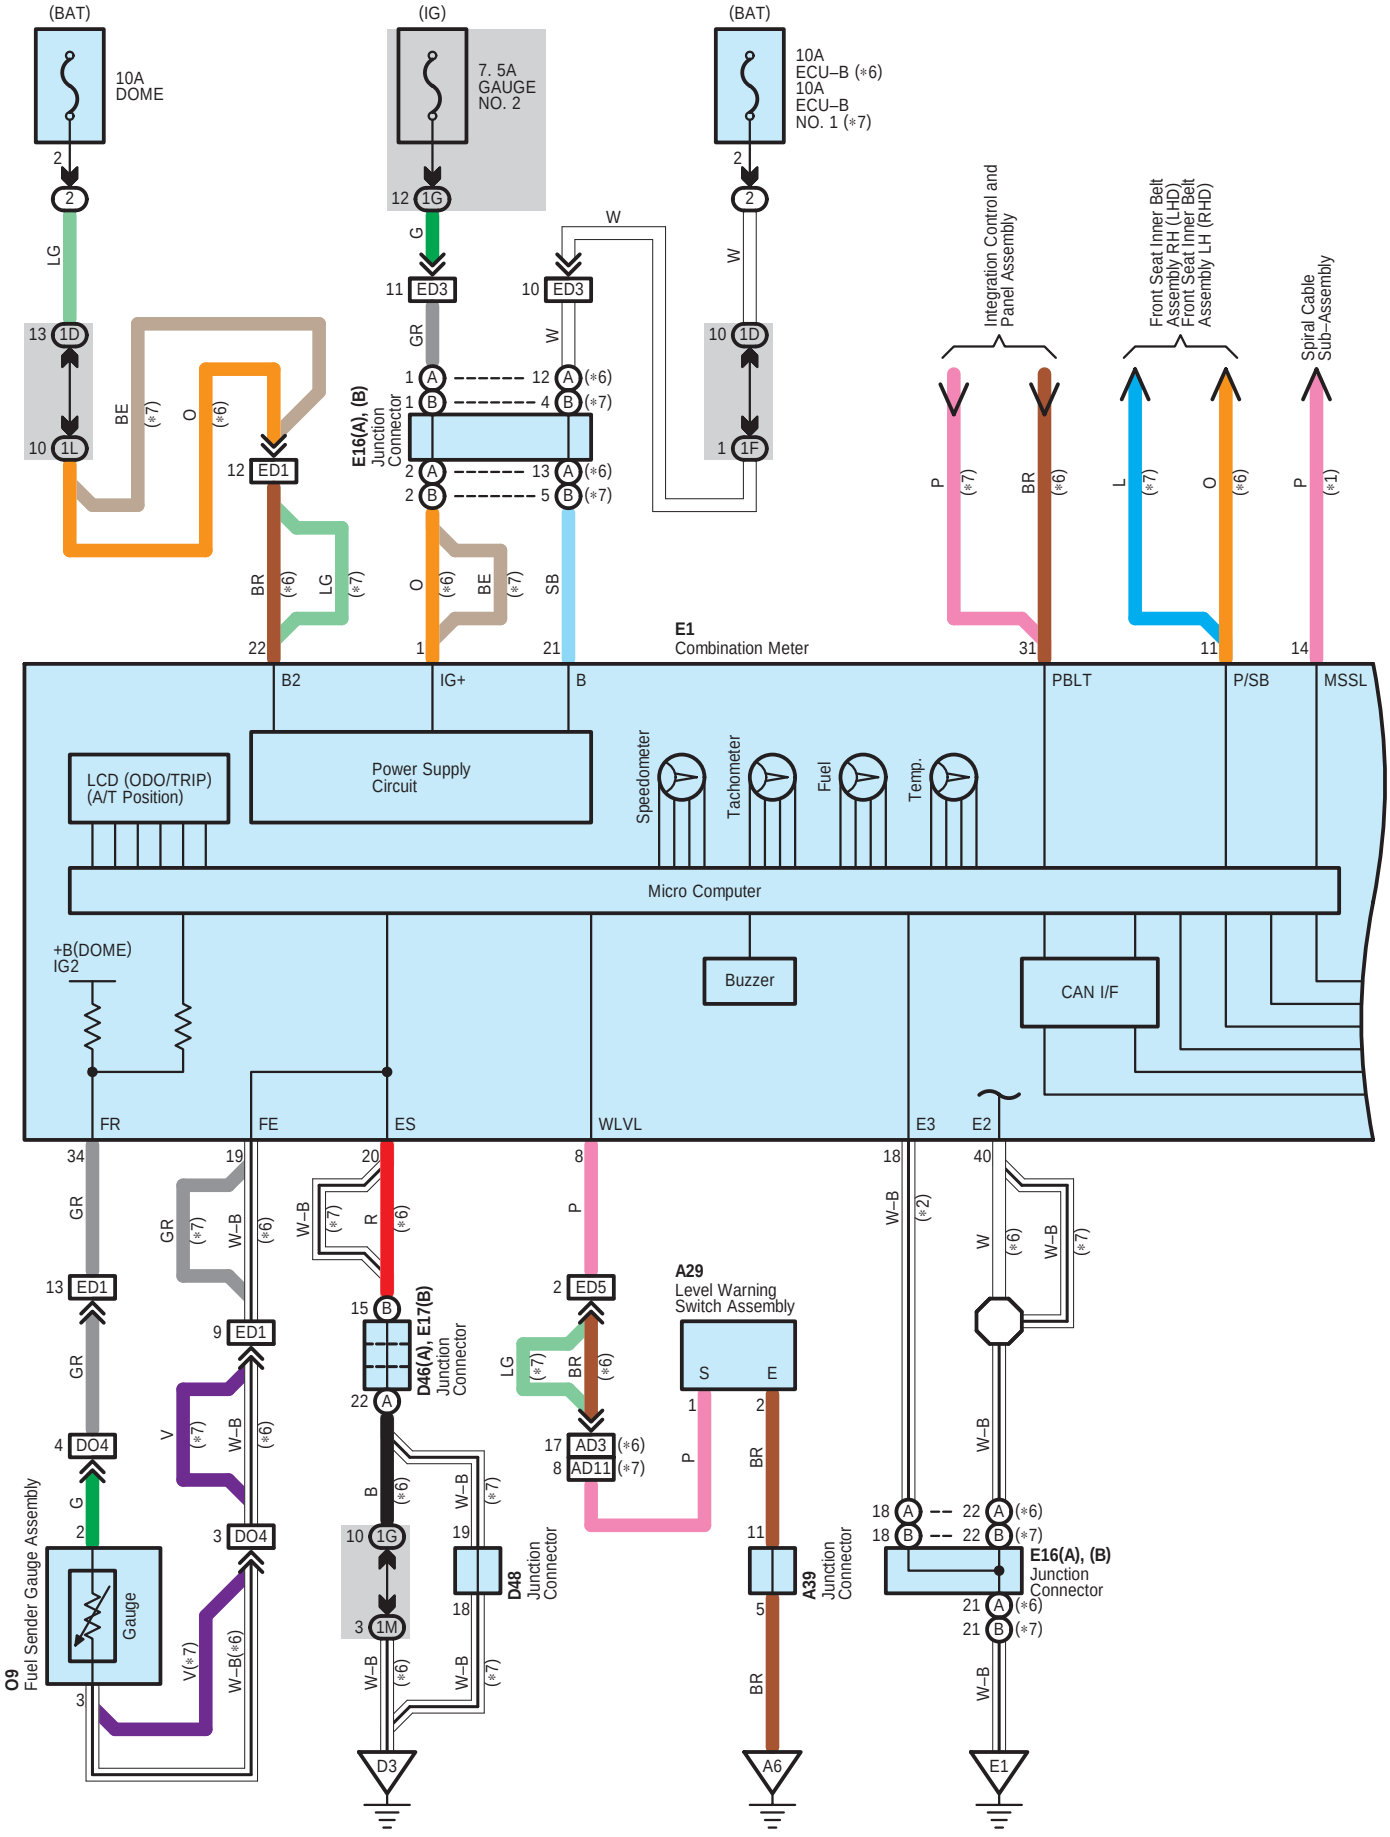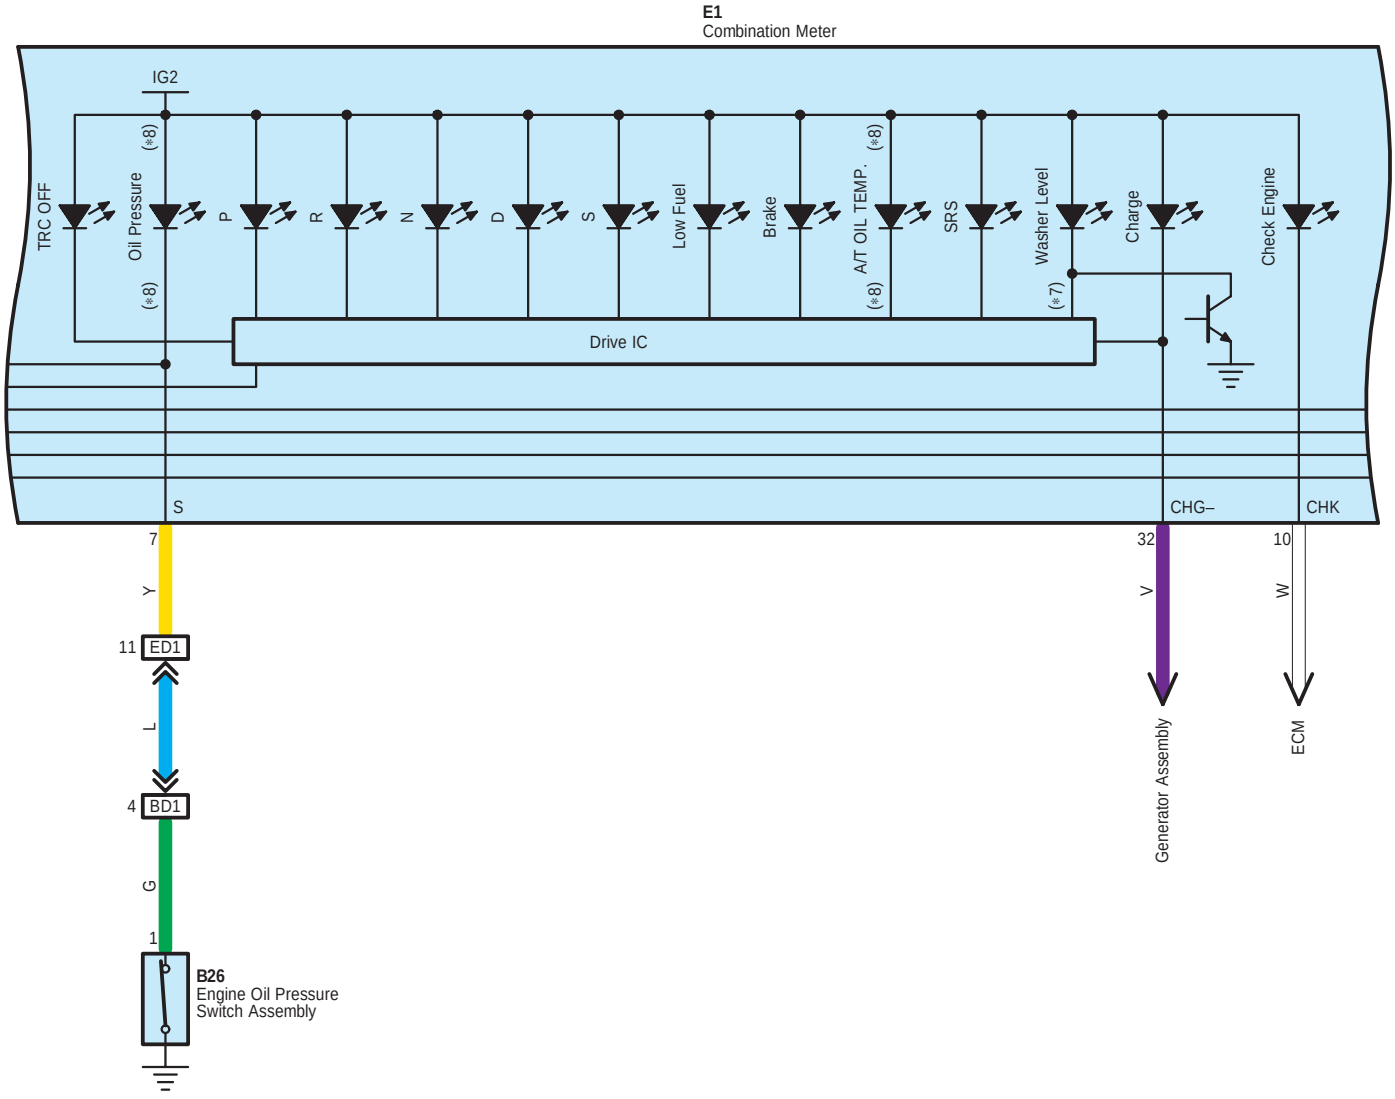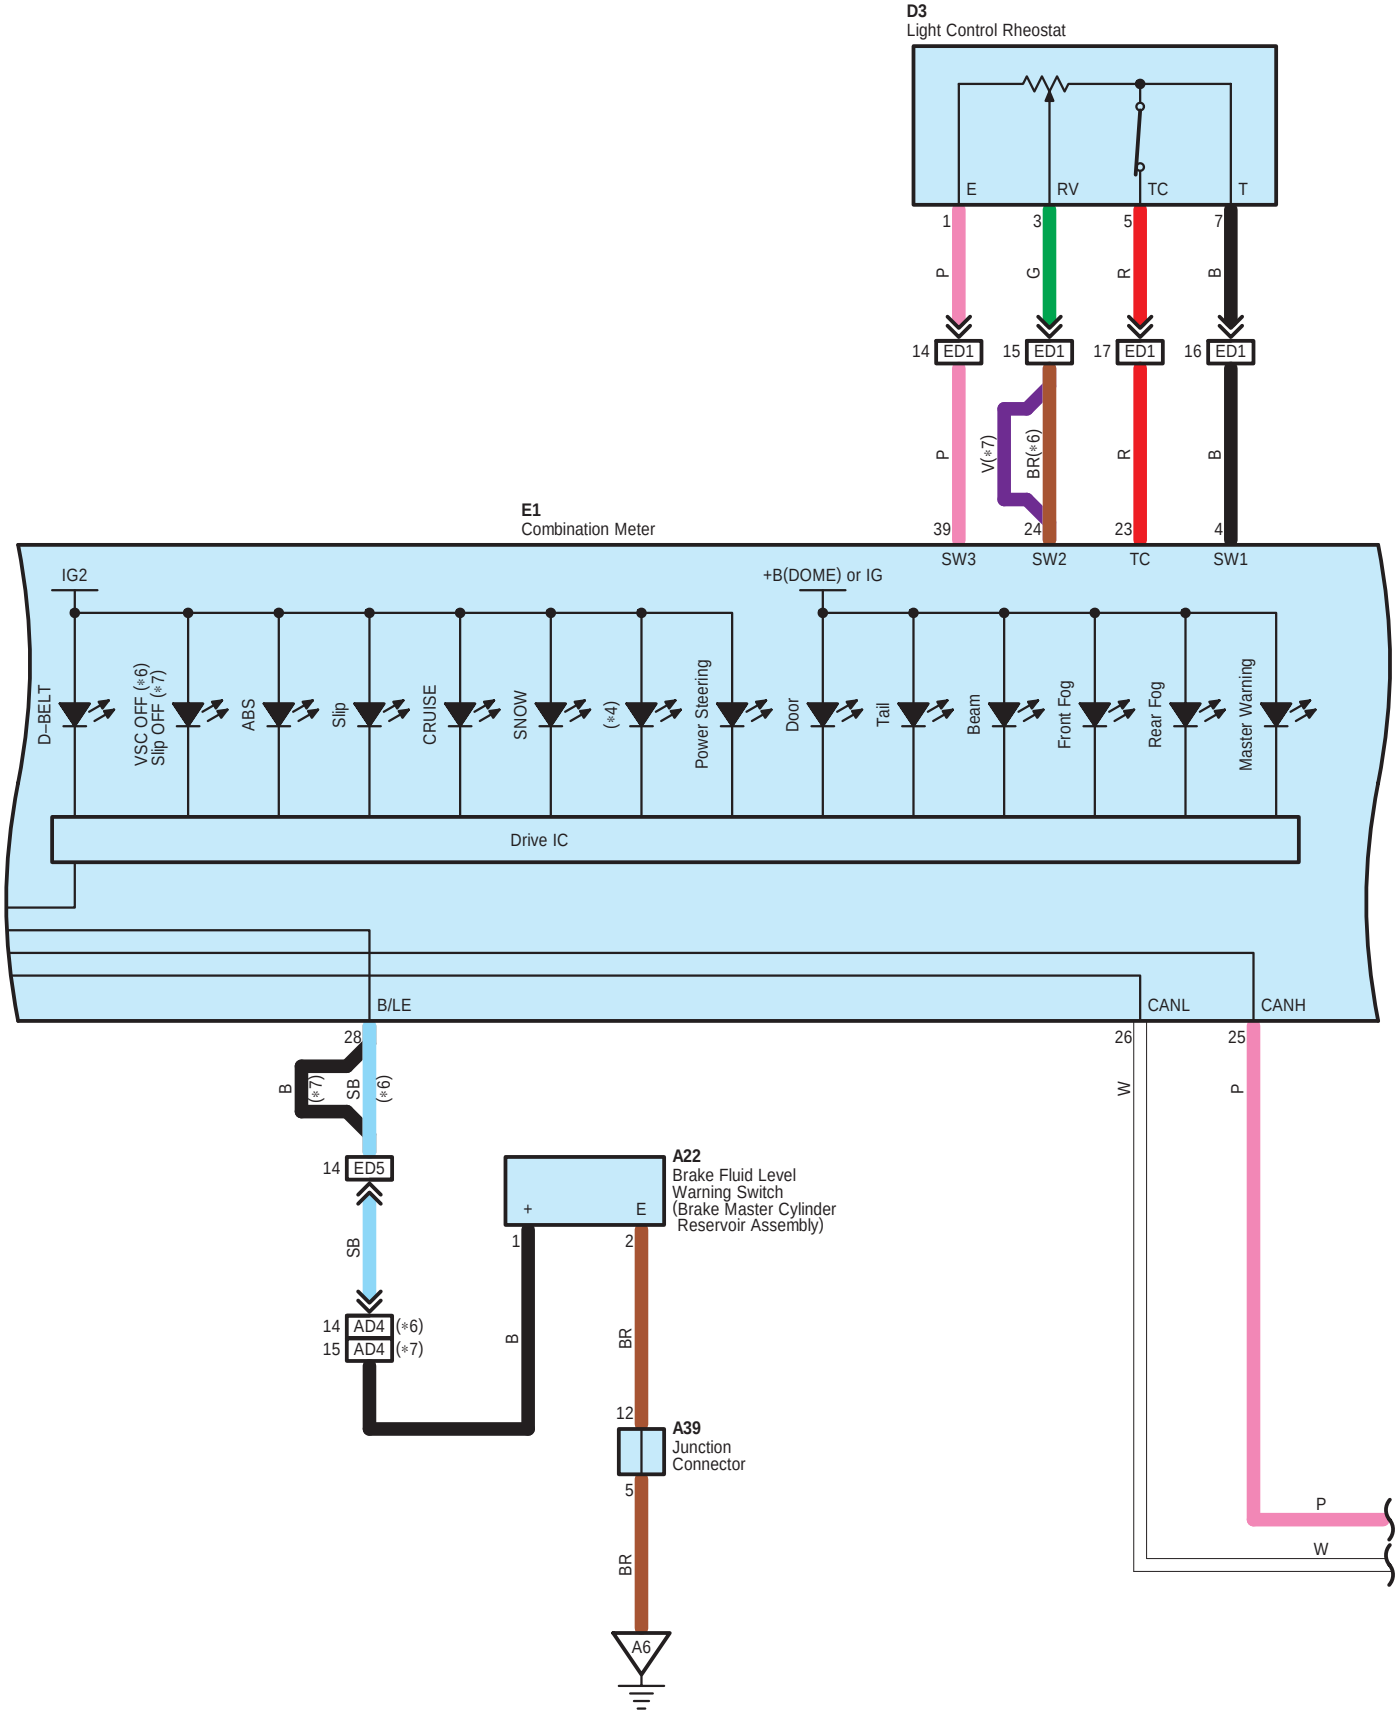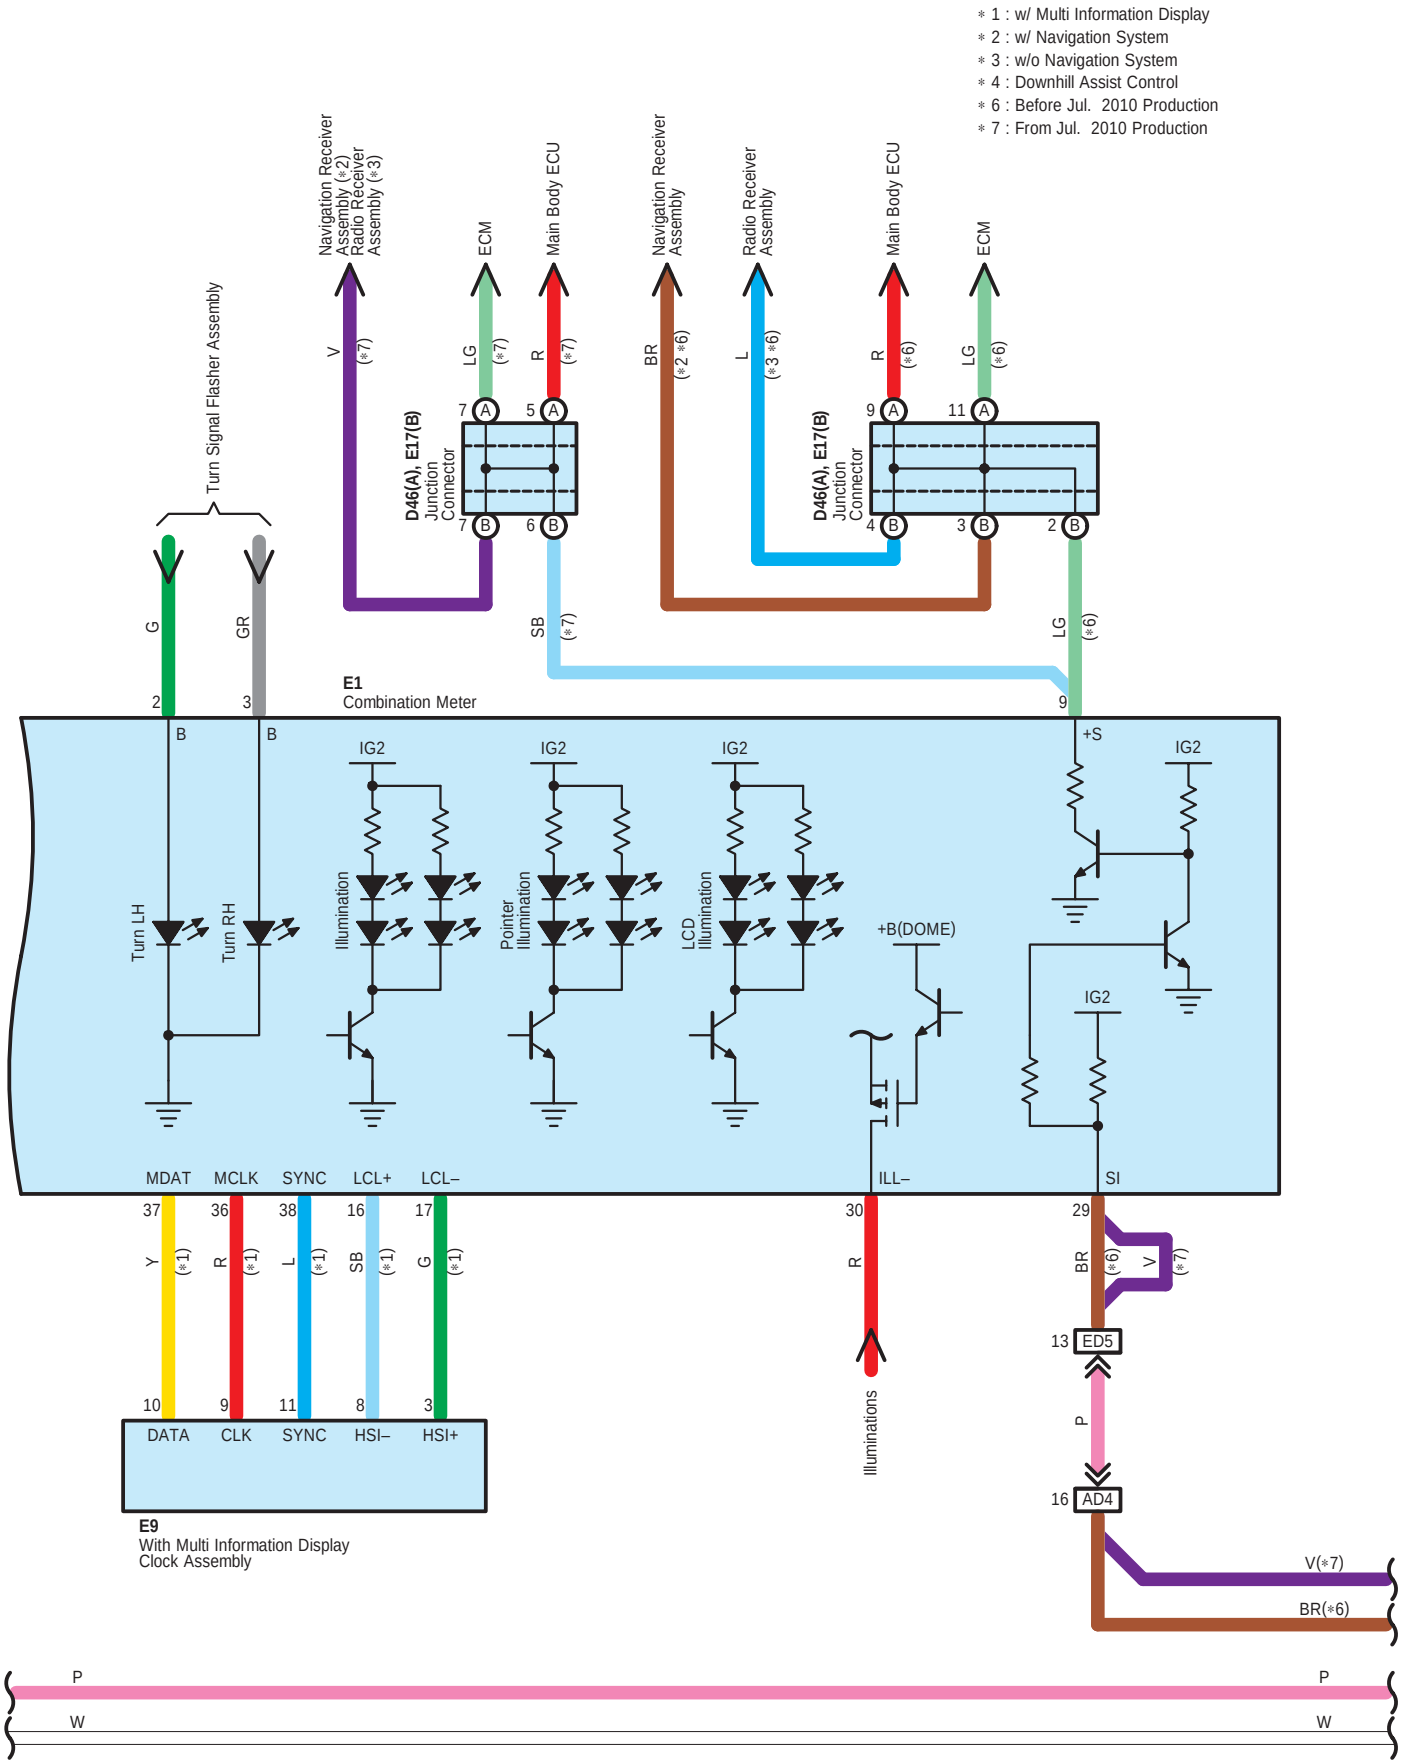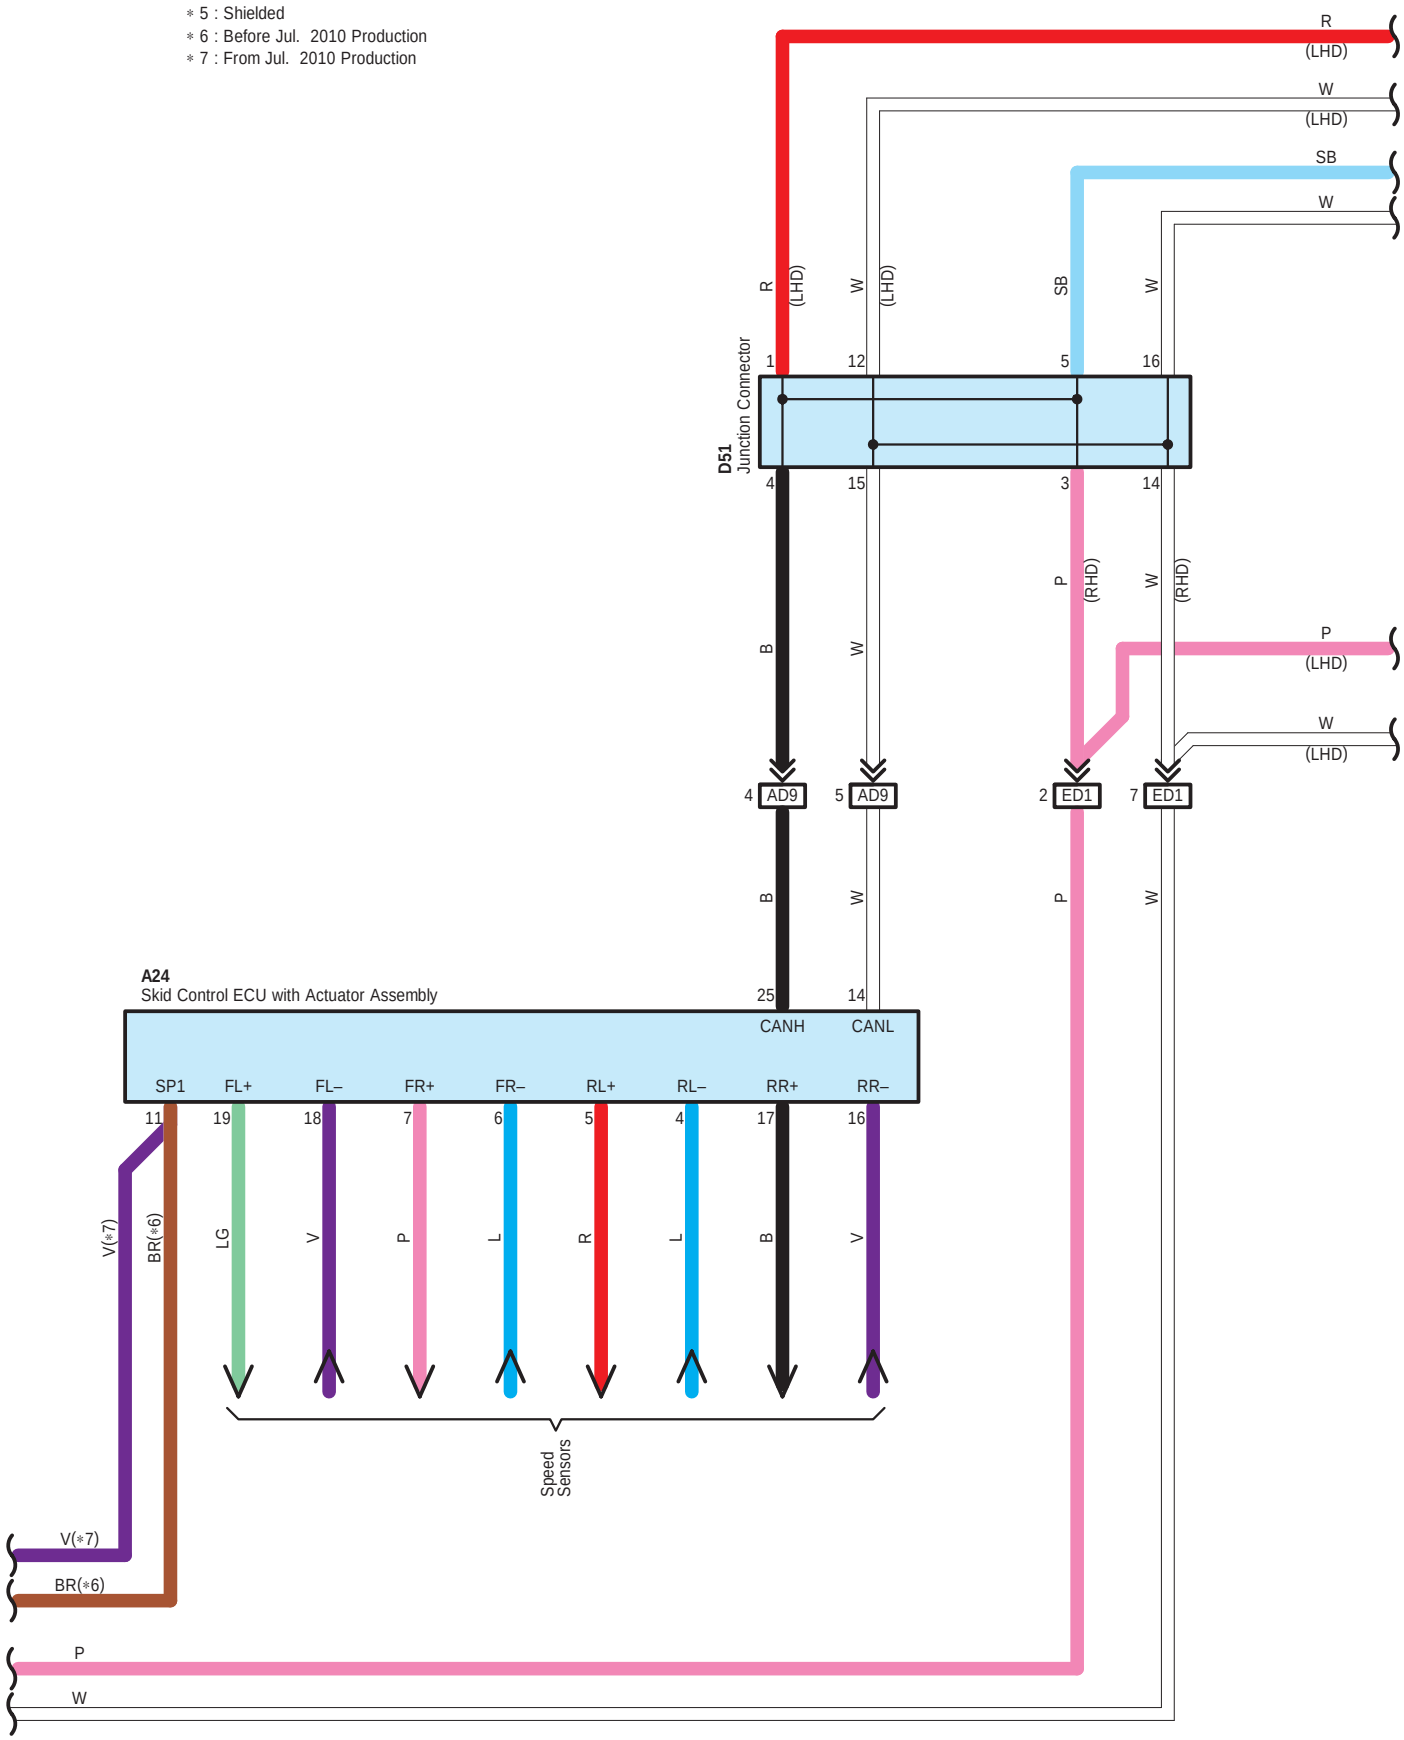


D3
Light Control Rheostat
E
RV
TC
T
1
3
5
7
P
G
R
B
14 ED1
15 ED1
17 ED1
16 ED1
P
V(*7)
BR(*6)
R
B
39
24
23
4
SW3
SW2
TC
SW1
E1
Combination Meter
IG2
+B(DOME) or IG
D-BELT
VSC OFF (*6)
Slip OFF (*7)
ABS
Slip
CRUISE
SNOW
(*4)
Power Steering
Door
Tail
Beam
Front Fog
Rear Fog
Master Warning
Drive IC
B/LE
CANL
CANH
28
26
25
B
SB
(*7)
(*6)
W
P
14 ED5
SB
14 AD4 (*6)
15 AD4 (*7)
B
A22
Brake Fluid Level
Warning Switch
(Brake Master Cylinder
Reservoir Assembly)
+
E
1
2
BR
12
A39
Junction
Connector
5
BR
A6
P
W


∗1 : w/ Multi Information Display
∗2 : w/ Navigation System
∗3 : w/o Navigation System
∗4 : Downhill Assist Control
∗6 : Before Jul. 2010 Production
∗7 : From Jul. 2010 Production
Navigation Receiver Assembly (∗2)
Radio Receiver Assembly (∗3)
ECM
Main Body ECU
Navigation Receiver Assembly
Radio Receiver Assembly
Main Body ECU
ECM
Turn Signal Flasher Assembly
D46(A), E17(B) Junction Connector
D46(A), E17(B) Junction Connector
E1
Combination Meter
IG2
+S
+B(DOME)
Turn LH
Turn RH
Illumination
Pointer Illumination
LCD Illumination
MDAT
MCLK
SYNC
LCL+
LCL–
ILL–
SI
DATA
CLK
SYNC
HSI–
HSI+
E9
With Multi Information Display
Clock Assembly
Illuminations
ED5
AD4
V(∗7)
BR(∗6)
P
W


* 5 : Shielded
* 6 : Before Jul. 2010 Production
* 7 : From Jul. 2010 Production
R (LHD)
W (LHD)
SB
W
D51
Junction Connector
1
12
5
16
4
15
3
14
B
W
P (RHD)
W (RHD)
P (LHD)
W (LHD)
4 AD9
5 AD9
2 ED1
7 ED1
A24
Skid Control ECU with Actuator Assembly
25
14
CANH
CANL
SP1
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
11
19
18
7
6
5
4
17
16
V(*7)
BR(*6)
LG
V
P
L
R
L
B
V
Speed Sensors
V(*7)
BR(*6)
P
W

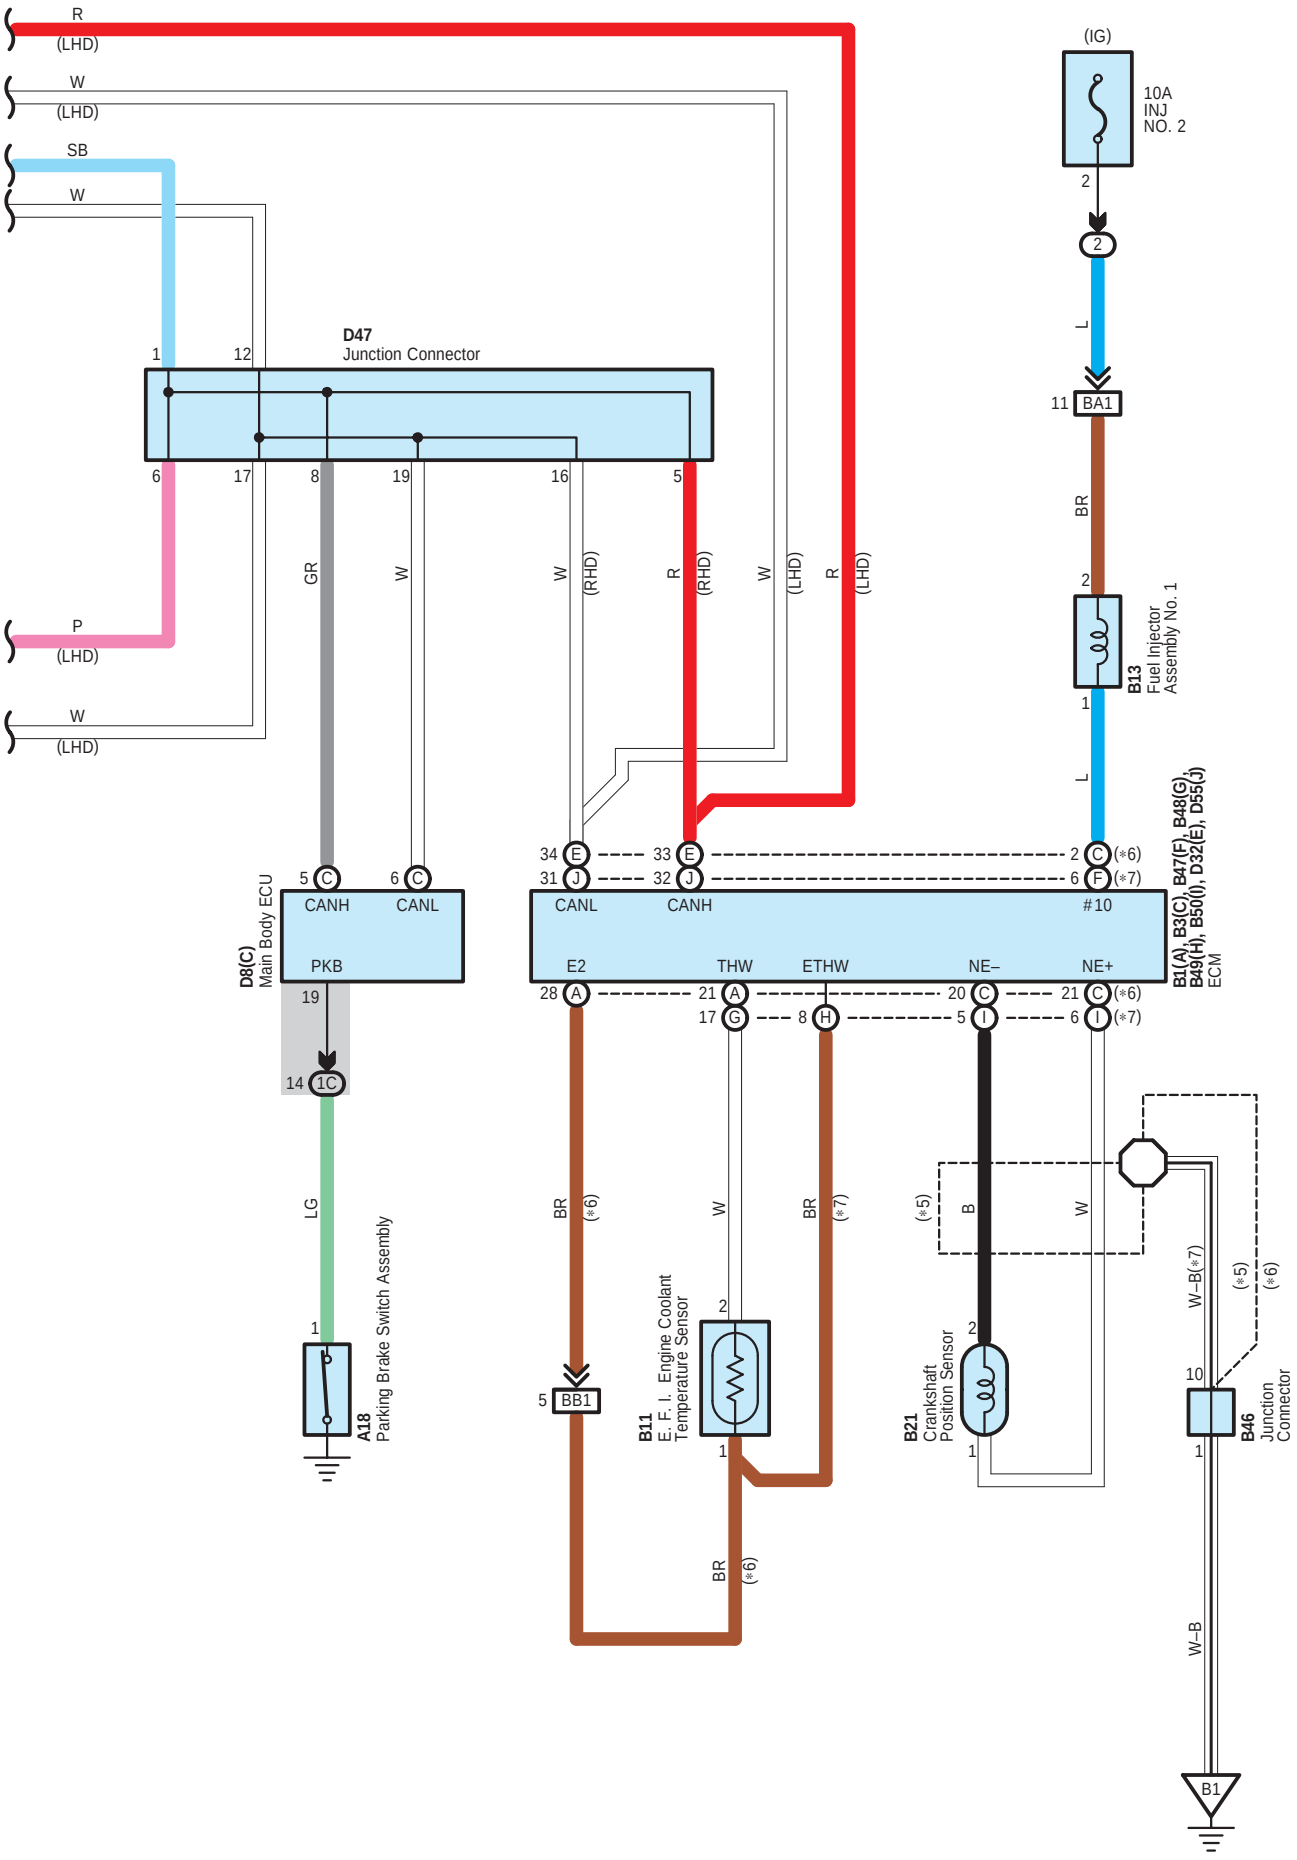
R
(LHD)
W
(LHD)
SB
W
P
(LHD)
W
(LHD)
D47
Junction Connector
1
12
6
17
8
19
16
5
GR
W
W
(RHD)
R
(RHD)
W
(LHD)
R
(LHD)
(IG)
10A
INJ
NO. 2
2
2
L
11
BA1
BR
2
B13
Fuel Injector
Assembly No. 1
1
L
D8(C)
Main Body ECU
5
C
6
C
CANH
CANL
PKB
19
14
1C
LG
1
A18
Parking Brake Switch Assembly
34
E
33
E
2
C
(*6)
31
J
32
J
6
F
(*7)
CANL
CANH
#10
B1(A), B3(C), B47(F), B48(G),
B49(H), B50(I), D32(E), D55(J)
ECM
E2
THW
ETHW
NE–
NE+
28
A
21
A
20
C
21
C
(*6)
17
G
8
H
5
I
6
I
(*7)
BR
(*6)
5
BB1
W
BR
(*7)
2
B11
E. F. I. Engine Coolant
Temperature Sensor
1
BR
(*6)
(*5)
B
W
2
B21
Crankshaft
Position Sensor
1
W–B(*7)
(*5)
(*6)
10
B46
Junction
Connector
1
W–B
B1


A 18
Black



A 22
Gray




A 24
Black

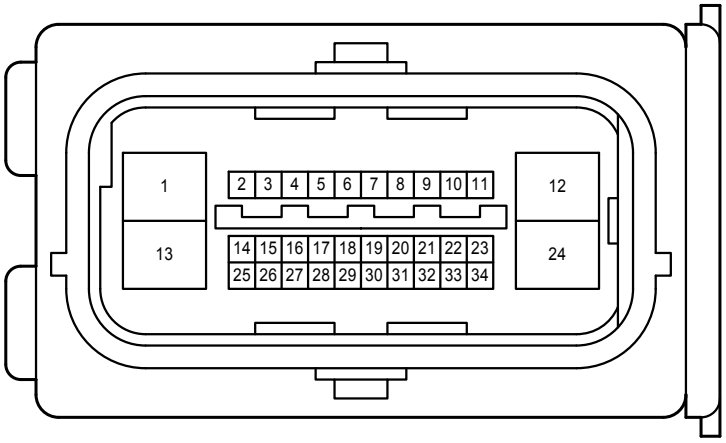


A 29
White




A 39
White

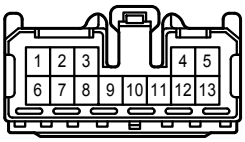

B 1
White

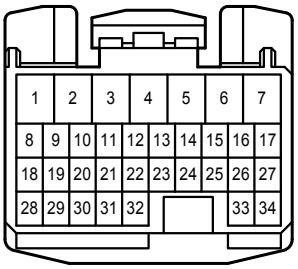


B 3
White

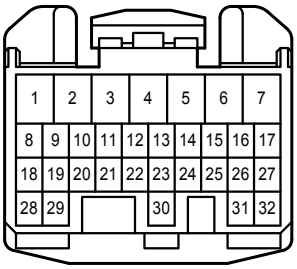


B 11
Gray



B 13
Brown




B 21
Black

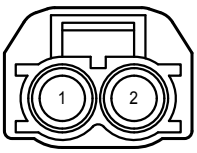


B 26
Gray




B 46
Black

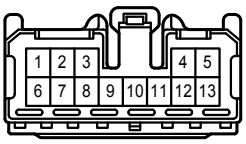


B 47
White

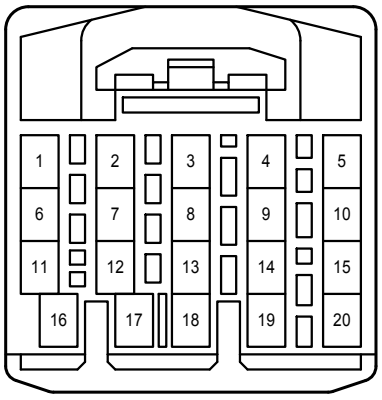


B 48
White

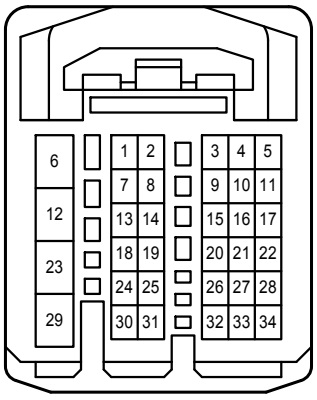


B 49
White

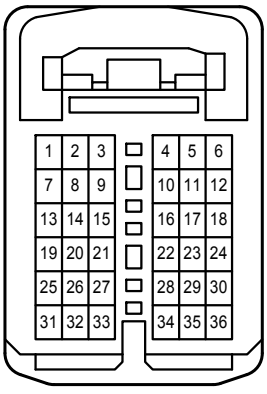


B 50
White

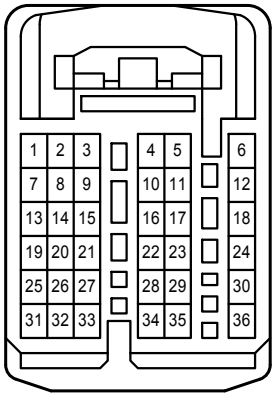


D 3
Gray

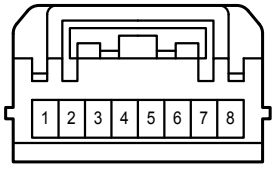


D 8
White

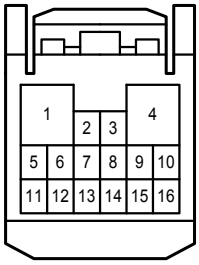


D 32
White

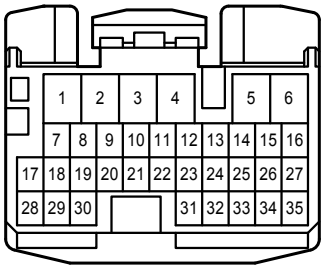


D 46
White

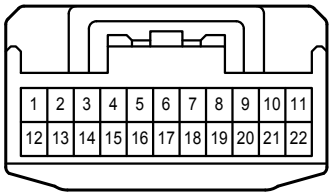


D 47
Gray

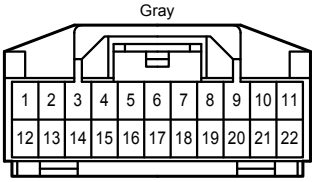


D 48
White

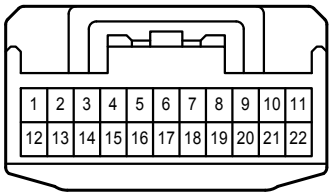


D 51
Gray

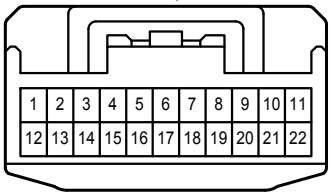


D 55
White

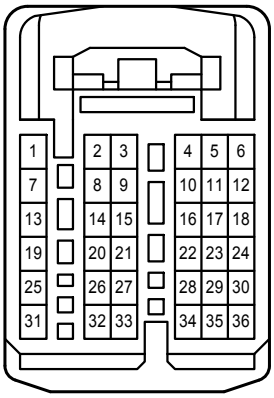


E 1
White

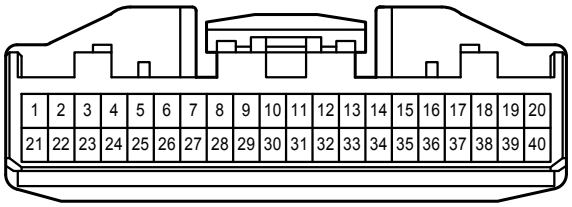


E 9
White

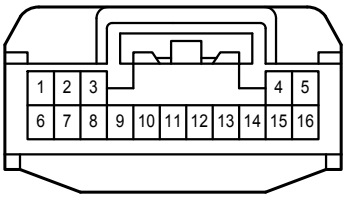

E 16
White

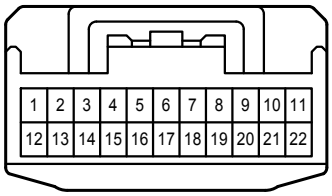


E 17
White

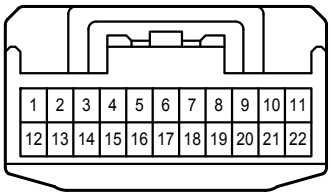


O 9
White




1C
White

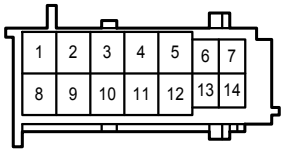


1D
White

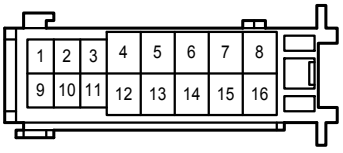


1F
White

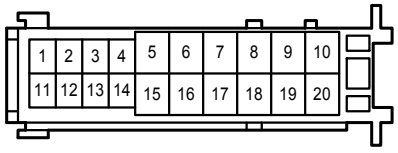


1G
White

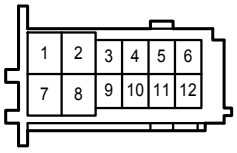


1L
White

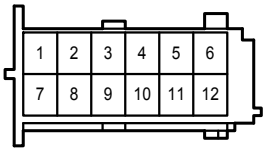


1M
White

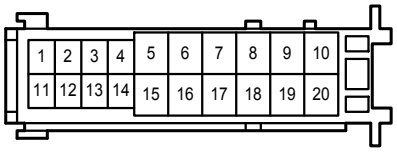


AD3
Blue

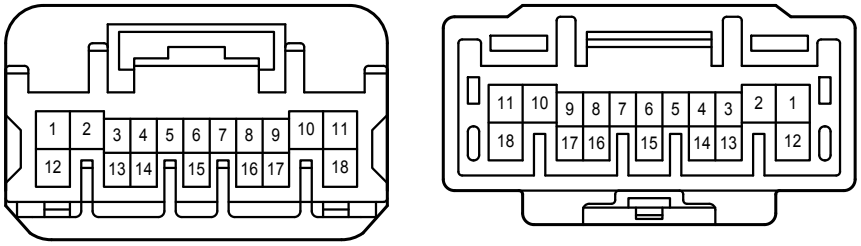


AD4
Gray

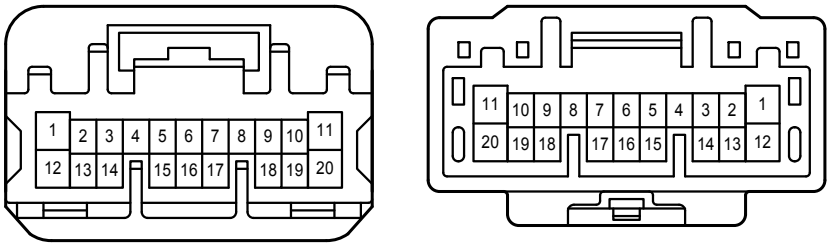


AD9
Gray

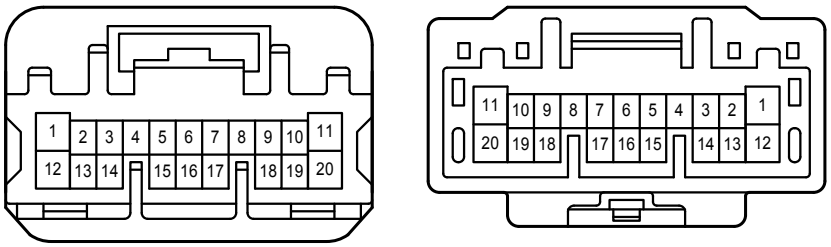


AD11
Blue

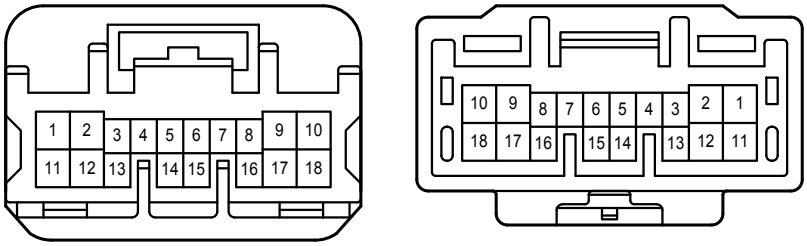


BA1
White

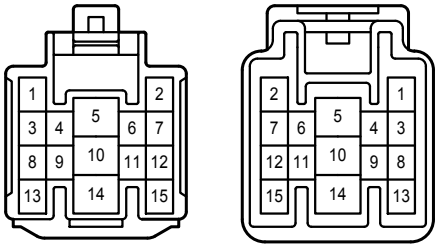


BB1
White

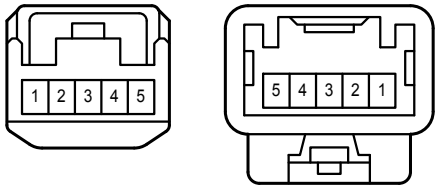


BD1
Gray

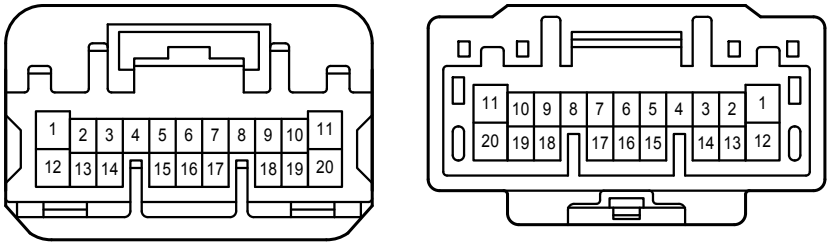

DO4
White

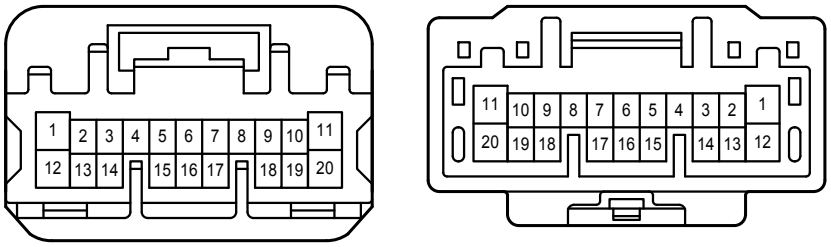

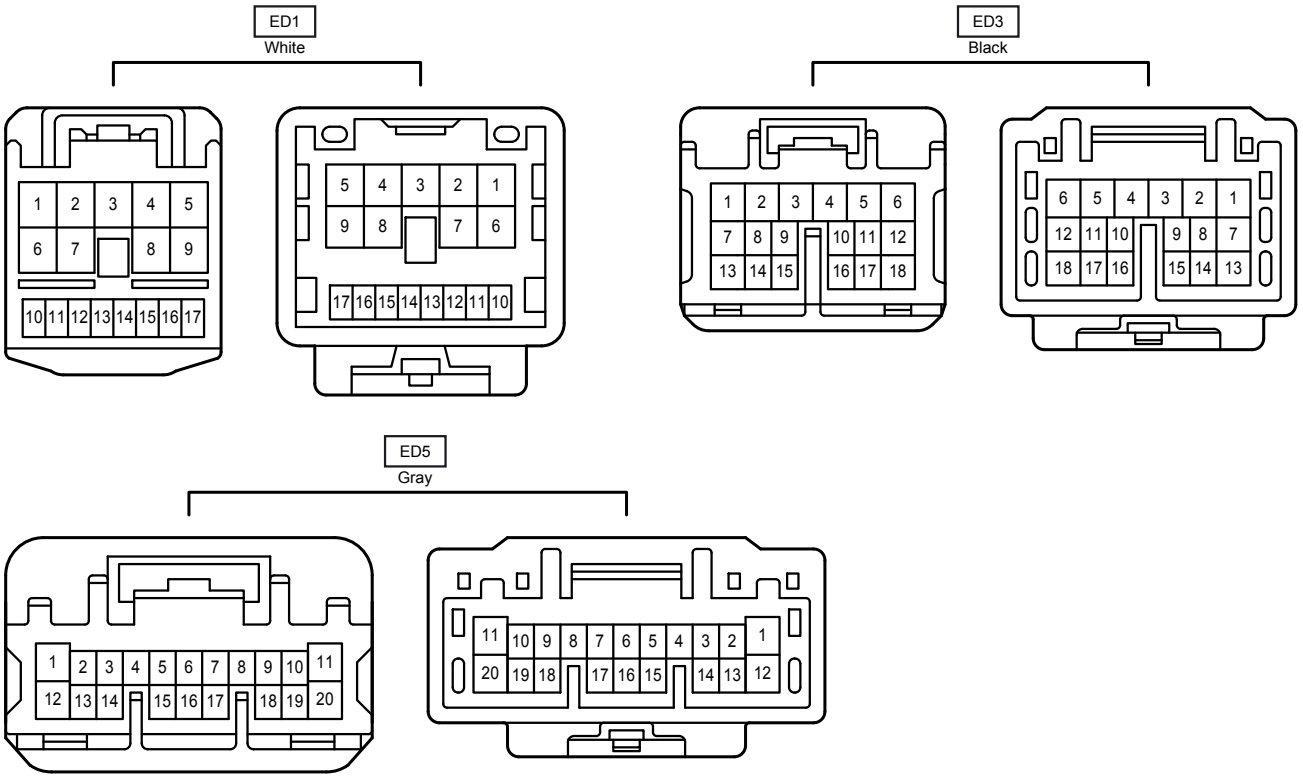
ED1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10
ED3
Black
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13
ED5
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12