
■AVC-LAN

1. General

The AVC-LAN is used to transmit data only between the navigation receiver assembly and rear display.


- The AVC-LAN is used only on the models for Australia.

2. System Diagram

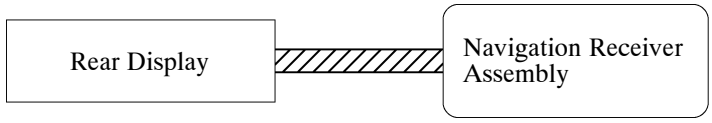

06K0BE02C

3. Layout of Main Components

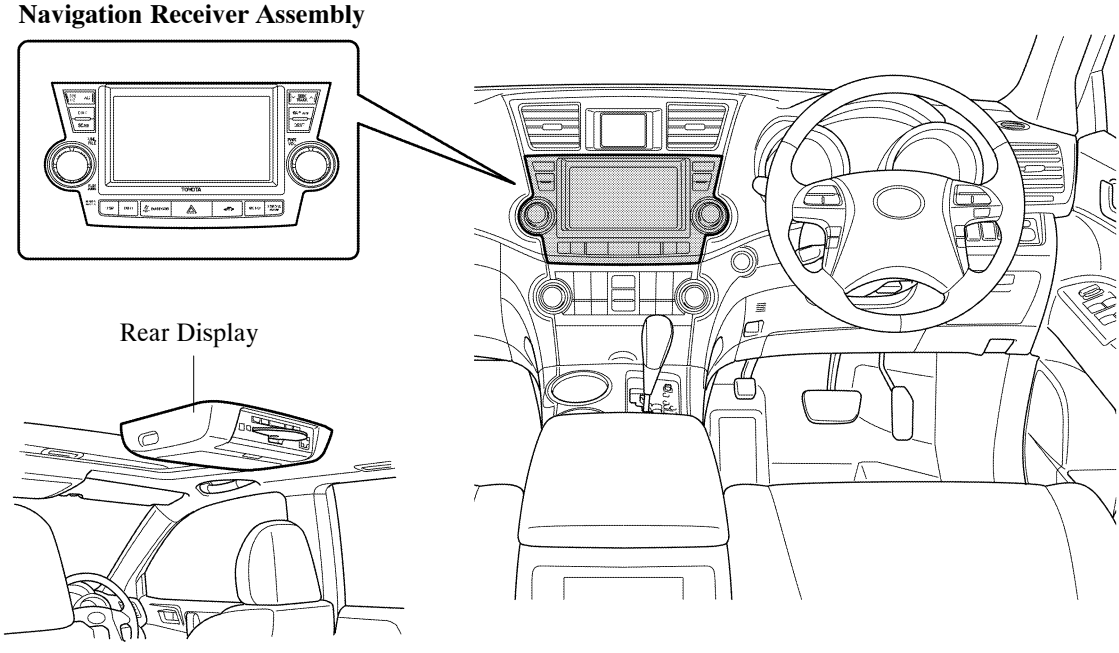

06K0BE12Z

4. Diagnosis

If a malfunction occurs in the AVC-LAN communication bus, the navigation receiver assembly stores a DTC (Diagnostic Trouble Code) in its memory.

- The DTCs of models having the navigation with AV system can be read on the diagnosis menu display on the navigation receiver assembly.

For details, see the HIGHLANDER Repair Manual (Pub. No. RM06K0E).