■ILLUMINATED ENTRY SYSTEM

1. General

The illuminated entry system has the following control functions:

Control	Outline	Lights that Operate
Actuation Area-linked*1	When the key enters any actuation area around the doors, the lights that operate turn on.	• Foot Lights*4 • Engine Switch Illumination • Personal Lights • Room Lamps
Door Control Transmitter-linked	When any door is unlocked using the door control transmitter, the lights that operate turn on.	• Key Illumination • Engine Switch Illumination*1 • Personal Lights • Room Lamps • Foot Lights*4
Door Open-linked	When any door is opened, the lights that operate turn on.	• Key Illumination • Engine Switch Illumination*1 • Personal Lights • Room Lamps • Door Courtesy Light • Foot Lights*4
Door Close-linked	When all doors are closed, the lights that operate turn off*2.	
Door Lock-linked	When all doors are locked, the operation lights turn off*3.	
Ignition/Engine*1 Switch-linked	When the power source is changed from OFF to ACC or IG-ON, the lights that operate turn off*3.	
	When the power source switch is changed from IG-ON to OFF, the lights that operate turn on.	• Personal Lights • Room Lamps
	When the power source switch is changed from OFF to ACC or IG-ON, the lights that operate turn on.	Console Illumination
Battery Saving	When no changes occur in the condition of the doors for 20 minutes, these lights turn off.	• Key Illumination • Engine Switch Illumination*1 • Personal Lights • Room Lamps • Door Courtesy Light • Foot Lights*4


*1: Models with Smart Entry and Start System

*2: Illuminates for approximately 15 seconds, fades out over approximately 3 seconds and goes off. Illumination time can be selected from 15, 30, and 7.5 seconds using the customize function. For details, see page BE-21.

*3: Stops the illumination, starts to fade out immediately (fades out over approximately 3 seconds) and goes off.

*4: Models for China

2. System Diagram

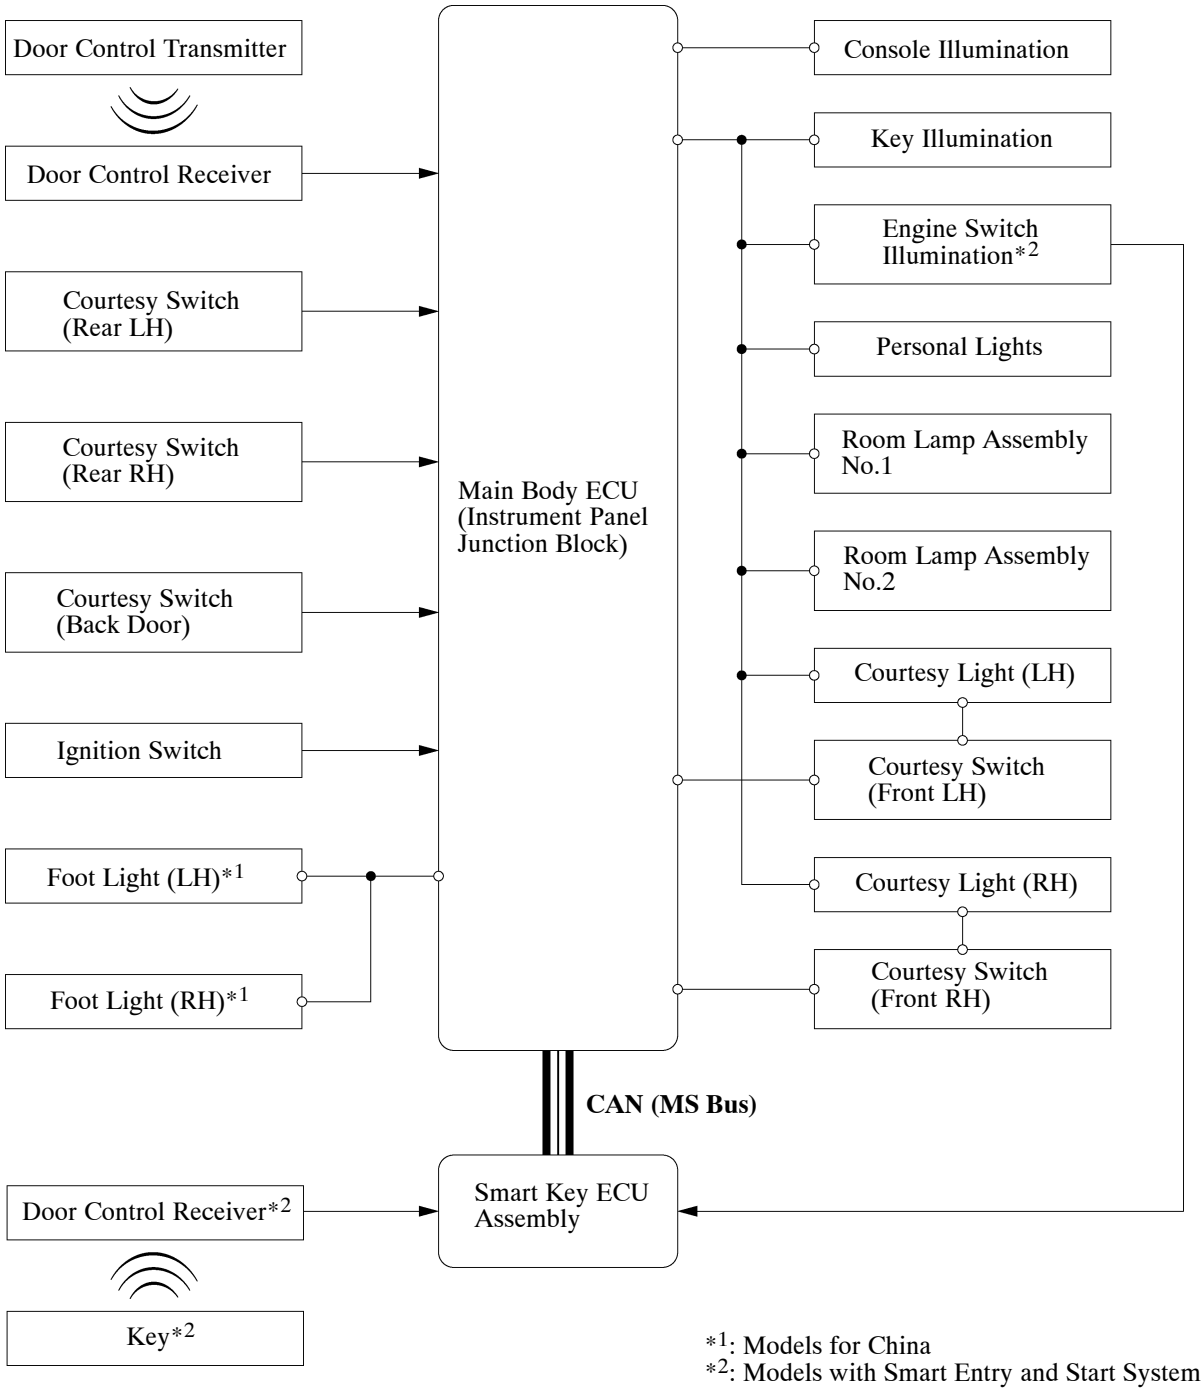


*1: Models for China
*2: Models with Smart Entry and Start System


06J0BE47C

3. Layout of Main Components

Roof Console Box Assembly

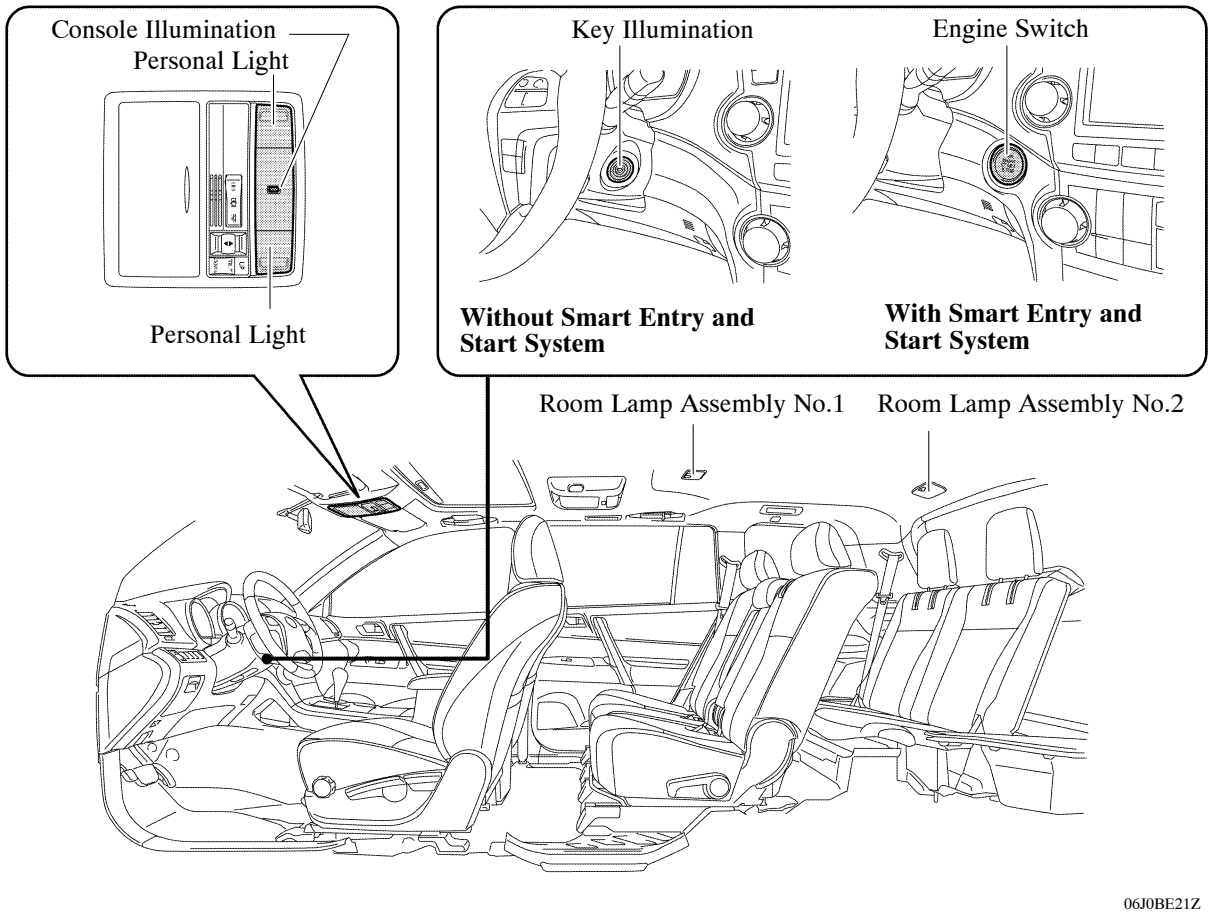

06J0BE21Z

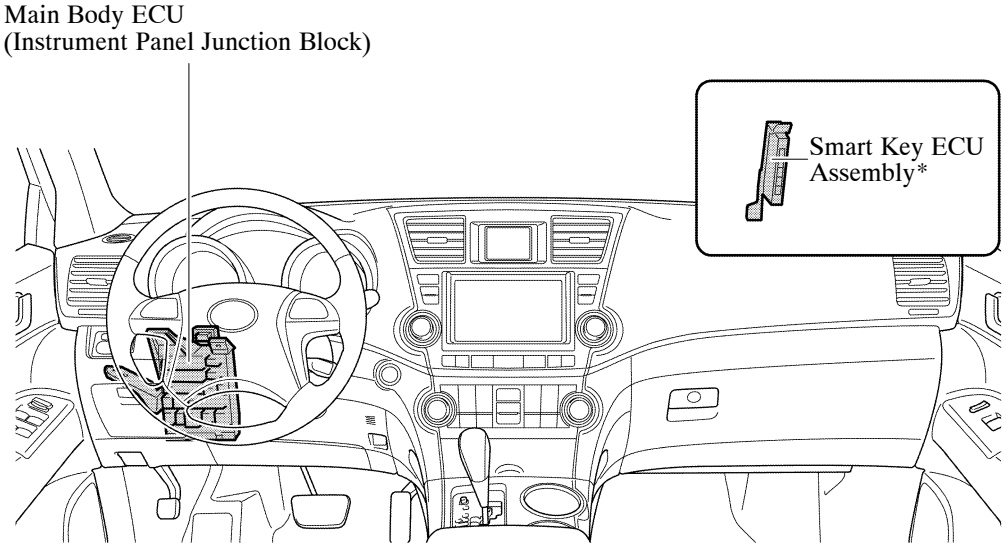


06K0BE07Z

Models for China

*: Refer to the Service Bulletin for the illustration position of the part.


BE

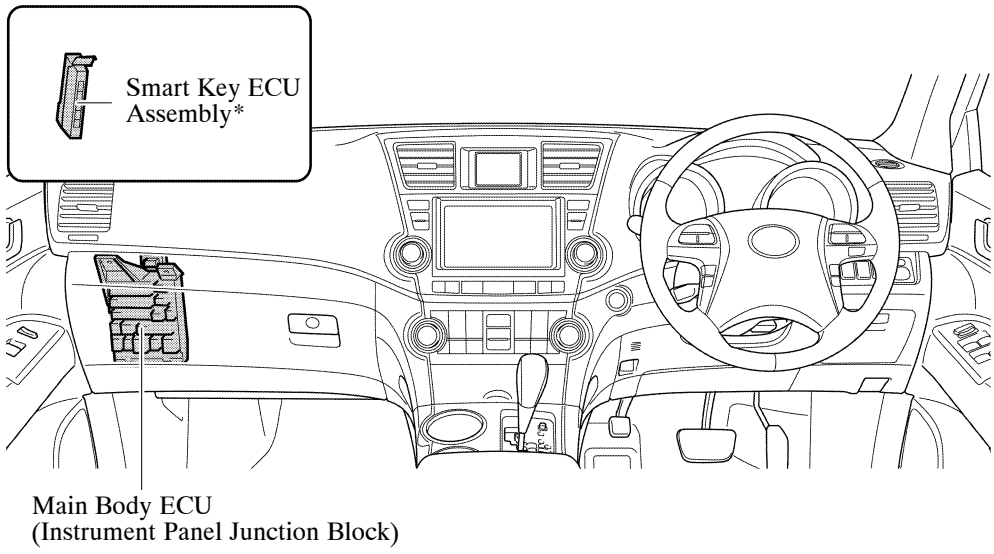

06K0BE08Z

Models for Australia

*: Refer to the Service Bulletin for the illustration position of the part.

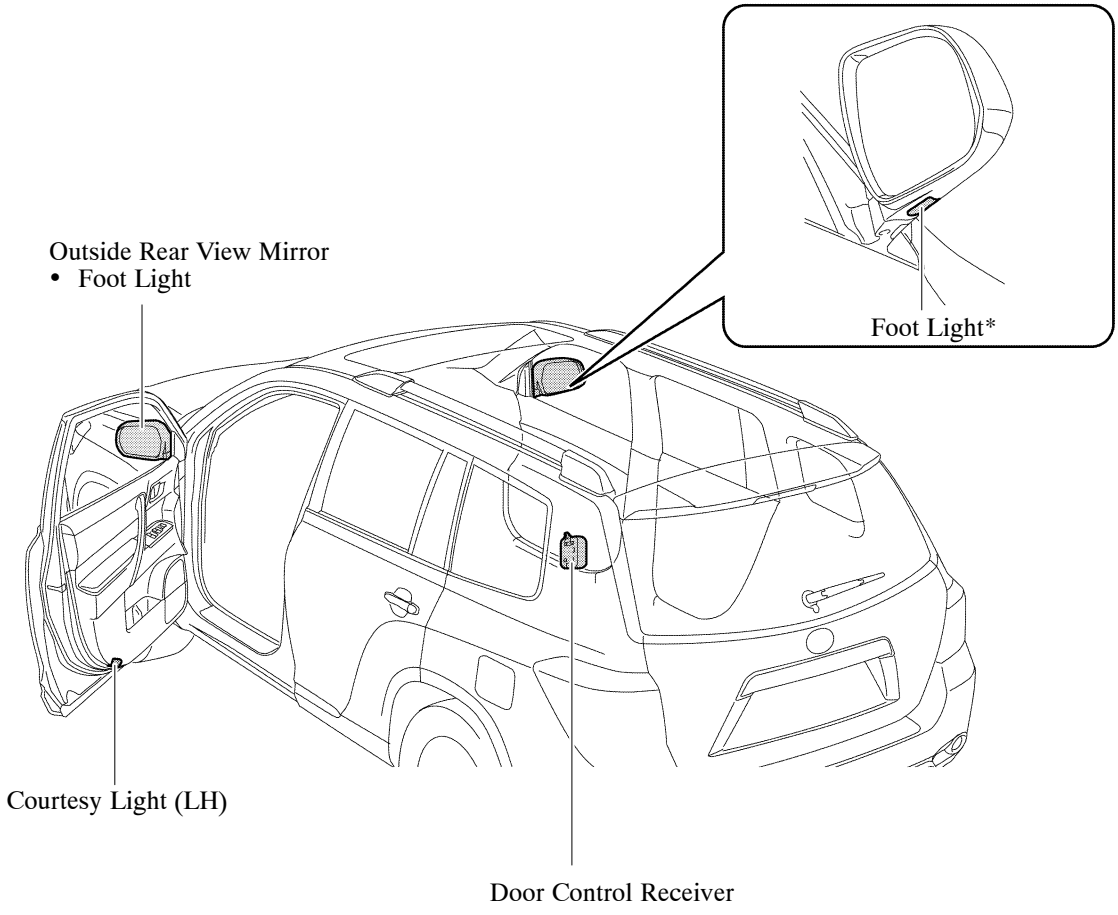

06J0BE22Z

*: Models for China only